



Made in USA

SC2000/SC2001

Non-Programmable Electronic Thermostats



- Controls Single Stage Heating/ Cooling Systems
- Single Stage Heat Pump Systems
- Compatible with Gas, Oil or Electric Systems
- Millivolt and Hydronic (water or steam) System Compatible
- Mercury-Free, Environmentally Safe

Installation, Operation & Application Guide

For more information on our complete range of American-made products – plus wiring diagrams, troubleshooting tips and more, visit us at www.icmcontrols.com

ICMTM
CONTROLS


Table of Contents

Parts Diagram	1
Specifications	2
Important Safety Information	2
Package Contents/Tools Required.....	3
General Description.....	3
To Remove Existing Thermostat	4
To Install Thermostat.....	4
Installing and Changing Batteries.....	6
Replacing Wiring Labels	6
SC2000 Wiring Diagrams.....	7-10
SC2001 Wiring Diagrams.....	11-13
A Quick Test.....	14
Operation	15
Troubleshooting	16


CAUTION!: *This thermostat should be installed by trained technicians only. Adhere to all local and national codes. Disconnect all power to the system before installing, removing, or cleaning.*

Parts Diagrams

SC2000

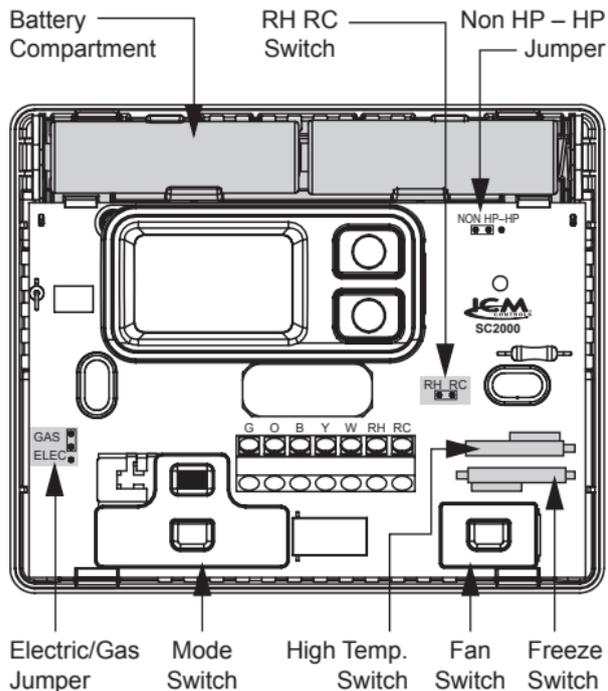

SC2001

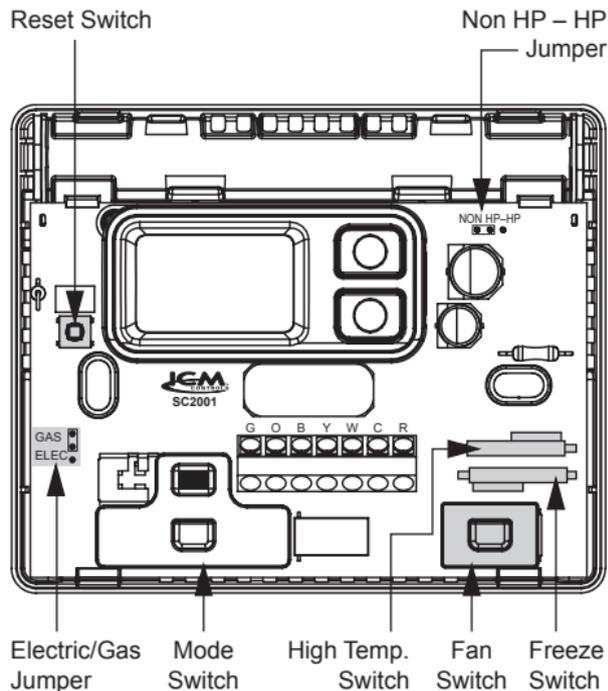

Specifications

SC2000

Input:

- **Voltage:** Millivolt to 30 VAC/VDC
- **DC Power:** 3 volts (2 "AA" alkaline batteries included)

Output:

- **Maximum:** 1 amp per terminal (3 amp total for all terminals)
- **Temperature control ranges:** 45°F to 90°F **Accuracy:** ± 1°F
- **Differential range:** 1°F to 3°F
- **System configurations:** Single-stage heat, single-stage cool or single-stage heat pump, gas, oil, electric
- **Terminations (SC2000):** RC, RH, W, Y, O, B, G
- **Terminations (SC2001):** R, W, Y, O, B, G, C

SC2001

Input:

- **Voltage:** 18-30 VAC

Room temperature
setpoint

Room temperature

Low battery signal

Temperature
differential setting



Important Safety Information

- Always turn off the thermostat before installing, removing, cleaning, or servicing; turn off the power at the main power source by unscrewing fuse or switching off circuit breaker
- Do not switch to "Cool" if room temperature is below 50°F; this could damage your A/C system and cause injury
- Do not install on voltages higher than 30 VAC
- All wiring must conform to local and national building and electrical codes and ordinances
- While cleaning, do not get soap directly on thermostat switches or LCD readout; only use a damp cloth with a mild soap to wipe outside of thermostat cover

Package Contents/Tools Required

Package includes: SimpleComfort® non-programmable thermostat on base, thermostat cover, wiring labels, screws and wall anchors, batteries (if applicable), Installation, Operation and Application Guide.

Tools required for installation: Drill with 3/16" bit, hammer, screwdriver.

General Description

- The SimpleComfort® thermostat is a **digital, mercury-free, non-programmable, electronic thermostat**
- Compatible with single-stage **heating systems, heating/cooling systems, and heat pump systems**; works with **gas, oil, or electric** systems
- Compatible as a **master thermostat** in zoned system applications
- **Freeze Protection Feature:** Protects pipes from freezing! If the room temperature drops to 40°F, the thermostat automatically turns on the heat; the thermostat must be in the Heat position; works even if the batteries are dead
- **Built-in Compressor Protection for Air Conditioners:** To protect the A/C's compressor, there is a 5-minute delay between the system turning off and the A/C starting
- **System Customization:** Three available **temperature differential settings**

To Remove Existing Thermostat



ELECTRICAL SHOCK HAZARD – Turn off power at the main service panel by removing the fuse or switching the appropriate circuit breaker to the OFF position before removing the existing thermostat.

1. Turn off power to the heating and cooling system by removing the fuse or switching off the appropriate circuit breaker.
2. Remove cover of old thermostat. This should expose the wires.
3. Label the existing wires with the enclosed wire labels before removing wires.
4. After labeling wires, remove wires from wire terminals.
5. Remove existing thermostat base from wall.
6. Refer to the following section for instructions on how to install this thermostat.

To Install Thermostat



ELECTRICAL SHOCK HAZARD – Turn off power at the main service panel by removing the fuse or switching the appropriate circuit breaker to the OFF position before removing the existing thermostat.

IMPORTANT: Thermostat installation must conform to local and national building and electrical codes and ordinances.

**** Note:** Mount the thermostat about five feet above the floor. Do not mount the thermostat on an outside wall, in direct sunlight, behind a door, or in an area affected by a vent or duct.

1. Turn off power to the heating and cooling system by removing the fuse or switching off the appropriate circuit breaker. Move the **Cool/OFF/Heat** switch to **OFF**.

To Install Thermostat (continued)

2. Move the **FAN AUTO/ON** switch to **AUTO**.
3. To remove cover, insert and twist a coin or screwdriver in the slots on the top of the thermostat.
4. Put thermostat base against the wall where you plan to mount it (Be sure wires will feed through the wire opening in the base of the thermostat).
5. Mark the placement of the mounting holes.
6. Set thermostat base and cover away from working area.
7. Using a 3/16" drill bit, drill holes in the places you have marked for mounting.
8. Use a hammer to tap supplied anchors into mounting holes.
9. Align thermostat base with mounting holes and feed the control wires through wire opening.
10. Use supplied screws to mount thermostat base to wall.

CAUTION!: *Be sure exposed portion of wires does not touch other wires.*

11. Tighten screws on terminal block. Gently tug wire to be sure of proper connection. Double check that each wire is connected to the proper terminal.

CAUTION!: *Remove RH/RC jumper for 2 transformer system (SC2000 only).*

12. Set the **fan jumper** to **electric** or **gas/oil**, and heat pump jumper to **NON-HP** or **HP**.
13. Install two "AA" alkaline batteries (SC2000 only).
14. Replace cover on thermostat by snapping it in place.
15. Turn on power to the system at the main service panel.

Installing and Changing Batteries (SC2000 only)

If your LCD is blank, or displaying **LO BAT**, the batteries are not installed or need to be changed. We suggest you change the batteries at least once a year, or whenever the **LO BAT** warning displays.

✱ **Note:** After installing new batteries, you have to reset the room temperature setting and the differential setting.

Step 1: Move the **Cool/Off/Heat** switch into the **Off** position.

Step 2: Move the **Fan Auto/On** switch into the **Auto** position.

Step 3: Remove the cover, and install the two “AA” alkaline batteries into the battery compartment. Proper battery installation is important! Make sure the positive ends of the batteries match the positive terminals in the battery compartment.

If the display is on, the batteries are installed properly.

Replacing Wiring Labels


Replace the old labels with the enclosed new labels:

Old	New	Type
F, G	G	Fan control relay
O	O	Cool active reversing valve
B	B	Heat active reversing valve
Y, Y6	Y	Cooling control
H, W, 4	W	Heating control
	C	Transformer, common side
M, 4, RH, RS, R	R	Transformer, hot side
C	Y or C	If the C terminal is the cooling control, connect to Y terminal; if it is the common side of the transformer, connect to C terminal


SC2000 Wiring Diagrams

Zone Valve/Damper Motor Systems

3-Wire, Zone Valve/Damper Motor System

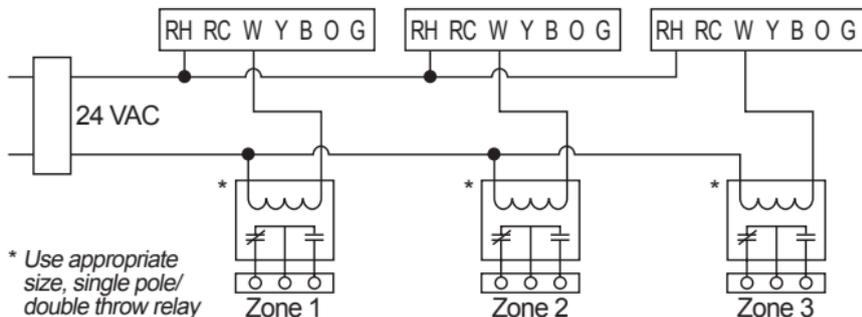

2-Wire, Zone Valve/Damper Motor System

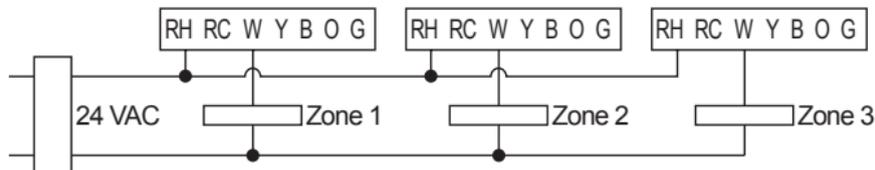


** **Note:** Differential temperature may need to be increased for zone/damper system


SC2000

Heating/Cooling

4-Wire, Single Transformer

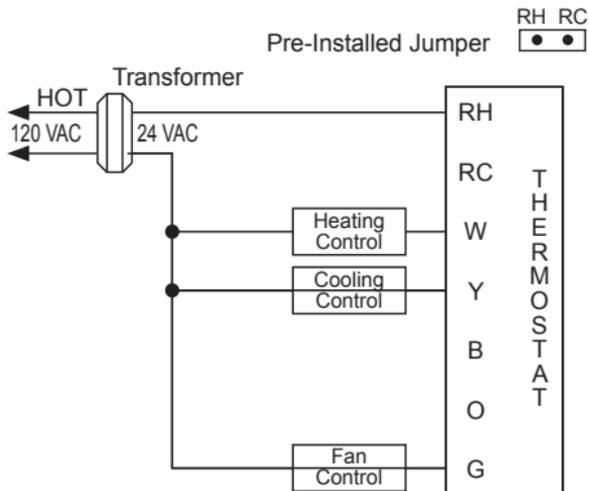

5-Wire, Two Transformer

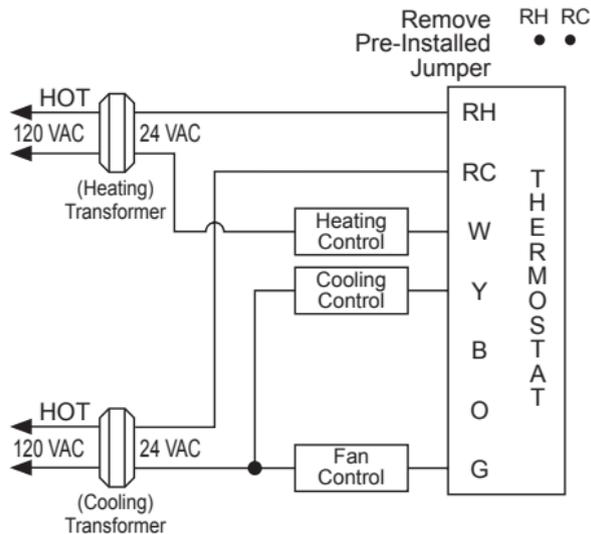


** Note: Both transformers must be in phase


SC2000

Heating Only

3-Wire, Single Transformer

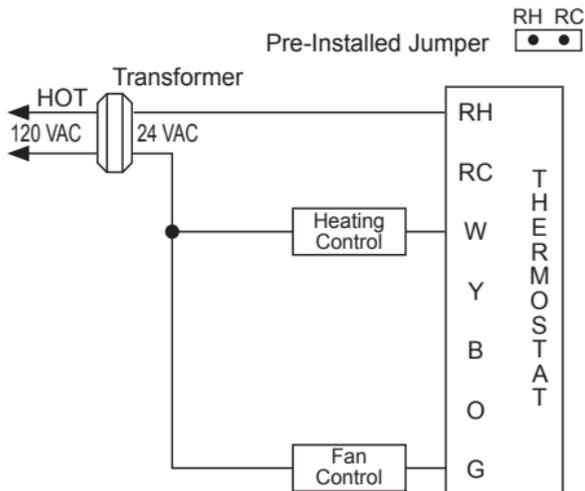


2-Wire, Single Transformer or Millivolt

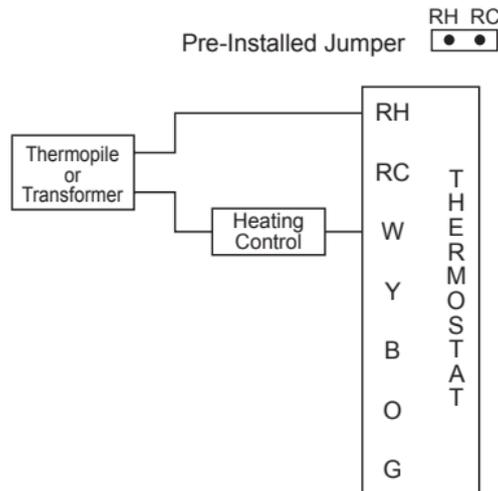


SC2000

Heat Pump

Cool Active Reversing Valve

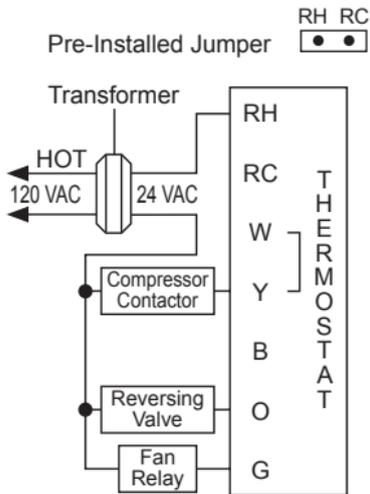


Heat Active Reversing Valve

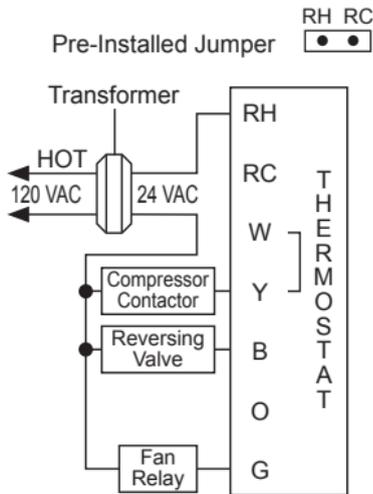

**** Note:** Place jumper between "W" and "Y" terminals.
Place heat pump jumper to HP position.

Cool Only

3-Wire, Single Transformer

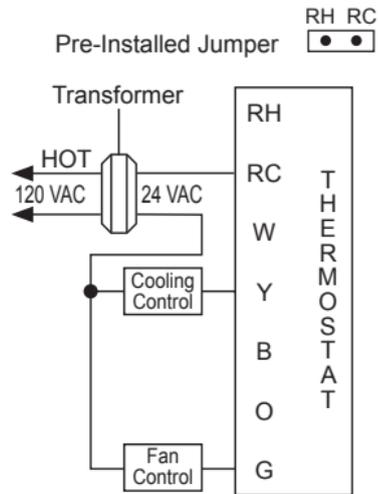


**** Note:** Millivolt system may require a transformer and/or an isolation relay to operate properly

SC2001 Wiring Diagrams

Heating and Cooling


4 or 5-Wire, Single Transformer

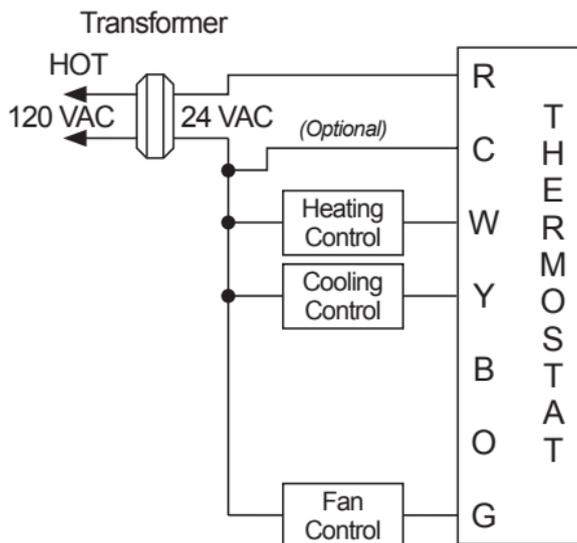


SC2001

Heating Only

4-Wire, Single Transformer

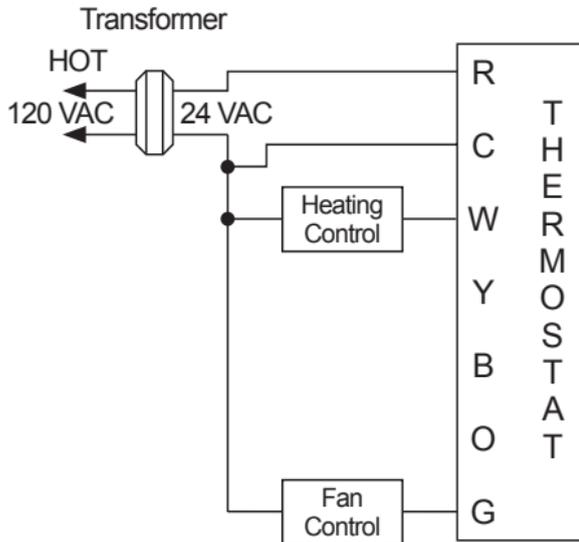


3-Wire, Single Transformer

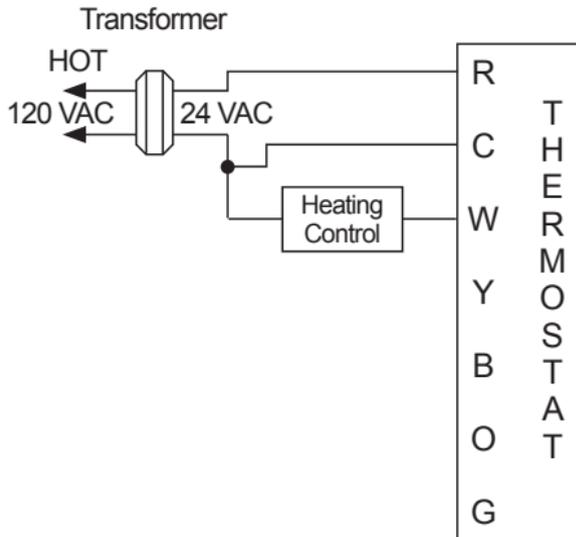


Heat Pump

Cool Active Reversing Valve

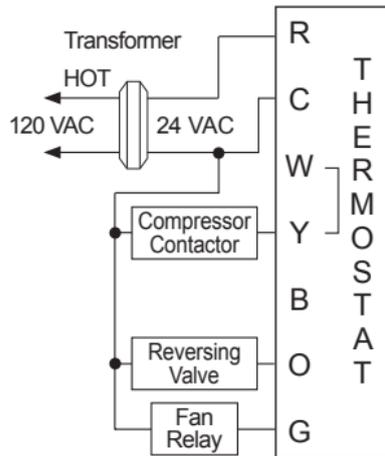


Heat Active Reversing Valve

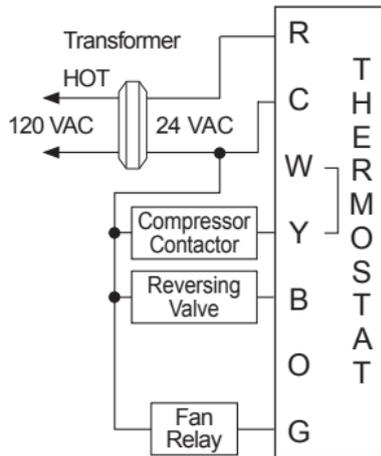

**** Note:** Place jumper between "W" and "Y" terminals.
Place heat pump jumper to HP position.

Cooling Only

4-Wire Single Transformer

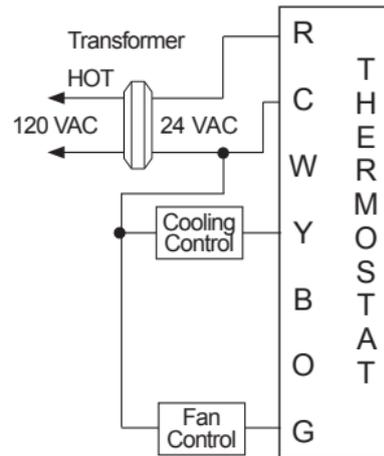

**** Note:** Millivolt system may require a transformer and/or an isolation relay to operate properly

A Quick Test

CAUTION!: Do not switch system to cool if the temperature is below 50°F. This can damage the air conditioning system and may cause personal injury.

Do not short jumper across terminals on the gas valve or at the system control to test installation.

Action: Set the **Cool/Off/Heat** switch to **Cool**. Press the ∨ button until the temperature setting is 3°F below the room temperature.

Result: The A/C system and fan should turn on.

Action: Set the **Cool/Off/Heat** switch to **Off**.

Result: The A/C should turn off (There may be a fan delay).

Action: Set the **Cool/Off/Heat** switch to **Heat**. Press the ∧ button until the temperature setting is 3°F above the room temperature.

Result: The heating system and fan should turn on (There may be a time delay depending on your system).

Action: Set the **Cool/Off/Heat** switch to **Off**.

Result: The heating system should turn off (There may be a fan delay).

Action: Set the **Fan Auto/On** switch **On**.

Result: The blower fan should turn on.

Action: Set the **Fan Auto/On** switch to **Auto**.

Result: The blower fan should turn off.

If the above test was successful, you have a proper installation.

If not: Double check that wires are securely connected and are connected to the proper terminals. Consult the troubleshooting section (see Page 16).

Operation

Setting the Room Temperature (Setpoint Temperature)

Step 1: Press one of the arrow buttons; the current temperature setting displays.

Step 2: Press the \vee or \wedge arrow button until the desired temperature setting displays.

The new temperature setting is automatically saved. After 5 seconds, the display returns to showing the current room temperature.

Setting a New Temperature Differential

The default temperature differential is 1°. When your room temperature varies by 1°F, the thermostat turns your system on. If you notice your system turning on and off too frequently, increase the temperature differential.

Step 1: Remove cover. Insert a coin or screwdriver in slot at the top if needed.

Step 2: For SC2000: Removing batteries for 10 seconds and then reinsert them.

For SC2001: Press the **Reset** button once (see diagrams on Page 1).

Step 3: When **Diff01** displays, press the \vee or \wedge arrow buttons to select the desired differential setting.

Step 4: Replace the thermostat cover.

Starting the Thermostat

Step 1: Move the **Fan Auto/On** switch into the **Auto** position.

Step 2: Move the **Cool/Off/Heat** switch to **Cool** or **Heat**, depending on the season.

Troubleshooting

Symptom	Remedy
The system isn't turning on	Check the wiring (see Installation, Page 4) Check the batteries (SC2000 only)
LCD is blank, or displaying "LO BAT"	SC2000: Replace batteries, or make sure the existing ones are properly installed (see Installing and Changing Batteries, Page 6) SC2001: Verify 24 VAC is at thermostat.
Thermostat is not properly controlling the fan	Check that the Gas/Electric jumper setting matches your system (gas or electric)
Thermostat is continuously turning on and off	Increase the temperature differential (see Setting a New Temperature Differential, Page 15)
Temperature displayed is not accurate	Verify no heat producing objects are located near the thermostat. Verify thermostat has adequate air flow to it.

ONE-YEAR LIMITED WARRANTY

The Seller warrants its products against defects in material or workmanship for a period of one (1) year from the date of manufacture. The liability of the Seller is limited, at its option, to repair, replace or issue a non-case credit for the purchase prices of the goods which are provided to be defective. The warranty and remedies set forth herein do not apply to any goods or parts thereof which have been subjected to misuse including any use or application in violation of the Seller's instructions, neglect, tampering, improper storage, incorrect installation or servicing not performed by the Seller. In order to permit the Seller to properly administer the warranty, the Buyer shall: 1) Notify the Seller promptly of any claim, submitting date code information or any other pertinent data as requested by the Seller. 2) Permit the Seller to inspect and test the product claimed to be defective. Items claimed to be defective and are determined by Seller to be non-defective are subject to a \$30.00 per hour inspection fee. This warranty constitutes the Seller's sole liability hereunder and is in lieu of any other warranty expressed, implied or statutory. Unless otherwise stated in writing, Seller makes no warranty that the goods depicted or described herein are fit for any particular purpose.



Patent No. 424,953

7313 William Barry Blvd., North Syracuse, NY 13212
(Toll Free) 800-365-5525 (Phone) 315-233-5266 (Fax) 315-233-5276

www.icmcontrols.com