OPERATING MANUAL



TRUE **COMFORT** IIII

This manual covers the following models:

• T801

Congratulations on purchasing a new thermostat. This thermostat was designed to the highest reliability and ease of use standards. Thank you for choosing Pro1.



Caution:

Equipment damage hazard Do not operate the cooling system if the outdoor temperature is below 50° F (10° C) to prevent possible compressor damage.

Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
Contact Us	4
Warranty Registration	4

Need Help?

For assistance with this product please visit http://www.pro1iaq.com or call Pro1 Customer Care toll-free at 888-Pro1iaq (776-1427) during normal business hours (Mon-Fri 9 AM - 6 PM Eastern)


Una versión española de este manual puede ser descargada en www.pro1iaq.com

THERMOSTAT QUICK REFERENCE

Getting to know your thermostat



(1) LCD

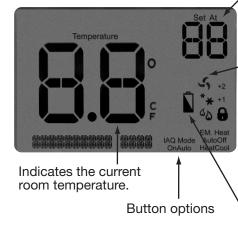

Displays the user selectable setpoint temperature.

System operation indicators: The COOL, HEAT or FAN icon will display when the COOL, HEAT or FAN is on.

NOTE: The compressor delay feature is active if these icons are flashing. The compressor will not turn on until the 5 minute delay has elapsed.

Low Battery Indicator: Replace batteries when indicator is shown.



- 3 Fan Button
- (4) System Button
- (5) Temperature Setpoint Buttons
- (6) Access Door



Important:

The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable. The batteries are located on the back of the thermostat.

Battery information



On the back of the thermostat insert 2 AA Alkaline batteries (included).

Pull the thermostat directly away from the wall to access the batteries. A firm tug will be required to remove the thermostat from the subbase mounted on the wall.

Easy to use controls





Caution:

When the battery icon appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

A Note About Auto Changeover:

Auto changeover will switch between heating and cooling as needed. It is very important to make sure the cooling setpoint temperature is at least 3° above the heating setpoint temperature and that the heating setpoint temperature is at least 3° below the cooling setpoint temperature.

1 LCD Display:

See page 2 for details about this display read out.

2 Glow in the Dark Light Button:

The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.

3 Fan Key:

Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.

(4) System Key:

Selects the operation mode of your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off. Selecting **AUTO** will turn the heat or cooling on as needed.

5 Temperature Setpoint Buttons:

Press the + or - button to select the desired room temperature.

Contact Us Information

Pro1 IAQ Inc.

1111 S. Glenstone Suite 2-100 Springfield, MO 65804

Toll-free: 1-888-Pro1iaq (776-1427)

Toll Number (Outside the USA): 330-821-3600

Web: http://www.pro1iaq.com

Hours of Operation: Monday - Friday 9 AM - 6 PM Eastern

Warranty Registration:

Your new Pro1 thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

1) Go to www.pro1iaq.com, select warranty registration and fill out a short registration form.

- or -

2 Complete the form below and mail it to the address shown.

Pro1 IAQ Warranty Registration: Thermostat Model: Address: Date Installed: City: Complete form and mail to: State: Pro1 IAQ Inc. 1111 S. Glenstone Suite 2-100 Springfield, MO 65804