



TRUE COMFORT ||||

This manual covers the following models:

- T955

Congratulations on purchasing a new thermostat. This thermostat was designed to the highest reliability and ease of use standards. Thank you for choosing Pro1.



Caution:

Equipment damage hazard

Do not operate the cooling system if the outdoor temperature is below 50° F (10° C) to prevent possible compressor damage.

Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
Programming	4
Contact Us and Warranty Registration	6

Need Help?

For assistance with this product please visit <http://www.pro1iaq.com> or call Pro1 Customer Care toll-free at 888-Pro1iaq (776-1427) during normal business hours (Mon-Fri 9 AM - 6 PM Eastern)

Una versión española de este manual puede ser descargada en www.pro1iaq.com

OPERATING MANUAL THERMOSTAT QUICK REFERENCE

Getting to know your thermostat



Important:

The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable. The batteries are located on the back of the thermostat.

1 LCD

Days of the week and time.

REMOTE indicates a remote has control of the system.


HOLD is displayed when thermostat program is permanently overridden.

- 2 **Light Key** (Glow in the Dark)
- 3 **Fan Key**
- 4 **System Key**
- 5 **Temperature Setpoint Keys**
- 6 **Menu Key**
- 7 **Program Icons**

Programmable Time Period Icons:
This thermostat has 4 programmable time periods per day.

Temperature:
Indicates the current system temperature.

Clean Display:
Pressing **CLEAN DISPLAY** will allow 30 seconds to clean the display. The keys will be inoperable during this time. **CLEAN** will appear if your contractor has programmed a filter change reminder. Press **CLEAN** when filter has been replaced to reset the filter change reminder timer.

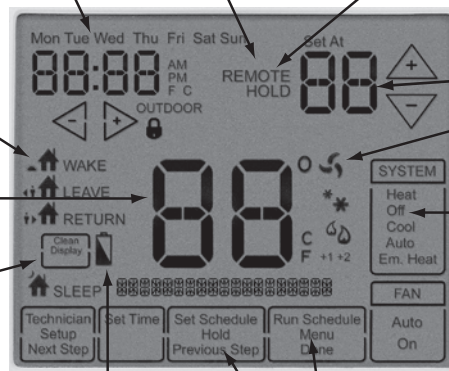

Displays the user selectable setpoint temperature.

System operation indicators:
* * * * *
COOL HEAT FAN

The **COOL**, **HEAT** or **FAN** icon will display when the **COOL**, **HEAT** or **FAN** is on.
NOTE: The compressor delay feature is active if these icons are flashing. The compressor will not turn on until the 5 minute delay has elapsed.

Low Battery Indicator:
Replace batteries when this indicator is shown.

Program Menu Options:
Shows different options during programming.

Battery information

On the back of the thermostat insert 2 AA Alkaline batteries (included).


Pull the thermostat directly away from the wall to access the batteries. A firm tug will be required to remove the thermostat from the subbase mounted on the wall.



Easy to use controls



Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating and cooling system becoming inoperable.






 
A Note About Auto Changeover:

Auto changeover will switch between heating and cooling as needed. It is very important to make sure the cooling setpoint temperature is at least 3° above the heating setpoint temperature and that the heating setpoint temperature is at least 3° below the cooling setpoint temperature.

- ① **LCD Display:**
See page 2 for details about this display readout and icons.
- ② **Glow in the Dark Light Button:**
Press and release the light button to turn on the display light. The glow in the dark light button will self illuminate for several hours after exposure to ambient light. *DO NOT* hold down the light button for more then 10 seconds. This will break the communication link between the T955W and the base module.
- ③ **Fan Key:**
Select **ON** or **AUTO**. The **ON** key will run the fan continuously. The **AUTO** key will cycle the fan on only when the heating or cooling system is on.
A Note About Programmable Fan:
The programmable fan feature will run the fan continuously during any time period it is programmed to be on. This is the best way to keep the air circulated and to eliminate hot & cold spots in your building.
- ④ **System Key:**
Selects the operation mode of your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off. Selecting **AUTO** will turn the **HEAT** or **COOL** on as needed.
- ⑤ **Temperature Setpoint Buttons:**
Press the + or - buttons to select the desired room temperature.
- ⑥ **Menu Keys:**
Use these keys to set up your programming options. Refer to the next page for instructions.
- ⑦ **Programmable Time Period Icons:**
This thermostat has 4 programmable time periods per day.

Set Time

Follow the steps below to set the current time:

1. Press **MENU**
2. Press **SET TIME**
3. Day of the week will be flashing.
Use the  or  key to select the current day of the week.
4. Press **NEXT STEP**
5. The current hour is flashing.
Use the  or  key to select the current hour. When using 12-hour time, make sure the correct a.m. or p.m. choice is selected.
6. Press **NEXT STEP**
7. Minutes are now flashing.
Use the  or  key to select current minutes.
8. Press **DONE** when completed




 
 
Important:

You will see a **TECHNICIAN SETUP** option after the **MENU** key is pressed.

This **TECHNICIAN SETUP** key is for installer configuration and should **NOT** be changed unless you consult your Professional Heating and Air Conditioning Technician.






 
Keypad Lockout Note:

If  appears in display then the keypad is locked. All or some of the keys will not work. Hold the  and  keys for 3 seconds to remove the lock.

Set Program Schedule 5+1+1

To customize your 5+1+1 program schedule, follow these steps:

Weekday:

1. Select **HEAT** or **COOL** using the **SYSTEM** key.
Note: You have to program heat and cool each separately.
2. Press **MENU**
3. Press **SET SCHED.** Note: Monday-Friday is displayed and the **WAKE** icon is shown. You are now programming the **WAKE** time period for the weekday setting.
4. Time is flashing. Use the  or  key to make your time selection for the weekday **WAKE** time period. Note: If you want the fan to run continuously during this time period, select **ON** with the **FAN** key.
5. Press **NEXT STEP**
6. The setpoint temperature is flashing. Use the  or  key to make your setpoint selection for the weekday **WAKE** period.
7. Press **NEXT STEP**
8. Repeat steps 4 through 7 for weekday **LEAVE** time period, for weekday **RETURN** time period, and for weekday **SLEEP** time period.

Saturday:

9. Repeat steps 4 through 7 for Saturday **WAKE** time period, for Saturday **LEAVE** time period, for Saturday **RETURN** time period, and for Saturday **SLEEP** time period.

Sunday:

10. Repeat steps 4 through 7 for Sunday **WAKE** time period, for Sunday **LEAVE** time period, for Sunday **RETURN** time period, and for Sunday **SLEEP** time period.

Set 7 Day Program Schedule

To customize your 7 day program schedule, follow these steps:

1. Select **HEAT** or **COOL** using the system key. You have to program heat and cool each separately.
2. Press **MENU**
3. Press **SET SCHED**
Note: Monday is displayed and the **WAKE** icon is shown. You are now programming the **WAKE** time period for the Monday setting.
4. Time is flashing. Use the \triangleleft or \trianglerightarrow key to make your time selection for the Monday **WAKE** time period. **Note:** If you want the fan to run continuously during this time period, select **ON** with the **FAN** key.
5. Press **NEXT STEP**
6. The setpoint temperature is flashing. Use the \triangleleft or \trianglerightarrow key to make your setpoint selection for the Monday **WAKE** period.
7. Press **NEXT STEP**
8. Repeat steps 4 thru 7 for Monday **LEAVE** time period, for Monday **RETURN** time period, and for Monday **SLEEP** time period.

Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday

Repeat steps 4 thru 7 for the remaining days of the week.

Temporary and Permanent Hold Feature

Temporary hold: The thermostat will display **HOLD** and **RUN SCHED** on the bottom of your screen when you press the \triangleleft or \trianglerightarrow key. If you do nothing, the temperature will remain at this setpoint temporarily for 4 hours. Your program setpoint will then replace your temporary setpoint.

Permanent hold: If you press **HOLD** key at the bottom of your screen, you will see **HOLD** appear below the setpoint temperature in the display. The thermostat will now permanently stay at this setpoint and can be adjusted using the \triangleleft or \trianglerightarrow keys.

To return to program: Press the **RUN SCHED** key at the bottom of your screen to exit either temporary or permanent hold.

Filter Change Reminder

If your installing contractor has configured the thermostat to remind you when the air filter needs changed, you will see **FILT** in the display when your air filter needs changed. **FILT** will be shown in the display after your system has run long enough to require an air filter change.

Resetting the filter change reminder: When **FILT** reminder is displayed, you should change your air filter and reset the reminder by holding down the second button from the left side of the thermostat for 3 seconds.



Hold down for 3 seconds, to reset filter reminder.

CONTACT US AND WARRANTY INFORMATION

Contact Us Information

Pro1 IAQ Inc.

1111 S. Glenstone
Suite 2-100
Springfield, MO 65804

Toll-free: 1-888-Pro1iaq (776-1427)

Toll Number (Outside the USA): 330-821-3600

Web: <http://www.pro1iaq.com>

Hours of Operation: Monday - Friday 9 AM - 6 PM Eastern

Warranty Registration:

Your new Pro1 thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

- ① Go to www.pro1iaq.com, select warranty registration and fill out a short registration form.
- or -
- ② Complete the form below and mail it to the address shown.

Pro1 IAQ Warranty Registration:

Name: _____

Address: _____

City: _____

State: _____

Zip: _____

Thermostat Model: _____

Date Installed: _____

Complete form and mail to:

Pro1 IAQ Inc.

1111 S. Glenstone
Suite 2-100
Springfield, MO 65804