


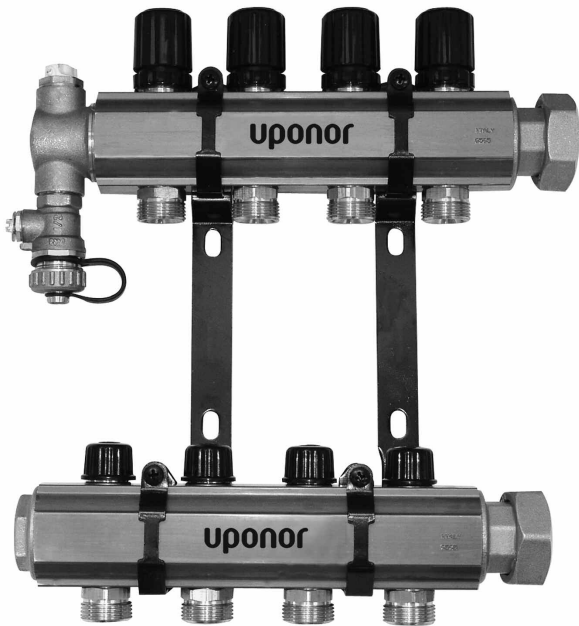

uponor

RADIANT HEATING SYSTEMS

**TruFLOW™ MANIFOLD
FILTER BALL**


INSTRUCTION SHEET

Introduction

The TruFLOW™ Manifold Supply and Return Ball Valve (part number A2631250) features an integrated filter (strainer) inside the ball. This allows easy cleaning of the filter without having to drain down the system. Gain access to the filter by simply closing the valve and opening the filter-inspection cap as shown in the following instructions.

Step 1

Close the valve.

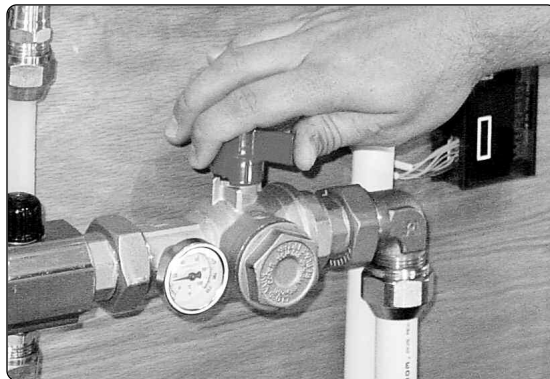


Step 2

Unscrew the filter-inspection cap.




Step 3

Remove the circlip which retains the filter.

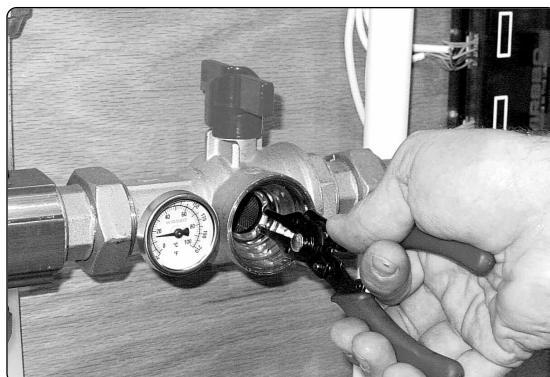


Step 4

Remove the filter.

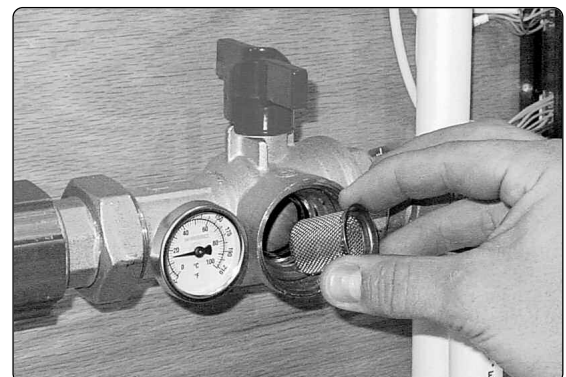


Step 5

Remove any dirt and debris from the filter.

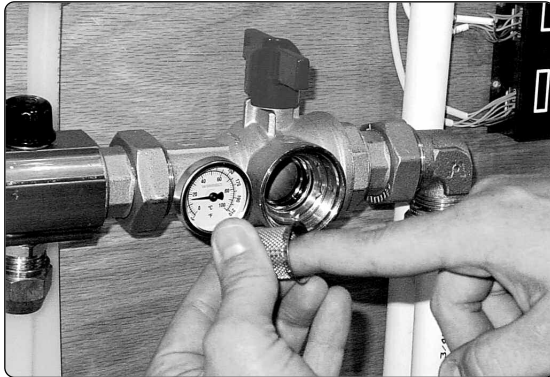


Step 6

Replace the filter, circlip and filter-inspection cap.

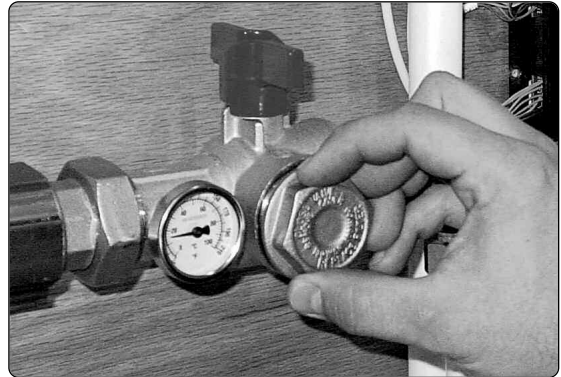


Step 7

Tighten the cap.

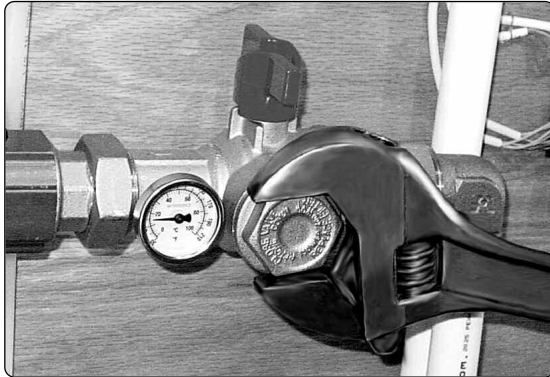

Step 8

Open the valve.

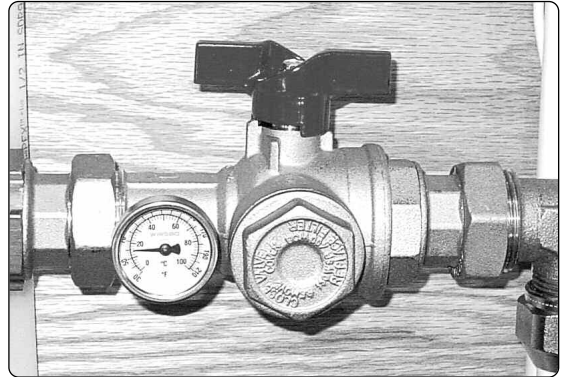

Uponor, Inc.
5925 148th Street West
Apple Valley, MN 55124
Tel: (800) 321-4739
Fax: (952) 891-1409
Web: www.uponor-usa.com
E-mail: learnmore@uponor-usa.com

Uponor Ltd.
655 Park Street
Regina, SK S4N 5N1
Tel (888) 994-7726
Fax (800) 638-9517
Web: www.uponor.ca
E-mail: info@uponor.ca

uponor