




LoadMatch® Twin-Tee Installation Instructions

102-131

SUPERSEDES: New

EFFECTIVE: September 1, 2002

Plant ID# 001-1022

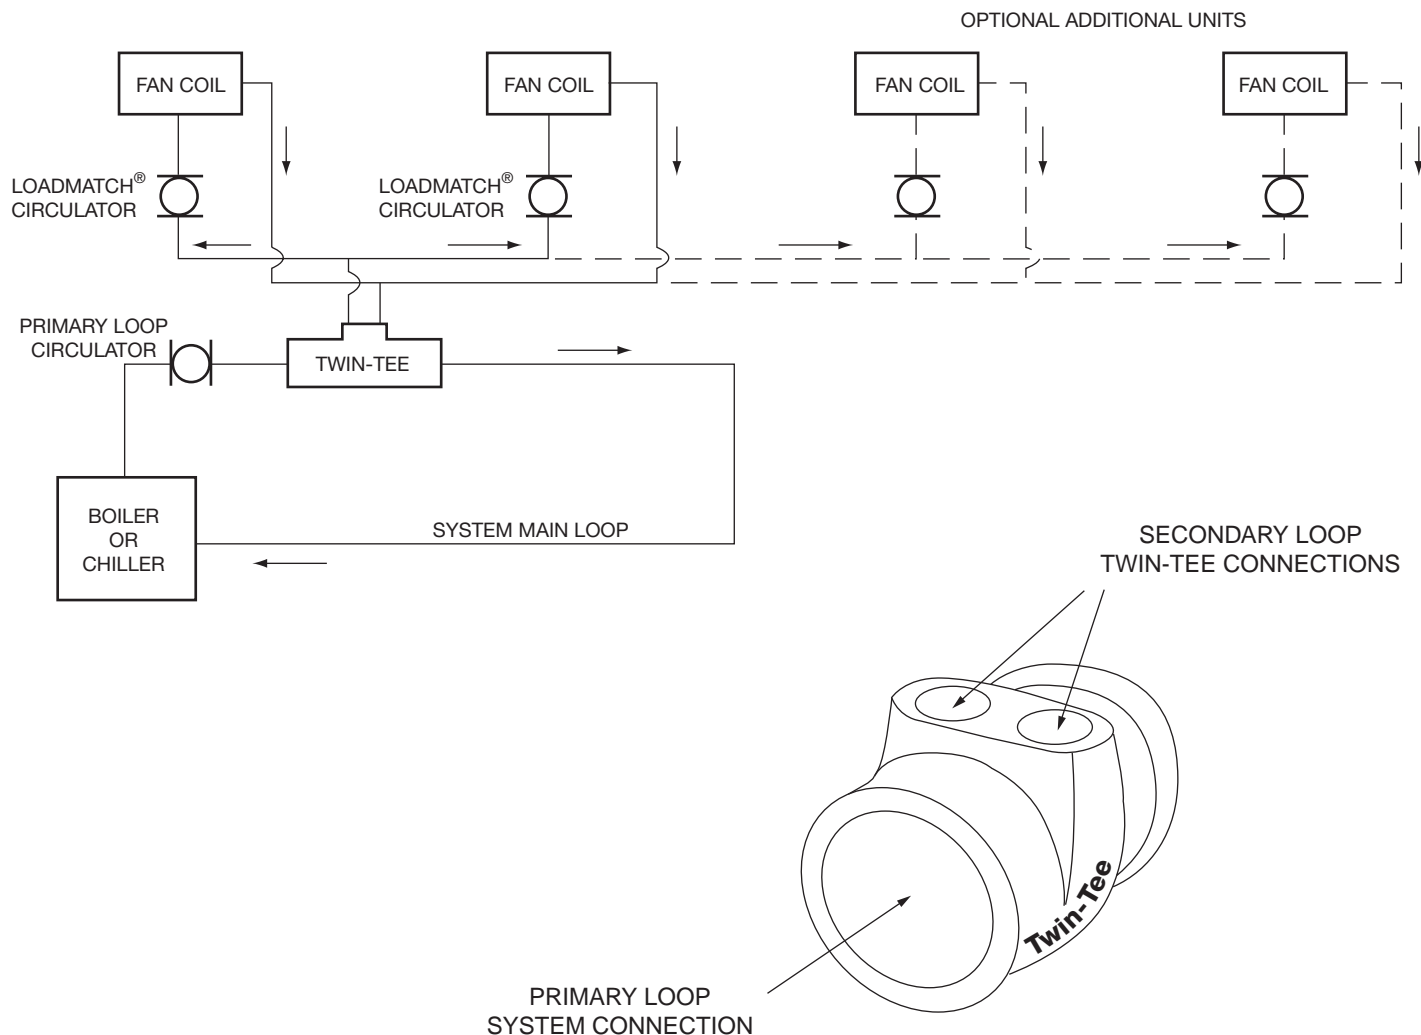

1. Locate the LoadMatch® Twin-Tee on the system main loop, convenient to supply 1 or more Fan Coil units.
2. Pipe the Fan Coil supply line(s) to one of the Twin-Tee connections. Either one is acceptable. Multiple Fan Coil supply lines can be manifolded and connected to one Twin-Tee connection (see diagram).
3. Pipe the Fan Coil return line(s) to the second Twin-Tee connection.

Notes:

- Flow can be in either direction. An integral baffle separates flow for Twin-Tee supply and return connections.
- Twin-Tee can be mounted horizontally or vertically.
- For secondary loops, use LoadMatch® Circulators with Integral Flow Check (IFC) and Anti-Condensate Baffle (ACB). The IFC prevents gravity flow on heating loops. The Anti-Condensate Baffle (ACB) resists condensate build-up and protects motor windings when pumping chilled water.

DO IT ONCE. DO IT RIGHT.

TACO, INC., 1160 Cranston Street, Cranston, RI 02920 Telephone: (401) 942-8000 FAX: (401) 942-2360.
TACO (Canada), Ltd., 6180 Ordan Drive, Mississauga, Ontario L5T 2B3. Telephone: 905/564-9422. FAX: 905/564-9436.

Visit our web site at: <http://www.taco-hvac.com>

Printed in USA
Copyright 2002
TACO, Inc.