

Installation & Maintenance Instructions



SERIES



8003G/H
8202G/H

OPEN-FRAME, GENERAL PURPOSE, WATERTIGHT/EXPLOSIONPROOF SOLENOIDS

NOTICE: See Installation and Maintenance Instructions, I&M No. V6584R12 – Section 1 of 2 for detailed instructions.

Torque Chart

Part Name	Torque Value in Inch-Pounds	Torque Value in Newton-Meters
solenoid base sub-assembly	175 ± 25	19,8 ± 2,8
pipe adapter	90 maximum	10,2 maximum

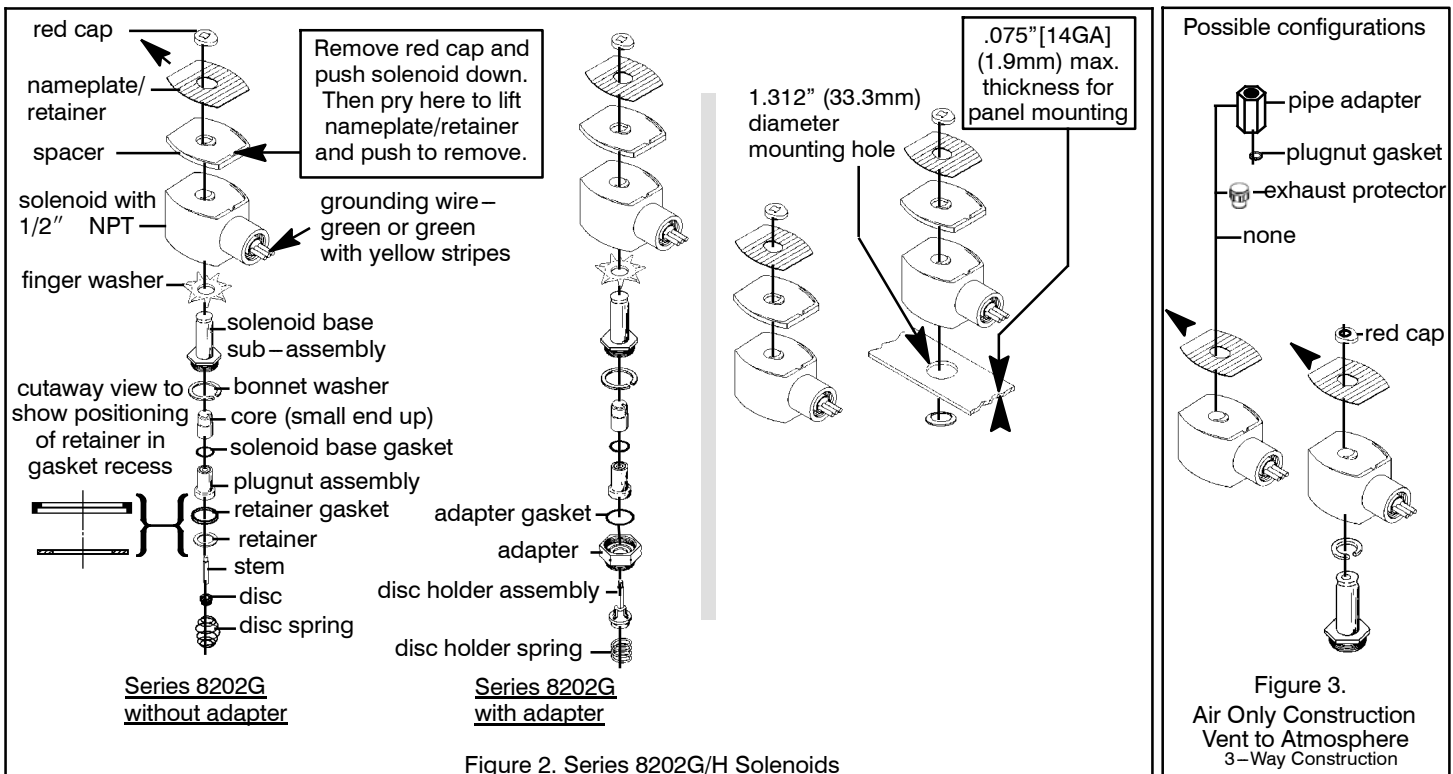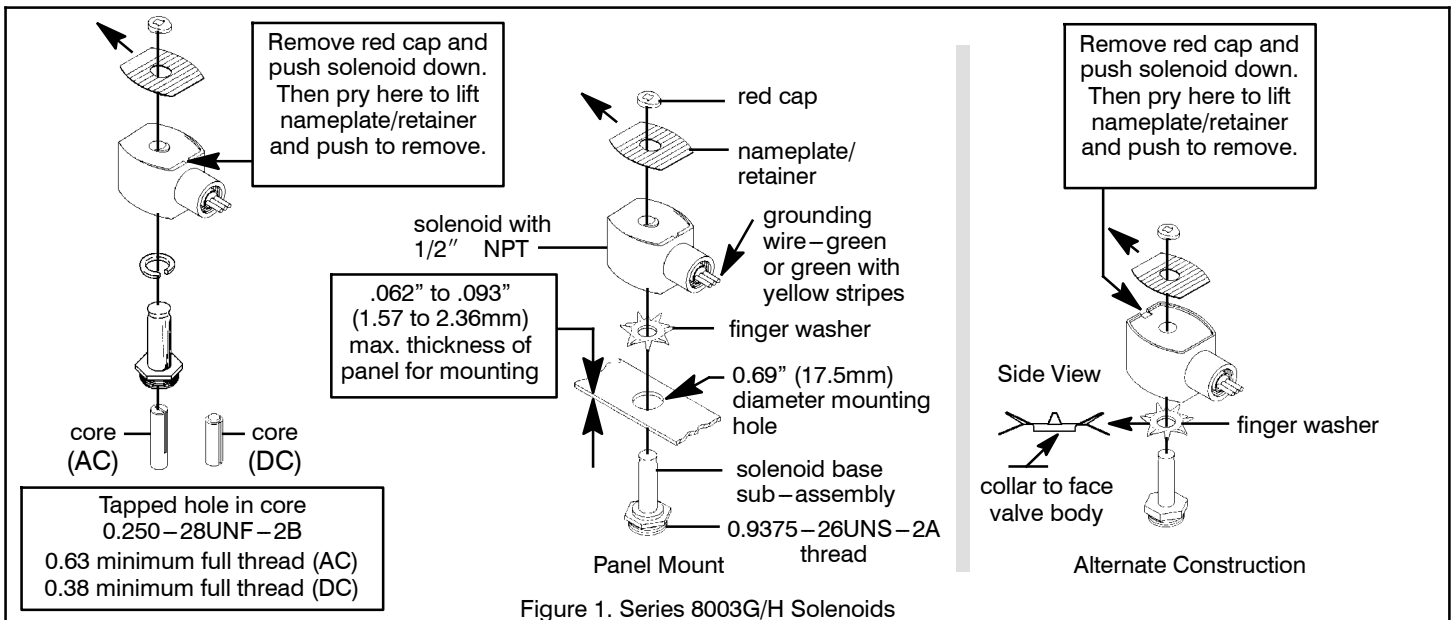

Torque Chart

Part Name	Torque Value in Inch-Pounds	Torque Value in Newton-Meters
terminal block screws	10 ± 2	$1,1 \pm 0,2$
socket head screw	$15 - 20$	$1,7 - 2,3$
center screw	5 ± 1	$0,6 \pm 0,1$

