




SERVICE MANUAL DIRECTAIR SERIES

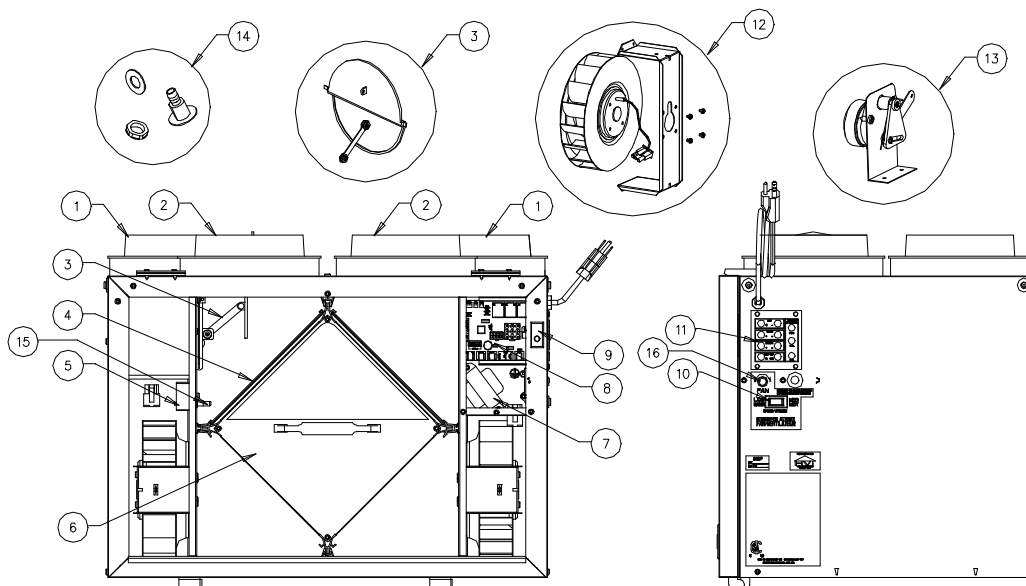

BOM #	Description	PHRV140	PHRV155	PHRV205
1	6" Collar, 24mm Lip,VHR	400788	400788	400788
2	6" Collar, 24mm Lip	410542	410542	410542
3	Damper Door	NA	40325	40325
4	Electrostatic Filters	40286	40286	40326
5	Capacitors	410220	410220	410012
6	Heat Recovery Cell Alum	402063	402063	402064
7	Auto-Transformer	410214	410214	410214
8	Electronic Board	402004	402004	402004
9	Door Switch	410670	410670	410670
10	Control Switch	410213	410213	410213
11	PCB, Wiring Panel	411719	411719	411719
12	Motor Assembly	402042	402042	40323
13	Damper Motor Assembly	NA	402547	402547
14	Kit Drain Plug	40315	40315	40315
15	Temperature Probe	40286	40286	40286
16	Speed Control	NA	402427	402427
	Wiring Diagram	401326	401326	401327