# **tekmar**<sup>®</sup> Submittal tekmarNet<sup>®</sup> 2 Thermostat 529






Zoning

Replaces: 01/11

lob	Designer	Contact	
	Deginiei	Oonlact	

The tekmarNet® 2 Thermostat 529 is designed to operate mechanical equipment to deliver 2 stages of heat to a single zone within a hydronic heating system. It can be used with any terminal unit type, including radiant floor, baseboard, and fan coils. It is capable of controlling up to 2 stages of heat using zone valves or zone pumps through a tekmarNet® 2 Wiring Center or Zone Manager in order to maintain air and an auxiliary temperature. That temperature is typically a floor temperature, but could also be a remote air sensor.

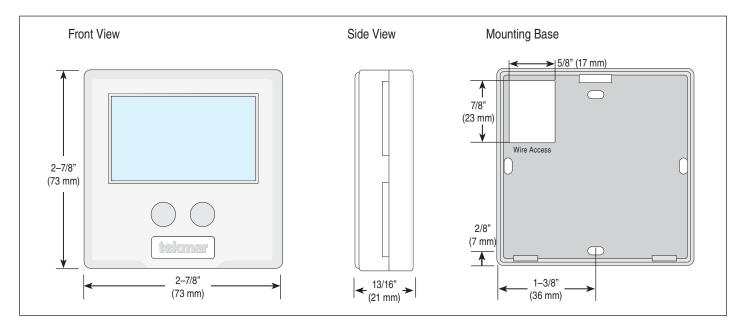

# **Specifications**

tekmarNet®2 The	rmostat 529 Two Stage Heat	
Literature	D529, Q529, U529	
Control	Microprocessor control. This is not a safety (limit) control	
Packaged weight	0.8 lb. (380 g)	
Dimensions	2-7/8" H x 2-7/8" W x 13/16" D (73 x 73 x 21 mm)	
Enclosure	White PVC plastic, NEMA type 1	
Approvals	CSA C US, meets Class B: ICES & FCC Part 15	
Ambient conditions	Indoor use only, 32 to 122°F (0 to 50°C), RH ≤80% to 88°F (31°C), down to 50% above 104°F (40°C), Altitude <6560 ft. (2000 m), Installation Category II, Pollution Degree 2	
Power supply	Provided by tekmarNet®2 Control, 1.3 VA	
Rh - W2 Relay	24 V (ac) 2 A	
Sensors	NTC thermistor, 10 kΩ @ 77°F (25°C ±0.2°C) β=3892	
-Included	None	
-Optional	tekmar type # 070, 072, 073, 076, 077, 079, 082, 084	
Warranty	Limited 3 Year (See D529 for full warranty)	

#### **Energy Saving Features**

- · Zone Synchronization
- Zone Post Purge
- Intelligent Setback (with tekmar 033 timer)
- One touch overrides (with optional User Switch)
- · Auto Heating Cycle

#### **Additional Features**


- tekmarNet®2 Communication compatible
- Requires 2 wires
- Two stage heat
- Pulse Width Modulation
- CSA C US Approved for use in USA and Canada
- Outdoor Temperature display
- Air Group Member
- · Backlight
- Freeze Protection
- Equipment Exercising
- Floor Warming (with 079 Slab Sensor)
- 1 auxiliary sensor input
- Room Temperature Limiting
- · Supports Radiant Floor Cooling

### SPECIAL REQUIREMENTS

This thermostat must be used with a tekmarNet® 2 Wiring Center or Zone Manager for power and communication.

# **Sample Application Drawing**


Below is a sample application drawing for this product. This application may include other tekmar products that are required for installation. More sample applications can be found at www.tekmarcontrols.com.

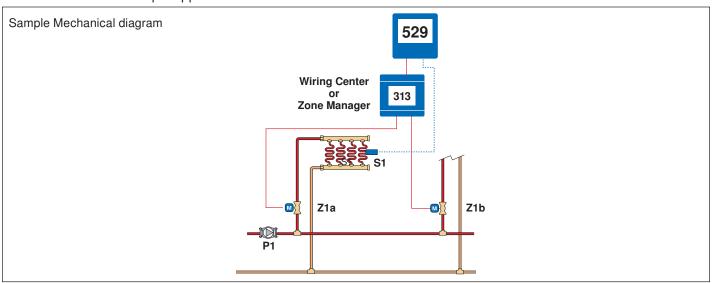

# Sample Electrical diagram

#### Legend

P1 = System Pump S1 = Slab Sensor Z1a = Stage 1 Heat Z1b = Stage 2 Heat

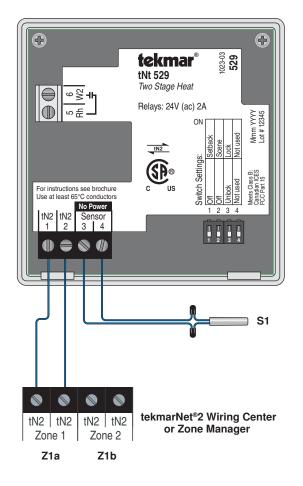



tekmar Control Systems Ltd., Canada, tekmar Control Systems, Inc., U.S.A. Head Office: 5100 Silver Star Road, Vernon, B.C. Canada V1B 3K4, 250-545-7749, Fax. 250-545-0650 Web Site: www.tekmarcontrols.com

