

INSTALLER/CONFIGURATION MENU

With thermostat in Heat, Cool or Auto, in normal operation, press the Menu button for at least 5 seconds. The display will show item #1 in the table below. Press Menu to advance to the next menu item. Press  or  to change a menu item option. Shaded items are not available on 1F86.

CONFIGURATION MENU						
Menu Reference Number	HP	SS	Press Button	Displayed (Factory Default)	Press  or  to select from listed options	COMMENTS
1	1		MENU	(O) On	b On	Reversing Valve Output (SS/HP switch must be in the Heat Pump HP position)*
2	2	1	MENU	P (2)	P 3, P 0	Selectable Programs Per Week (For programmable thermostat only)
3	3	2	MENU	(OFF) CS	On CS	Select Cool Savings on or off
			MENU	(3)	6, 5, 4, 2, 1	Selects Cool Savings value 1 (low) to 6 (high)
4	4	3	MENU	(On) E	(OFF) E	Selects Energy Management Recovery (EMR) on or off
5		4	MENU	(ME) CR Heat	FA, SL	Adjustable Anticipation (Heat) (only when SS/HP switch is at the SS position)
6		5	MENU	(FA) CR Cool	SL	Adjustable Anticipation (Cool) (only when SS/HP switch is at the SS position)
7	5		MENU	(FA) CR Heat Pump	SL	Adjustable Anticipation (Heat Pump) (only when SS/HP switch is at the HP position)
8	6	6	MENU	(OFF) CL	On CL	Compressor Lockout Time
9	7	7	MENU	Auto Heat Cool Off	Heat Cool Off, Heat Off with Fan icon, Heat Off without Fan icon, Cool Off, Auto Off	System Mode Configuration with Automatic Changeover
10	8	8	MENU	(On) L	OFF L	Selects Display Light on or off
11	9	9	MENU	0 (temperature)	1 HI, 2 HI, 3 HI, 4 HI, 1 LO, 2 LO, 3 LO, 4 LO	Adjustable Ambient Temperature Display
12	10	10	MENU	F	C	Selects Fahrenheit/Celsius Temperature Display
13	11	11	MENU	(OFF) Change Filter	On Change Filter	Selects Filter Change-out Indicator
			MENU	Change Filter 200 h	25 h to 1975 h in 25-hour increment	When on, selects time in 25 hour increments 25-hour increment
14	12	12	RUN			Returns to Normal Operation

*NOTE: To switch thermostat to Heat Pump, place the SS/HP switch to HP and reset thermostat by pressing FAN button, up and down arrows at the same time.

Single Stage (Gas, Oil, Electric)

RH	RC	W	G	Y	O/B	C
24 V for Heat	24 V for Cool	Heat Relay	Fan Relay	Compressor Relay	3-wire zone valve	24 V Common

Single Stage Heat Pump (No Auxiliary Heat)

RH	RC	W	G	Y	O/B	C
24 V for Heat	24 V for Cool	Heat Relay (with jumper to Y)	Fan Relay	Compressor Relay (with jumper to W)	Changeover Relay "O" for Cool, "B" for Heat	24 V Common