

# POTABLE AND HYDRONIC SYSTEMS

### **POTABLE WATER**

- PMC or TW Series
- Sizes 2-10 Gallons
- Working pressure 150 PSI

### **HYDRONIC**

- PMET Series
- Sizes 2-14 Gallons
- Working pressure 100 PSI



PMC-5



### POTABLE WATER EXPANSION TANKS

Thermal expansion occurs when water is heated during non-use periods. The installation of a Pressure Reducing Valve (PRV), Check Valve or Back Flow Preventer "closes" the water system, leaving water with no room for expansion. National Standard Plumbing code: 10.5.7 requires backflow prevention, to prevent backflow into the water main.


Thermal expansion in a closed plumbing system can be damaging, dangerous and costly. Its effects include damage to water heater connections, gas water heater flue tubes, pumps serving washers and dishwashers, leaking faucets, "weeping" of water through the water heater T&P Relief Valve, and noisy water hammer in the pipes.



A properly sized Expansion Tank eliminates these problems, by giving water a place to go when thermal expansion occurs. When a water heating cycle ends, or when any fixture is opened within the system, the impact of thermal expansion is reduced, and water drains out of the expansion tank back into the system.





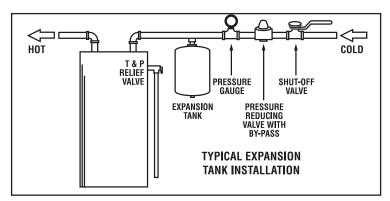

Expansion tanks are pre-charged with a 38 PSI air charge. If the inlet water pressure is higher than 38 PSI, the expansion tank's air pressure must be adjusted to match that pressure but must not be higher than 80 PSI.

	РМС	Sizing C	hart For	Residenti	al Water	Heaters	
Inlet Water			Wat	er Heater Ca	pacity in Ga	llons	
Pressure*		30	40	50	66	82	100
40 PSI		PMC-2	PMC-2	PMC-2	PMC-2	PMC-5	PMC-5
50 PSI		PMC-2	PMC-2	PMC-2	PMC-2	PMC-5	PMC-5
60 PSI		PMC-2	PMC-2	PMC-2	PMC-2	PMC-5	PMC-5
70 PSI		PMC-2	PMC-2	PMC-2	PMC-2	PMC-5	PMC-5
80 PSI		PMC-2	PMC-5	PMC-2	PMC-5	PMC-5	PMC-5

TW Series Sizing Chart For Residential Water Heaters										
Inlet Water	Water Heater Capacity in Gallons									
Pressure*	30	40	50	66	82	100				
40 PSI	TW-5	TW-5	TW-5	TW-5	TW-12	TW-12				
50 PSI	TW-5	TW-5	TW-5	TW-5	TW-12	TW-12				
60 PSI	TW-5	TW-5	TW-5	TW-5	TW-12	TW-12				
70 PSI	TW-5	TW-5	TW-5	TW-5	TW-12	TW-12				
80 PSI	TW-5									

<sup>\*</sup>Highest recorded inlet water pressure in a 24-hour period of regulated water pressure.

PMC Sizing Chart For Commercial Water Heaters										
	Water Heater Capacity in Gallons									
Water Temperature	Atter Temperature 30 40 50 66 82 100 120									
140°	PMC-2	PMC-2	PMC-5	PMC-5	PMC-5	PMC-10	PMC-10			
150°	PMC-2	PMC-2	PMC-5	PMC-5	PMC-5	PMC-10	PMC-10			
160°	PMC-5	PMC-5	PMC-5	PMC-5	PMC-5	PMC-10	PMC-10			
170°	PMC-5	PMC-5	PMC-10	PMC-10	PMC-10	PMC-10	PMC-10			
180°	PMC-5	PMC-5	PMC-10	PMC-10	PMC-10	PMC-10	PMC-10			

TW Series	Sizing	Chart	For Cor	nmerci	al Wate	r Heat	ers		
	Water Heater Capacity in Gallons								
Water Temperature	30	40	50	66	82	100	120		
140°	TW-5	TW-5	TW-12	TW-12	TW-12	N/A	N/A		
150°	TW-5	TW-5	TW-12	TW-12	TW-12	N/A	N/A		
160°	TW-12	TW-12	TW-12	TW-12	TW-12	N/A	N/A		
170°	TW-12	TW-12	N/A	N/A	N/A	N/A	N/A		
180°	TW-12	TW-12	N/A	N/A	N/A	N/A	N/A		



## POTABLE WATER EXPANSION TANKS

■ Maximum Working Pressure: 150 PSI

■ Maximum Temperature: 140°F Residential

180°F Commercial

■ For use with residential and commercial water heaters

■ In-line design, with 3/4" NPTM connection: installs in cold water line of water heater

■ Field-adjustable 38 PSI air charge

■ Drawn-steel tank with powder coated interior lining


Butyl rubber parabolic diaphragm, for permanent separation of air and water

■ 2-Gallon (PMC-2 or TW-5), 5-Gallon (PMC-5 or TW-12) and 10-Gallon (PMC-10)

IAPMO Approved

■ 5-Year Limited Warranty for PMC models

■ 1-Year Limited Warranty for TW Series models

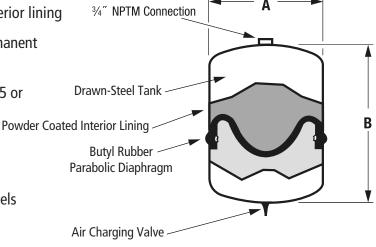

Water Heater Expansion Tanks - 5-year warranty								
	Maximum / Volume (	Acceptable (Gallons)	Dime in Ir	Shipping Weight				
Model Number	Capacity	40 PSI	60 PSI	Α	В	(Lbs.)		
PMC-2	2.1	1.27	1.03	81/4	103/16	5		
PMC-5	4.4	3.05	2.19	11	143/4	9		
PMC-10	9.21	6.55	5.25	153/8	153/4	20		


TW Series Water Heater Expansion Tanks - 1-year warranty								
Model Number	Gallon Capacity	Maximum / Volume ( 40 PSI	Acceptable Gallons) 60 PSI		nsions iches B	Shipping Weight (Lbs.)		
TW-5 TW-12	2.10 4.40	1.27 3.05	1.03 2.19	8¹/₄ 11	10 <sup>3</sup> / <sub>16</sub> 14 <sup>3</sup> / <sub>4</sub>	5.5 10		

All Models: 150 PSIG Maximum Working Pressure

Page 3 of 4 www.hotwater.com AOSEB55300



## HYDRONIC EXPANSION TANKS

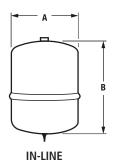

ProMax® Sizing Guide							
Recommended ProMax® Tank(s)							
PMET-2							
PMET-5							
PMET-7							
PMET-14							

ProMax® Space Heating Expansion Tanks									
	Model Number	Gallon Capacity	Maximum Acceptable Volume (Gallons) 20 PSIG	Dimer in In	Shipping Weight (Lbs.)				
In-Line	PMET-2	1.96	1.53	81/4	103/16	5			
	PMET-5	4.55	3.75	11	143/4	9			
	PMET-7	7.3	4.6	11	211/16	12			
	PMET-14	14.6	10.5	15¾	15¾	22			

All Models: 100 PSIG Maximum Working Pressure All In-Line have 1/2" NPTM connections

- For use with space heating boilers in closed systems not for use with potable water heating systems
- Models up to 14.6 gallons feature in-line design for installation directly into system piping
- Field-adjustable 12 PSI air charge
- Drawn-steel tank
- Butyl rubber parabolic diaphragm, for permanent separation of air and water
- Maximum Working Pressure: 100 PSI
- Maximum Temperature: 240°F
- 1-Year Limited Warranty

Promax® Expansion Tanks for closed space heating systems provide a place for expanding water to go during cycles of thermal expansion, eliminating the risk of damage to the boiler and piping in the system. Sizing based on the following operating conditions: Cold pressure 12 PSI, Relief set 30 PSI, maximum temperature 240°F. Sizes shown are for fin-tubed baseboard radiation. For systems with converters and/or unit heaters, increase tank one size. For cast-iron radiation, increase tank two sizes.

For larger systems, it will be necessary to calculate the expansion of water within the system. Our engineering department can assist you, if you provide the size of the system in gallons, the pressure, and the maximum operating temperature. If you do not know the system capacity, it can be calculated from the amount and size of pipe used.

