

FostaPex Prep Tool Product Instructions




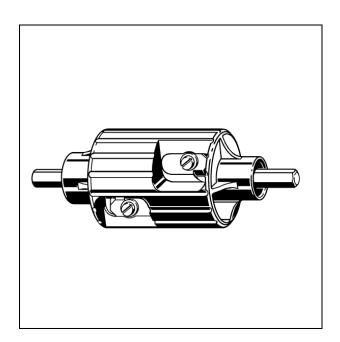


1. FostaPex Prep Tool.

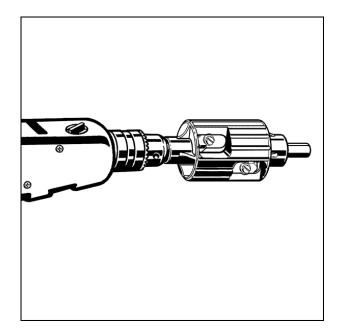

2. Attach the Prep Tool to drill or cordless screwdriver (may also be used manually).

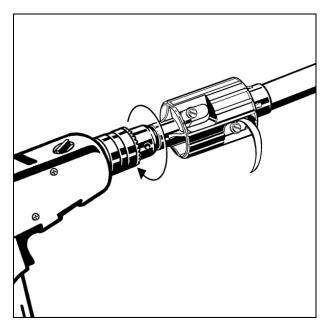

3. Insert tubing into tool and run drill until no more resistance is felt and the tool spins freely.

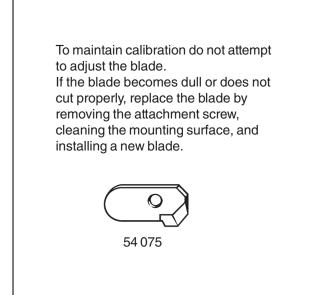

PI-54030-07/04 1 of 1