

# CrimpAll™ Tool Kit




**WattsRadiant**  
Floor Heating & Snowmelting


A Watts Industries Company

3131 W. Chestnut Expwy. Springfield, MO 65802  
800-276-2419 (toll-free U.S./Canada) 417-864-6108 (phone)  
417-864-8161 (fax) www.wattsradiant.com

## CrimpAll Tool Kit Components

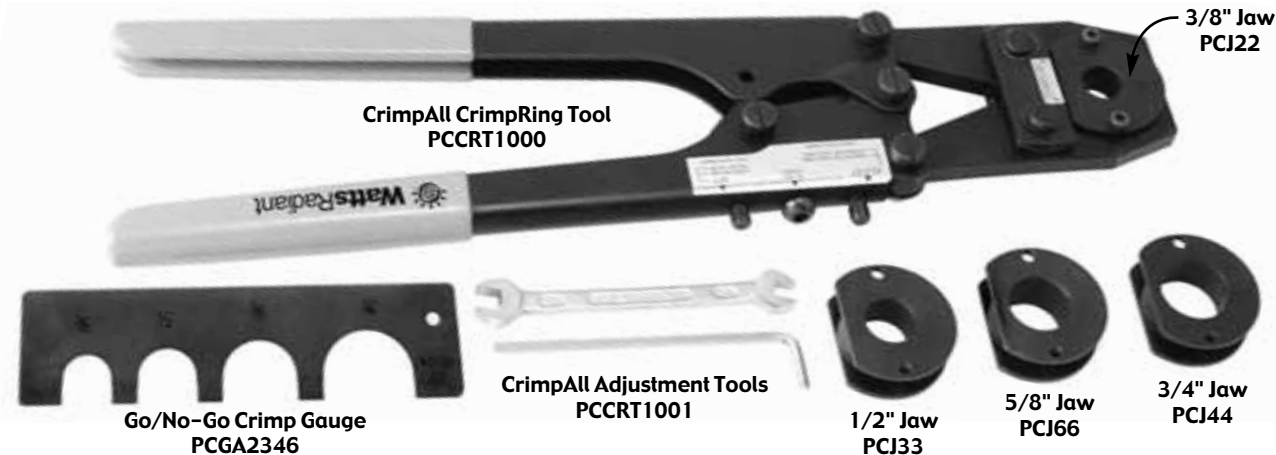

## CrimpAll Tool Adjustment

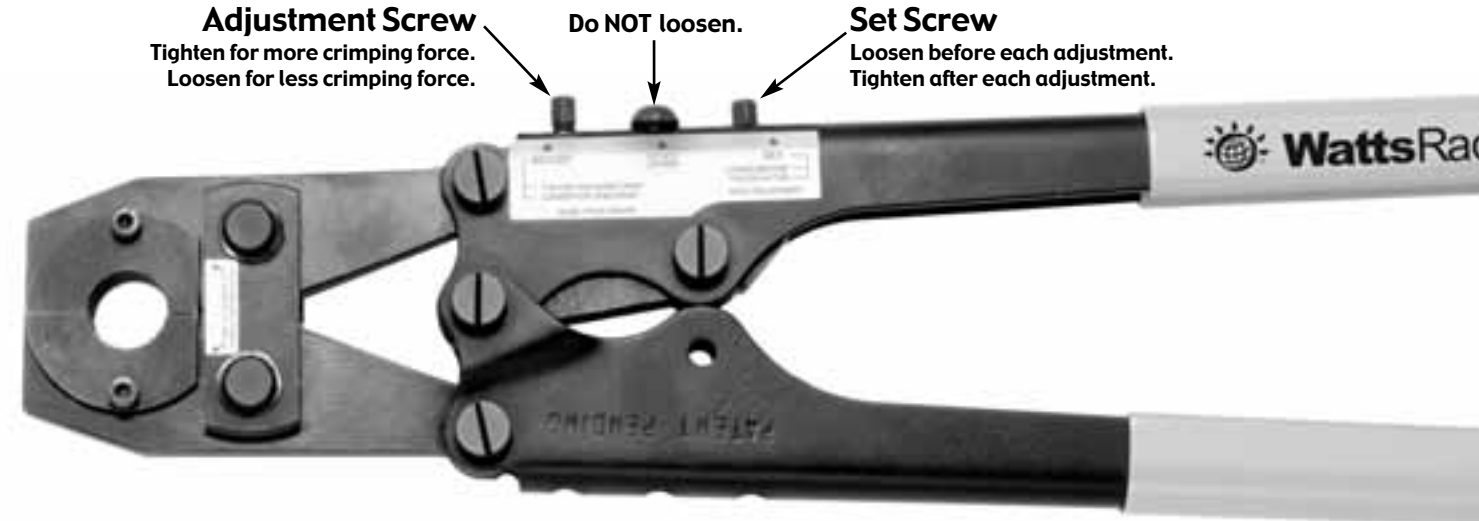

## CrimpAll Jaw Installation

1. Loosen the screws.
2. Remove crimping jaws.
3. Insert new crimping jaw set.
4. Tighten the screws with the tool closed, and you're ready to crimp.


Extra jaw screws included in kit.



## Using the Go/No-Go Gauge


### NO GO!

The CrimpRing is not compressed enough, and will not slide into the "GO" slot of the gauge.

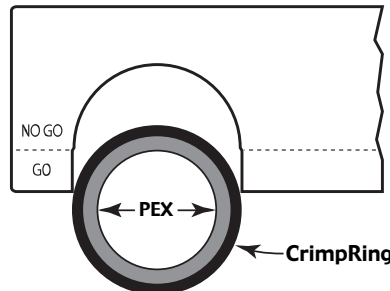

### GO.

The CrimpRing slides into the "GO" slot, but stops at the shoulders in the "GO" slot.

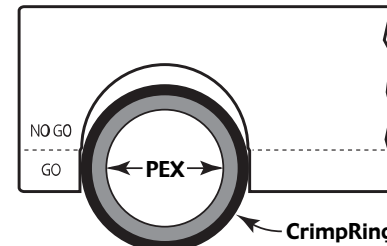

### NO GO!

The CrimpRing is compressed too small, and slides all the way into the "NO GO" slot.

