

Instructions for Installing PM-224

Remote snow/ice sensor

The PM-224 is a 24 volt, self contained snow and ice detector. Each PM-224 can be set to operate within a range of 22-28 V. The integrated snow sensor is heated to allow for snow, ice, or freezing rain to melt, allowing proper detection of environmental conditions.

Installation

The PM-224 must be installed in a location that exposes the moisture grid to a clear view of the sky and any precipitation. **Note: the unit should not be mounted directly under eaves, overhangs, or other obstructions that can block precipitation from reaching the moisture grid.**

Do not install the sensor close to the ground, or any other location, that can cause the sensor to be buried in snow.

Mount the PM-224 outdoors, away from furnace vents, dryer vents, and other sources of heat. The PM-224 can be mounted to a free-standing conduit or by using the mounting holes in each corner of the enclosure. Do not drill holes in the enclosure.

Wire the controller in accordance to the provided schematics.

Operation

Before installing and wiring the PM-224 sensor, it is important to set all power and control settings prior to wiring or mounting.






- Set the Temp Adjust control for desired melting conditions. Precipitation below this temperature is assumed to be snow, above rain. Control comes with the Temp Adjust dial set to 39°F.
- Set the Delay (DEL) time for 30–90 minutes when the LD (Long Delay - see #3) switch is set to OFF, or 2 – 6 hours when LD is ON.

The Delay function will allow the snowmelt system to run for the set time frame after moisture is no longer detected (once snowfall has stopped). This is to help prevent "black ice" from forming.

- Determine how the sensor operates by setting the toggles located at S1.

- Snow:** On – the control will operate when precipitation is detected below the Temp Adjust setting. **Recommended: ON**
- Rain:** On – the control will operate when precipitation is detected above the Temp Adjust setting. **Required: OFF**
- DEL:** On – the control will operate with a Delay Off time. If this function is set to Off, the control will operate with a 2 minute delay to prevent short-cycling of external components. **Recommended: ON**
- LTC:** On – the control will operate in Low Temperature Cutoff mode, preventing operation when Ambient Temperatures (AT) fall below 15°F. **Recommended: ON**
- LD:** On – the control will operate with a Delay (DEL) time (see #2 above) of 2 - 6 hours. If this function is Off, the control will operate with a 30 - 90 minute Delay time. **Recommended: OFF**

- The control monitors the moisture sensor once every second for the presence of moisture. Setting the sensor sensitivity dial to "Less" requires a full four (4) minutes of detection before the unit activates the snowmelt system. Set to "More" requires only three

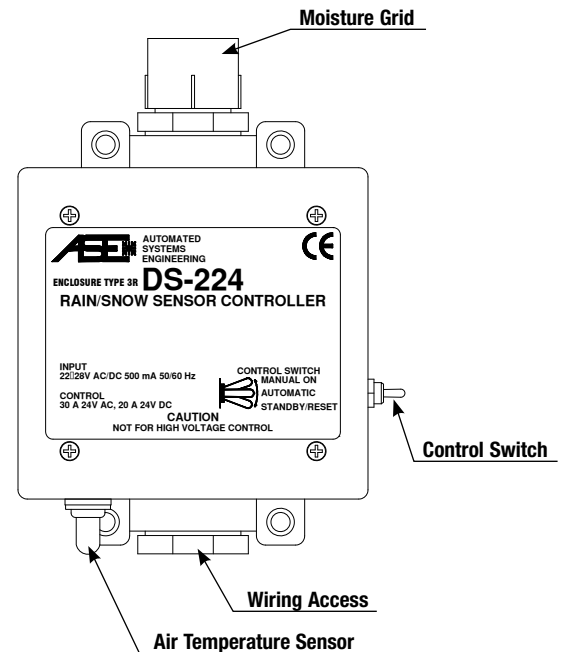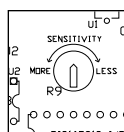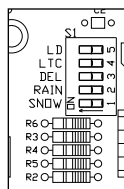

PM-224 provides integrated air and moisture detection within a rainproof and ice-resistant enclosure.

- (3) seconds of detection. Adjust this setting to avoid nuisance triggering due to condensation, blowing snow, high winds, or flurry conditions.

Power must be cycled for switch changes to take effect.




Manual Override Switch

An override switch is mounted on the side for testing and special operational requirements. Placing the switch in the "Automatic" position will allow the sensor to operate normally. "Manual On" will activate the control and will stay activated for a maximum of 40 hours before returning to "Automatic" mode. The "Stand-by/Reset" position will clear any current snowmelt call or delay activity.

If the Manual Override Switch is moved to Manual On for less than 2 seconds and then back to Automatic the sensor will execute one delay off cycle. This can be used to clear frost, hail, drifting snow, or other conditions. Stand-by/Reset will clear this setting.

⚠ WARNING: General Safety Instructions

- THIS UNIT SHOULD BE INSTALLED ONLY BY QUALIFIED PERSONNEL!**
- Disconnect all power from the control, or any associated equipment, before opening the front cover plate.
- Limit input voltage to 22-28 VAC/VDC
- To avoid fire hazard, replace fuse **only** with 2 Amp 32 V or 250 V 3AG fast acting fuse.
- Do not drill holes through the electrical enclosure for mounting. Mount the control to a free-standing conduit or via the pre-determined mounting holes.
- Ensure front cover gasket is properly installed when replacing cover.

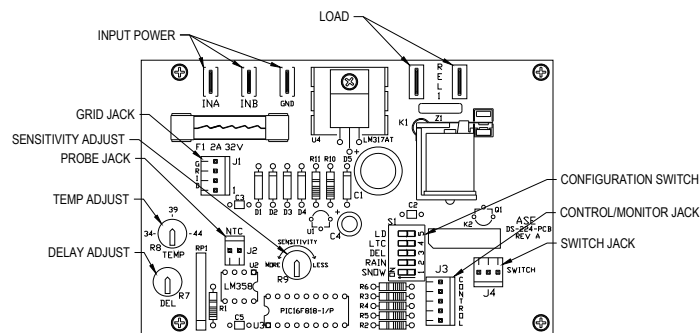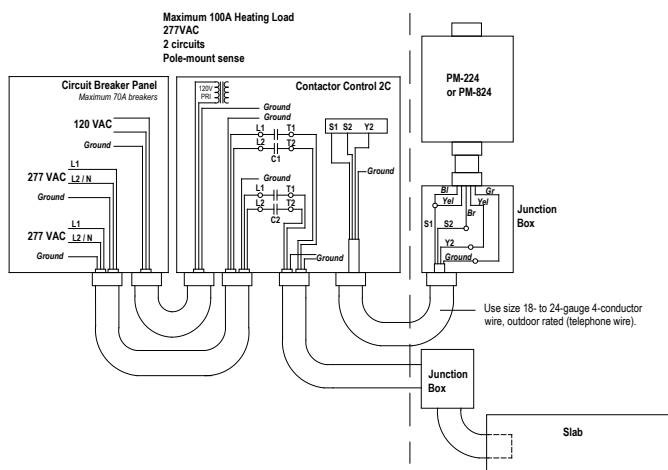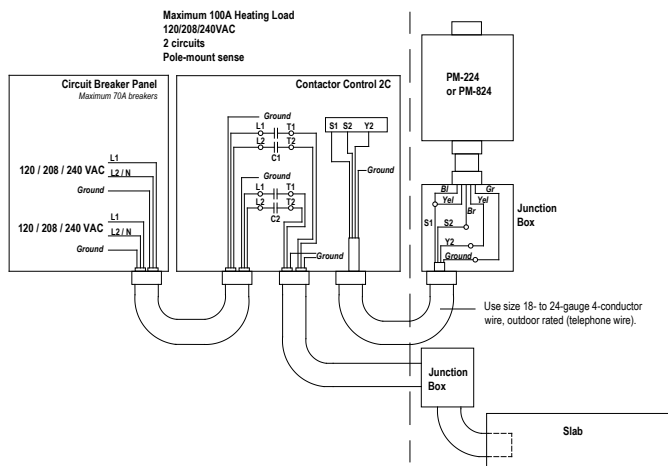

Recommended Switch Settings							
Function	Trigger	LD Off	LD on	LTC	DEL	RAIN	SNOW
Snow sensor w/o LTC	TT>AT	2 min	2 min	OFF	OFF	OFF	ON
Snow sensor w/LTC	TT>AT>15°F	2 min	2 min	ON	OFF	OFF	ON
Snow controller w/o LTC	TT>AT	30-90 min	2-6 hr	OFF	ON	OFF	ON
Snow controller w/LTC	TT>AT>15°F	30-90 min	2-6 hr	ON	ON	OFF	ON

Do Not set the Rain switch to "ON". Possible overheating of the snowmelt cables may result.

Supply Voltage	22 - 28 VAC
Trigger Temperature Range (TT)	34°F to 44°F
Configuration Modes	Snow Only Rain Only Snow or Rain
Delay Settings (post melting)	30 to 90 minutes 2 to 6 hours
Low Temperature Cutoff (LTC)	Prevents system operation when Ambient Temperature (AT) is below 15°F
Operation Modes	Automatic Standby/Reset Manual

Limited Warranty: Watts Radiant (the "Company") warrants each product to be free from defects in material and workmanship under normal usage for a period of one year from the date of original shipment. In the event of such defects within the warranty period, the Company will, at its option, replace or recondition the product without charge.

THE WARRANTY SET FORTH HEREIN IS GIVEN EXPRESSLY AND IS THE ONLY WARRANTY GIVEN BY THE COMPANY WITH RESPECT TO THE PRODUCT. THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED. THE COMPANY HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and the Company shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labor charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, or any other circumstances over which the Company has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

Some States do not allow limitations on how long an implied warranty lasts, and some States do not allow the exclusion or limitation of incidental or consequential damages. Therefore the above limitations may not apply to you. This Limited Warranty gives you specific legal rights, and you may have other rights that vary from State to State. You should consult applicable state laws to determine your rights. **SO FAR AS IS CONSISTENT WITH APPLICABLE STATE LAW, ANY IMPLIED WARRANTIES THAT MAY NOT BE DISCLAIMED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL SHIPMENT.**