

Squire®
Stainless Steel Indirect Water Heater

Installation & Operation Manual

Models: SIT030 - SIT119

CAUTION:

The heat transfer medium must be water or other nontoxic fluid having a toxicity rating or class of 1, as listed in Clinical Toxicology of Commercial Products, 5th edition.

The pressure of the heat transfer medium must be limited to a maximum of 30 PSIG by an approved safety or relief valve.



⚠ WARNING

This manual must only be used by a qualified heating installer / service technician. Read all instructions before installing. Perform steps in the order given. Failure to comply could result in severe personal injury, death, or substantial property damage.

Save this manual for future reference.

Contents

HAZARD DEFINITIONS	2	Anti-scald Valves (Mixing Valves)	12
PLEASE READ BEFORE PROCEEDING	3	Install Drain Valve	12
1. GENERAL INFORMATION		Temperature and Pressure (T&P) Relief Valve	12
Operating Restrictions.....	4	Table 4A - Minimum Relief Valve (AGA Rating) ...	13
Single-Wall Heat Exchanger	4	5. WIRING	
2. PRE-INSTALLATION		Indirect Water Heater Sensor Setup (Knight Boiler)	15
Locating the Tank.....	5	Install and Connect Tank Sensor	15
Recommended Clearances.....	5	Indirect Water Heater Controlled Using Aquastat and	
3. BOILER SIDE PIPING		Zone Circulator.....	16
Zone with Circulator to Aquastat.....	6	6. START-UP AND CHECK-OUT	17
Zone with Valve to Aquastat	6	7. MAINTENANCE	
DHW Prioritization	6	Maintenance Schedule.....	18
Multiple Tank Connections (Boiler Side).....	6	To Fill the Water Heater	18
Table 3A - Pressure Drop Chart.....	6	To Drain the Water Heater	18
Table 3B - Pressure Drop Values.....	6	8. PERFORMANCE DATA	
Piping Diagrams.....	7-10	AHRI Chart.....	19
4. DOMESTIC SIDE (TANK) PIPING		How to Properly Size Your Indirect Water Heater	20
Basic Domestic Piping	11	Performance Data Charts	21-23
Multiple Tank Domestic Water Piping.....	11	REVISION NOTES	Back Cover
Domestic Water Piping for Distant Fixtures.....	11		

Hazard definitions

The following defined terms are used throughout this manual to bring attention to the presence of hazards of various risk levels or to important information concerning the life of the product.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTICE

NOTICE indicates special instructions on installation, operation, or maintenance that are important but not related to personal injury or property damage.

Please read before proceeding

⚠ WARNING

Installer – Read all instructions before installing. Perform steps in the order given.

Have this indirect water heater serviced/inspected by a qualified service technician, at least annually.

Failure to comply with the above could result in severe personal injury, death or substantial property damage.

NOTICE

When calling or writing about the appliance – Please have the indirect water heater model and serial number from the indirect water heater rating plate.

Consider piping and installation when determining appliance location.

Any claims for damage or shortage in shipment must be filed immediately against the transportation company by the consignee.

Factory warranty (shipped with appliance) does not apply to appliances improperly installed or improperly operated.

⚠ WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

This appliance **MUST NOT** be installed in any location where gasoline or flammable vapors are likely to be present.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

⚠ WARNING

Failure to adhere to the guidelines on this page can result in severe personal injury, death, or substantial property damage.

When servicing the indirect water heater –

- To avoid severe burns, allow the appliance to cool before performing maintenance.

Indirect water heater operation –

- Should overheating occur or gas supply fail to shut off, do not turn off or disconnect electrical supply to circulator. Instead, shut off the gas supply at a location external to the appliance.
- Do not use this appliance if any part has been under water. The possible damage to a flooded appliance can be extensive and present numerous safety hazards. Any appliance that has been under water must be replaced.

The following chart details the relationship of water temperature and time with regard to scald injury and may be used as a guide in determining the safest water temperature for your applications.

APPROXIMATE TIME / TEMPERATURE RELATIONSHIPS IN SCALDS	
120°F	More than 5 minutes
125°F	1 1/2 to 2 minutes
130°F	About 30 seconds
135°F	About 10 seconds
140°F	Less than 5 seconds
145°F	Less than 3 seconds
150°F	About 1 1/2 seconds
155°F	About 1 second



Hot Water Can Scald!

- Water heated to temperatures for clothes washing, dish washing, and other sanitizing needs can scald and cause permanent injury.
- Children, elderly, and infirm or physically handicapped persons are more likely to be permanently injured by hot water. Never leave them unattended in a bathtub or shower. Never allow small children to use a hot water tap or draw their own bath.
 - If anyone using hot water in the building fits the above description, or if state laws or local codes require certain water temperatures at hot water taps, you must take special precautions:
 - Use lowest possible temperature setting.
 - Install some type of tempering device, such as an automatic mixing valve, at hot water tap or water heater. Automatic mixing valve must be selected and installed according to valve manufacturer's recommendations and instructions.
- Water passing out of drain valves may be extremely hot. To avoid injury:
 - Make sure all connections are tight.
 - Direct water flow away from any person.

Protection Must Be Taken Against Excessive Temperature and Pressure!
 --Installation of a Temperature & Pressure (T&P) relief valve is required.

1 General information

The Lochinvar SIT series indirect water heater (FIG. 1-1) is designed to generate domestic hot water in conjunction with a hot water boiler using forced boiler water circulation. This indirect water heater consists of a 316L Stainless Steel tank in which a smooth 304L stainless steel coil is located (Table 1A). Boiler water is pumped through the coil and heats the water in the tank. This tank is not intended for use in pool heating applications or for heating any fluid other than water. It is also not intended for use in gravity hot water heating systems.

Operating restrictions:

- Maximum domestic hot water temperature is 194°F.
- Maximum boiler water temperature is 210°F.
- Maximum working pressure for the vessel tank is 150 psig.

Table 1A Component Materials	
Component	Material
Tank	316L Steel Stainless Steel
Coil	304L Stainless Steel
Insulation	Polyurethane
Jacket	Polypropylene / ABS

Single-wall heat exchanger


Uniform plumbing code

Single-wall heat exchangers are permitted if they satisfy all of the following requirements --

1. The heat transfer medium is potable water or contains only substances which are recognized as safe by the U.S. Food and Drug Administration.
2. The pressure of the heat transfer medium is maintained less than the normal minimum operating pressure of the potable water system.
3. The equipment is permanently labeled to indicate that only additives recognized as safe by the FDA shall be used in the heat transfer medium.

Other heat exchanger designs may be permitted where approved by the Administrative Authority.

Figure 1-1 Lochinvar SIT Series Indirect Water Heater

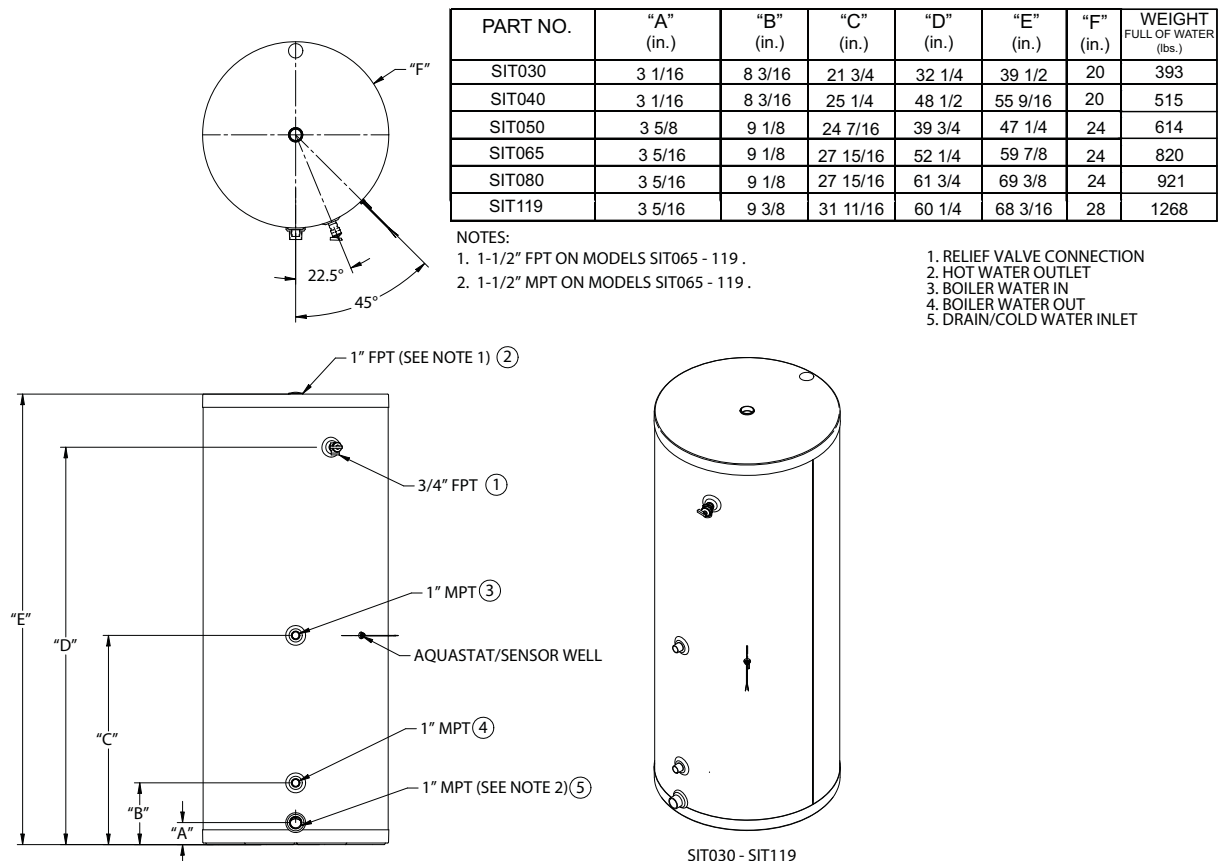

2 Pre-installation

1. The installation must conform to the instructions in this manual and all applicable local, state, provincial, and national codes, laws, regulations, and ordinances. Installations in Canada must conform to B149.2 Installation Code.
2. Be certain the domestic water supply to the tank has physical and chemical characteristics that fall within the limits shown in Table 2A. Where questions exist as to the composition of the water on the job, a qualified water treatment expert should be consulted.

CAUTION

Water with characteristics outside the limits shown in Table 2A may severely shorten the life of the tank due to corrosion. Damage to tanks in such cases is not covered under warranty.

3. Read and understand all installation requirements in this manual.

Table 2A Water Chemistry Requirements		
Water used in the tank must have characteristics falling within the following limits:		
Characteristic	Min.	Max.
Ph	6.0	8.0
Chloride (PPM)	--	80

Locating the tank

1. Choose a location for your water heater centralized to the piping system. You must also locate the SIT water heater where it will not be exposed to freezing temperatures. Additionally, you will need to place the water heater so that the controls, drain, and inlet/outlets are easily accessible. This appliance must not be installed outdoors, as it is certified as an indoor appliance, and must also be kept vertical on a level surface.
2. Keep distance between boiler and water heater to a minimum to:
 - a. reduce piping heat loss
 - b. provide minimal friction loss
3. Figure 1-1 on page 4 shows the weights of all the tanks filled with water. Make sure that the location chosen for the tank is capable of supporting it.

CAUTION

This appliance must be placed where leakage from the relief valve, leakage from the related piping, or leakage from the tank or connections, will not result in damage to the surrounding areas, or to the lower floors of the building. A water heater should always be located in an area with a floor drain or installed in a drain pan suitable for water heaters. Lochinvar shall not be held liable for any such water damage.

4. The tank may be located some distance from the boiler provided the pump is designed to provide the flow called for in Table 3B - Pressure Drop Values, through the coil. Also, the further the tank is from the boiler, the longer the response of the boiler will be to a call from the tank zone. Insulate piping between the boiler and the tank.

⚠ WARNING

Failure to properly support the tank could result in property damage or personal injury.

Recommended clearances

The installation location must provide adequate clearances for servicing and proper operation of the water heater. A 12 inch vertical clearance is recommended from the top of the water heater. A zero clearance is allowed for the sides of the water heater. However, boiler and servicing clearances must be figured when locating the water heater.

3 Boiler side piping

Figures 3-1 thru 3-4 show typical boiler side piping for several common situations. Regardless of which system is used it is imperative that the flow rates called for in Table 3B are developed through the coil. This requires properly sized piping and a properly sized pump.

The system shown in FIG's 3-1 thru 3-4 are described below:

Zone with circulator to Aquastat

This system is like the circulator zone system on a straight heat job except that one of the zones goes to the tank instead of radiation. As on any circulator zone system check valves should be installed in each zone to prevent unwanted circulation through zones which are not calling for heat. Figure 3-1 on page 7 illustrates typical circulator zone piping.

Zone with valve to Aquastat

As with the circulator zone system, this system is just like a standard heating zone system except that one of the zones is connected to the tank coil as shown in FIG. 3-2. The system circulator must be large enough to move boiler water through the coil regardless of the flow rate required through the heating zones.

DHW prioritization

This piping system is designed to provide direct hot water priority over the other zones in the heating system. When there is a Domestic Hot Water (DHW) call for heat, the Knight control will shut off the boiler circulator and activate the domestic hot water circulator. Once the DHW demand is satisfied, the boiler circulator will be readjusted as demand requires. The circulator must be large enough to move the boiler water through the coils. The recommended piping for a DHW priority system is depicted in FIG. 3-3 on page 9.

Multiple tank connections (boiler side)

Multiple tank installations must be done in the "reverse-return" manner. The reason for this is to create the same pressure drop (and therefore, the same flow) through the coil of each tank. The boiler manifold piping must be sized so that each coil has the flow rate called for in Table 3B.

Because the pressure drop through tank coils varies from size to size, it is hard to predict the flow rate that will be developed through each coil when two tanks of different sizes are placed in the same manifold. For this reason it is best not to mix tanks of different sizes in the same zone if their recovery is critical.

Table 3A
Pressure Drop Chart


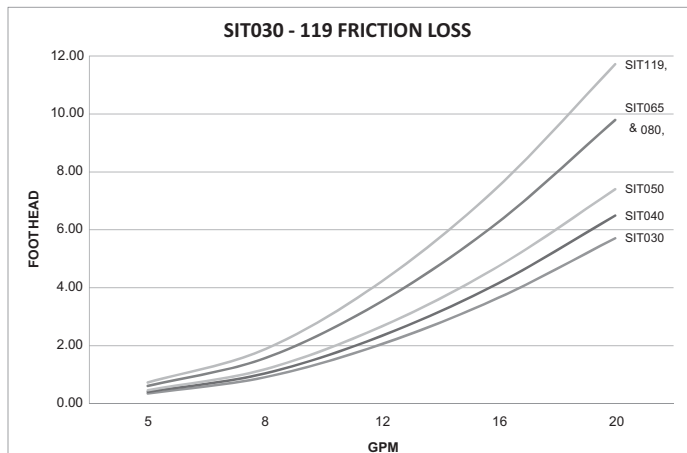


Table 3B
Pressure Drop Values

MODEL	WATER INLET (NPT)	WATER OUTLET (NPT)	COIL CONNECTION (NPT)	COIL LENGTH (FT)	SQ FT SURFACE AREA	PRESSURE DROP (FT/HD)				
						5 GPM	8 GPM	12 GPM	16 GPM	20 GPM
SIT030	1	1	1	24	8.0	.36	.91	2.06	3.66	5.71
SIT040	1	1	1	30.8	10.0	.41	1.04	2.34	4.16	6.49
SIT050	1	1	1	36.5	12.0	.46	1.18	2.67	4.74	7.4
SIT065	1.5	1.5	1	41.5	13.5	.61	1.57	3.53	6.27	9.8
SIT080	1.5	1.5	1	41.5	13.5	.61	1.57	3.53	6.27	9.8
SIT119	1.5	1.5	1	67.3	22.0	.73	1.87	4.22	7.5	11.71

3 Boiler side piping *(continued)*

Figure 3-1 Piping Diagram Zoned with Circulators

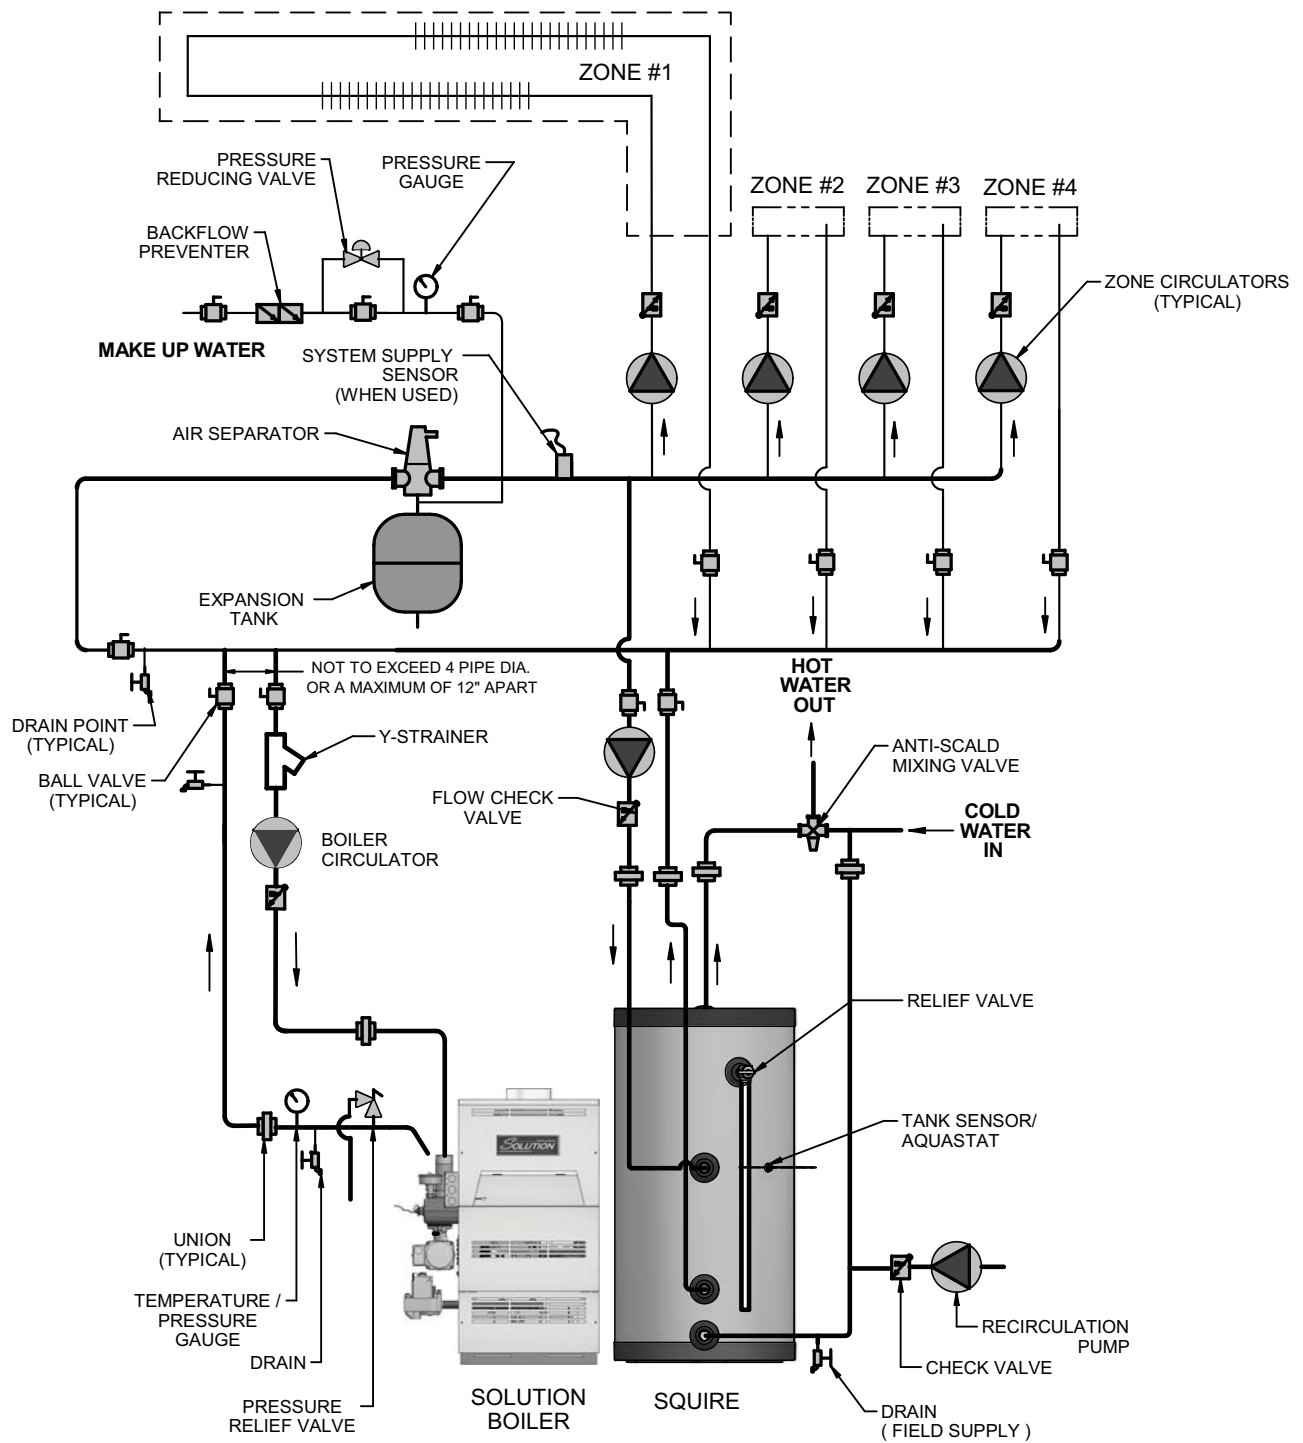

NOTICE


Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

NOTICE

Please note that the installer is responsible for ensuring DHW prioritization when piped as a zone.

3 Boiler side piping

Figure 3-2 Piping Diagram Zoned with Valves

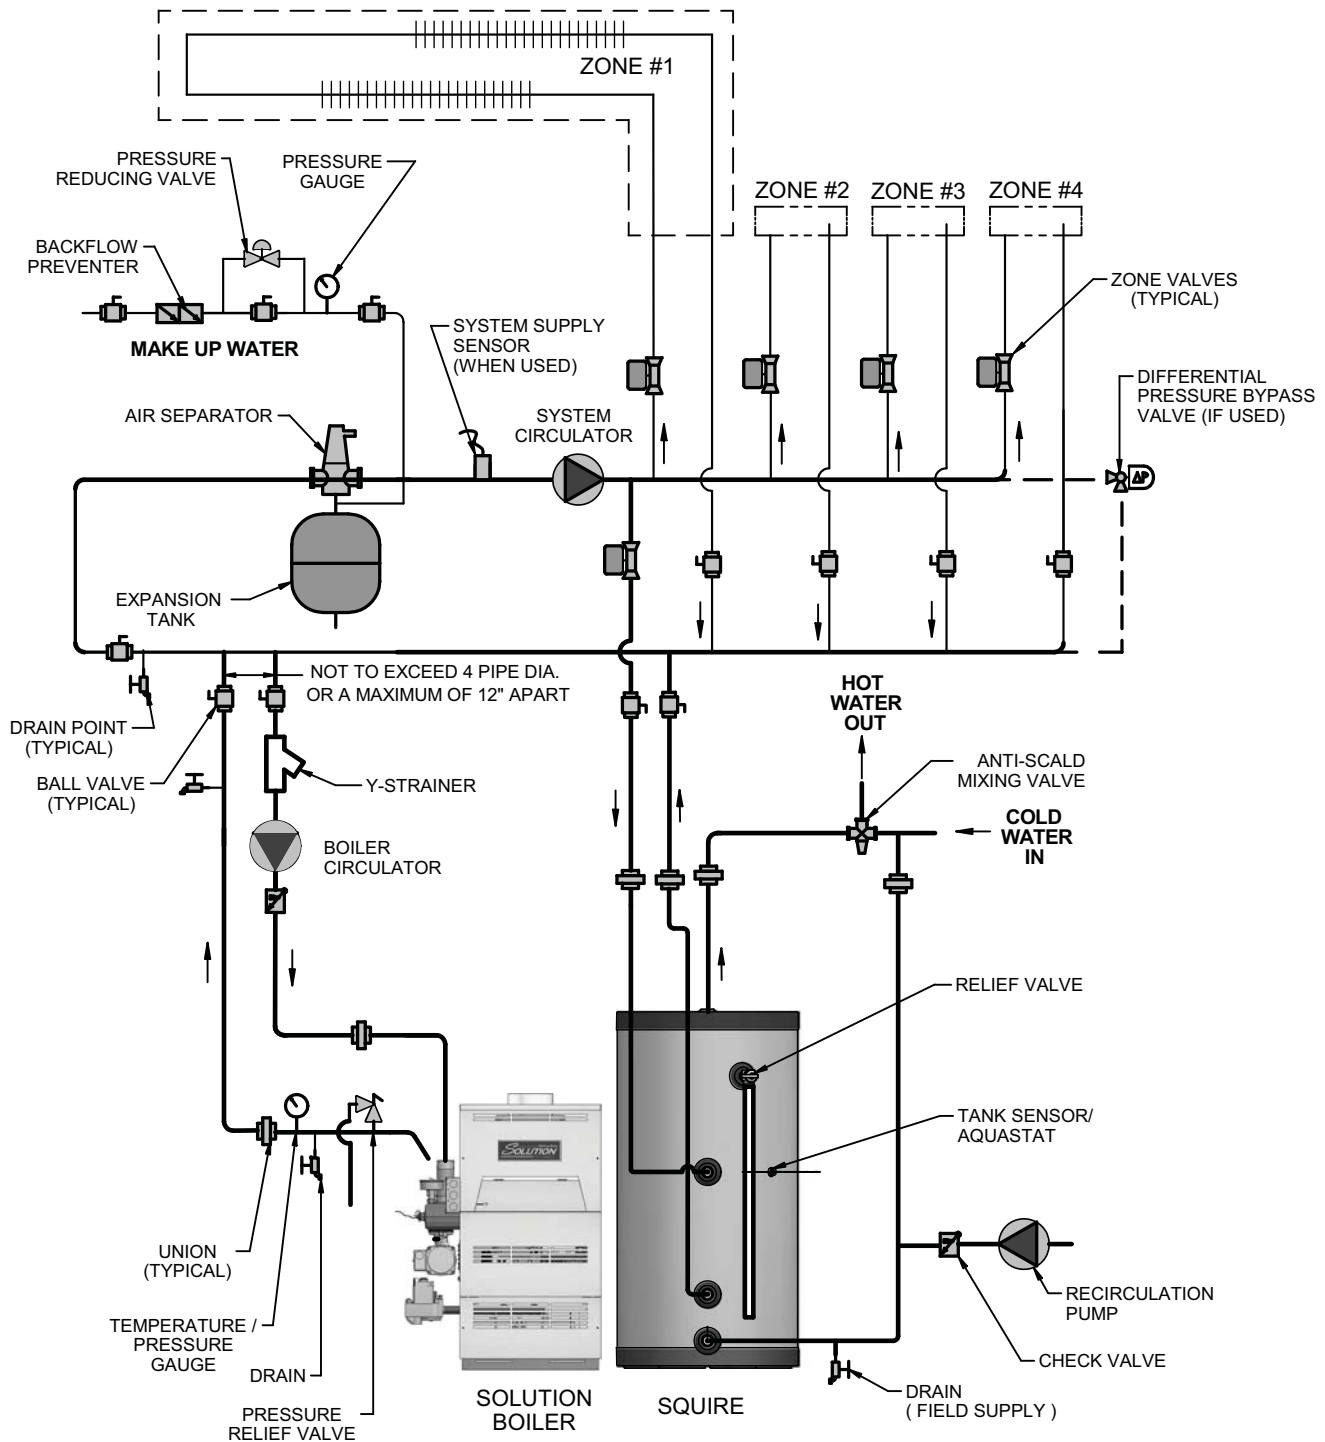

NOTICE


Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

NOTICE

Please note that the installer is responsible for ensuring DHW prioritization when piped as a zone.

3 Boiler side piping *(continued)*

Figure 3-3 Knight Boiler Primary / Secondary Piping

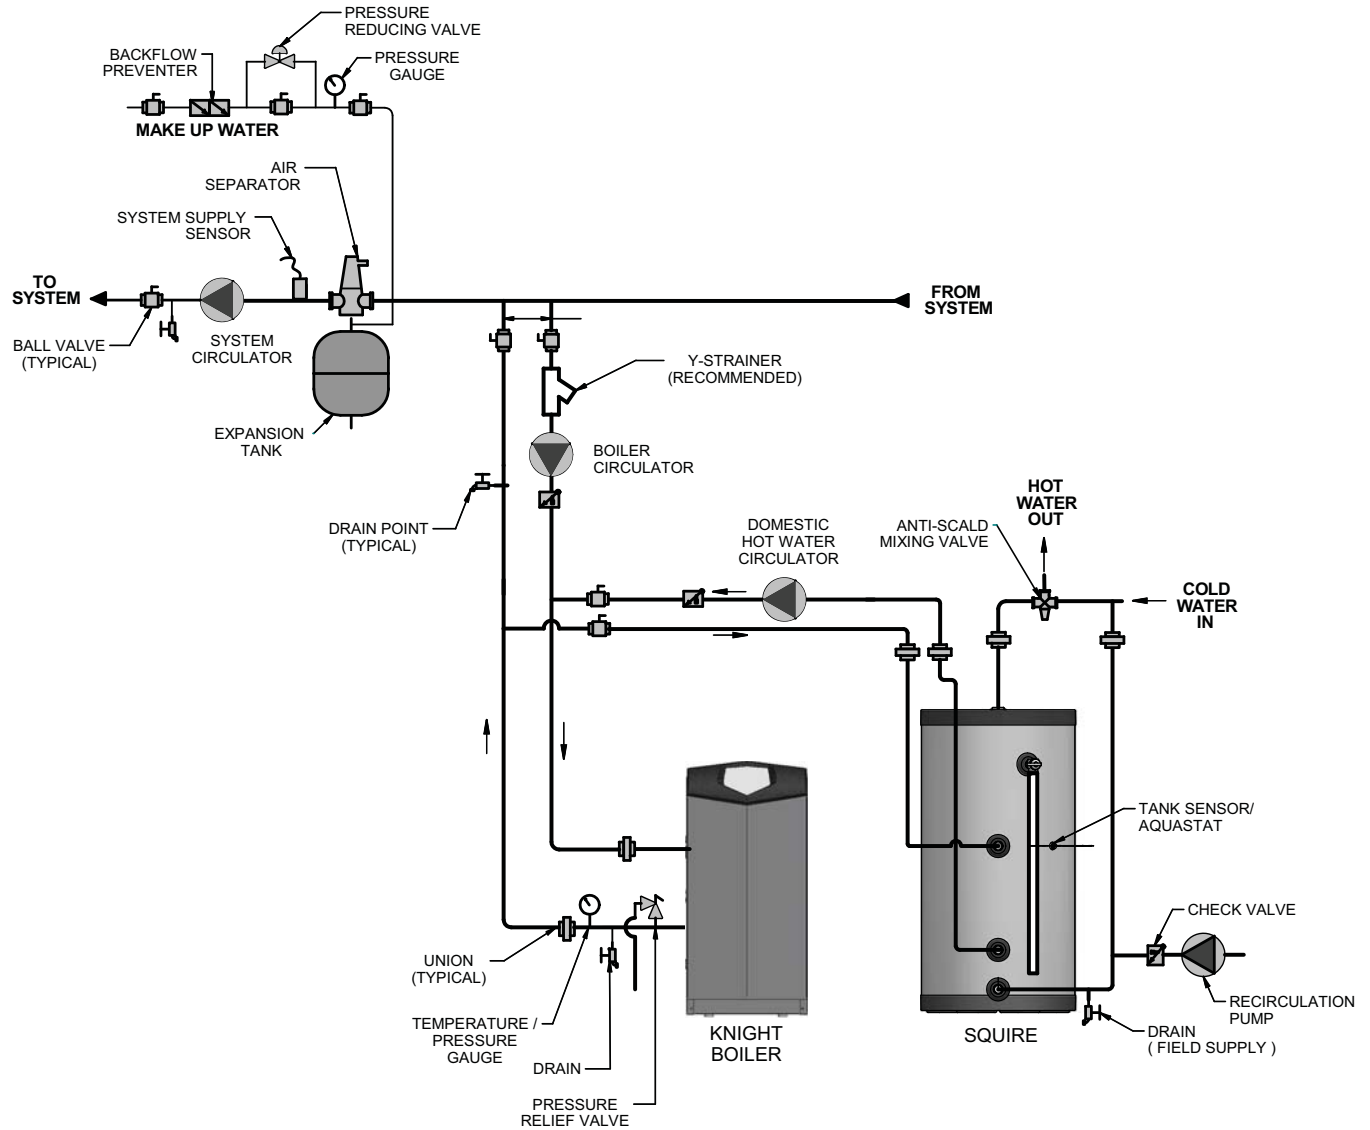


NOTICE

Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

3 Boiler side piping

Figure 3-4 Multiple Tank Connections

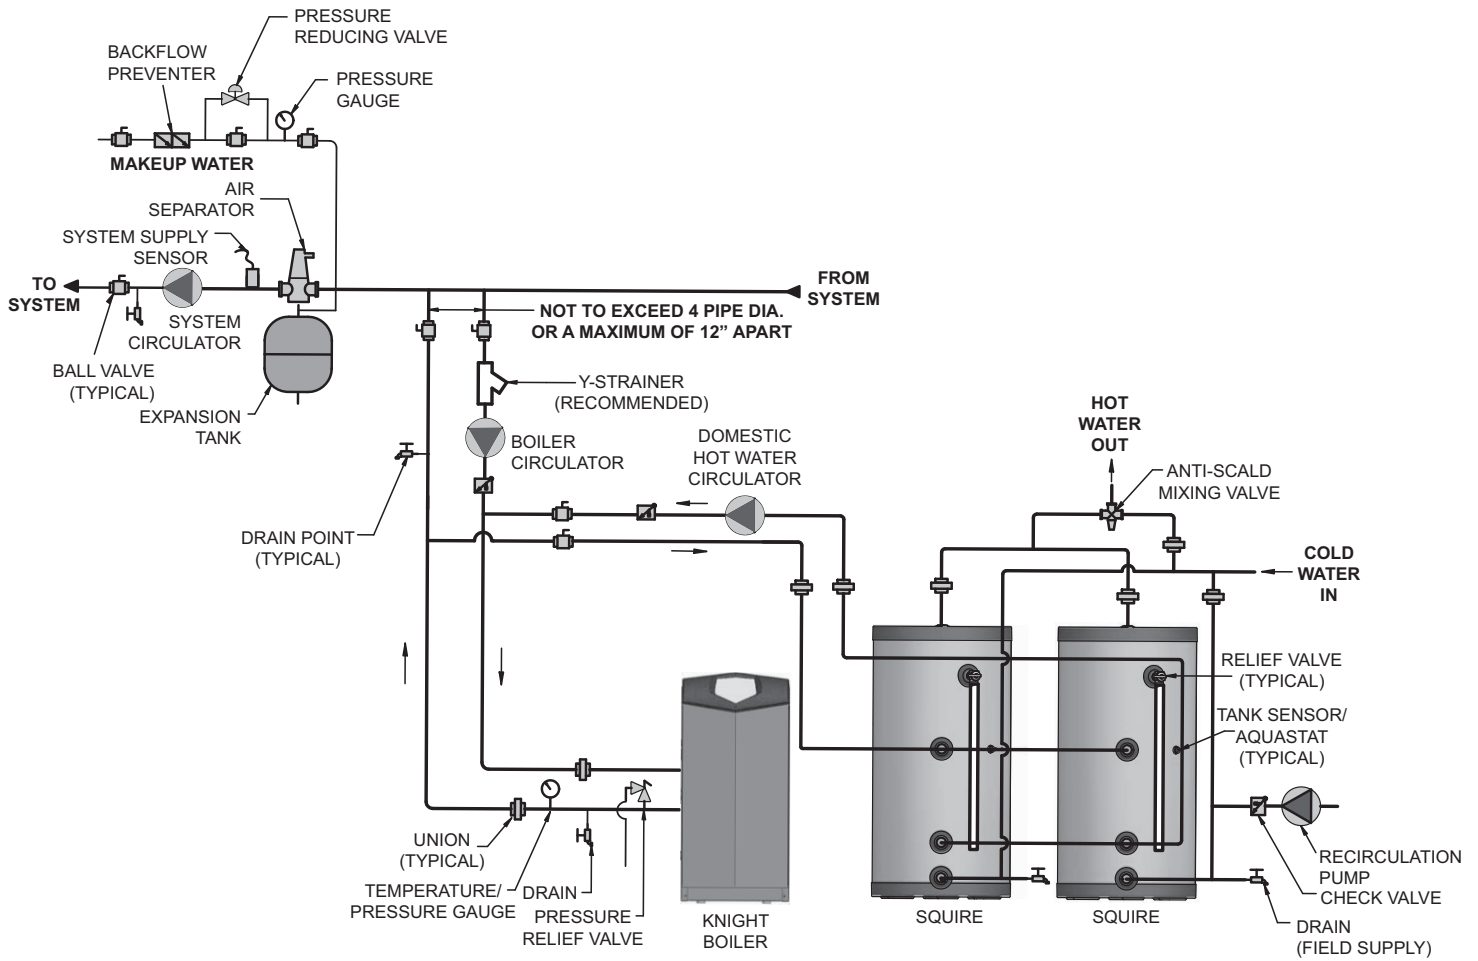

IMG00184

NOTICE

Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

4 Domestic side (tank) piping

Basic domestic piping

Figure 4-2 on page 14 shows typical domestic water piping for a tank. The function of the components shown are as follows:

- a. Shut-off valves (recommended) - Used to isolate the tank for servicing.
- b. Backflow Preventer (required by some codes) - Used to prevent water from backing out of the tank and into the main potable water supply in the event that inlet water pressure drops.
- c. Expansion Tank (required for thermal expansion) - This expansion tank absorbs the increased volume caused by heating water.

Use an expansion tank designed for use on domestic water systems. Refer to the expansion tank manufacturer's literature for the proper size expansion tank to use.

NOTICE

If an expansion tank is used, do not put any valves between the expansion tank and tank inlet.

- d. Unions (optional) - Used to disconnect the tank in the unlikely event that this is necessary.
- e. Drain (required) - Used to drain the tank for inspection or servicing.

Multiple tank domestic water piping

The two pipe reverse return piping uses more pipe than the two pipe direct return piping, but the flow is more balanced and even in the two pipe reverse return piping layout (see FIG. 3-4).

Each tank must have its own T&P valve. It is recommended that each tank be equipped with its own isolation valves, unions, and drains so that one tank may be removed from the system. If local codes require a backflow preventer, check with the appropriate authority to find out whether one backflow preventer may be used for tanks or each tank must be equipped with its own backflow preventer. If each tank must have its own backflow preventer, each tank must also have its own expansion tank. If a common backflow preventer is permitted, an expansion tank must be sized to accommodate the expansion volume of all tanks.

Domestic water piping for distant fixtures

In some cases the furthest fixture may be quite distant from the tank. Such an installation would result in an unacceptable delay before hot water reaches these distant fixtures. Even if all the fixtures are relatively close to the tank, the building owner may want hot water at all fixtures as soon as they are opened.

To prevent delays, return circulation piping with a check valve that allows flow to the inlet of the tank. This should be installed on each branch circuit at the farthest fixture or device, so that hot water is supplied upon demand.

Because hot water is always circulating in the hot water branch, the entire branch should be insulated to prevent excessive heat loss.

4 Domestic side (tank) piping

Anti-scald valves (mixing valves)

Anti-scald valves used with water heaters are also called tempering valves or mixing valves. An anti-scald valve mixes cold water in with the outgoing hot water to assure that hot water reaching a building fixture is at a temperature low enough to be safe. ASSE1017 and ASSE1070 certified valves are recommended.

Usually, the maximum temperature of the outlet water will stay near the setting of the tank control. In some cases, however, hot water usage patterns can cause the outlet water temperature to rise significantly above the control setting.

The temperature of water going to the fixtures may be more carefully controlled through the use of a thermostatic mixing valve. This device blends a controlled amount of cold water with the hot water leaving the tank so that water at a more constant temperature exits the mixing valve. Anti-scald mixing valve piping is illustrated in FIG.'s 3-1 thru 3-4.

⚠ WARNING

An anti-scald mixing valve does not eliminate the risk of scalding.

- * Set the tank thermostat as low as practical.
- * Feel water before bathing or showering.
- * If anti-scald or anti-chill protection is required, use devices specifically designed for such service. Install these devices in accordance with their manufacturer's instructions.


Install drain valve

Drain valve and fittings are supplied by others.

Standard Installation

- Install a tee connection at the domestic cold water inlet (FIG. 4-1).

Figure 4-1 Drain Valve Installed

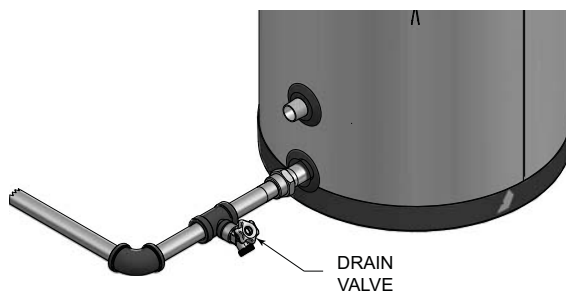

Temperature & pressure (T&P) relief valve

⚠ WARNING

For protection against excessive temperatures and pressure, install temperature and pressure protective equipment required by local codes. This equipment shall not be less than a combination temperature and pressure relief valve certified by a nationally recognized testing laboratory that maintains periodic inspection of production of listed equipment or materials as meeting the requirements for Relief Valves and Automatic Gas Shutoff Devices for Hot Water Supply Systems, ANSI Z21.22 and the Standard CAN1-4.4, Temperature, Pressure, Temperature and Pressure Relief Valves and Vacuum Relief Valves. The combination temperature and pressure relief valve shall be marked with a maximum set pressure not to exceed the maximum working pressure of the water heater. The combination temperature and pressure relief valve shall also have an hourly rated temperature steam BTU discharge capacity not less than shown in Table 4A.

Install the combination temperature and pressure relief valve into the opening provided and marked for this purpose on the water heater.

4 Domestic side (tank) piping *(continued)*

NOTICE

Verify that the combination temperature and pressure relief valve complies with local codes. If the combination temperature and pressure relief valve does not comply with local codes, replace it with one that does. Follow the installation instructions in this section.

Do not place a valve between the combination T&P relief valve and the tank.

Determine T&P relief valve size by the following specifications, unless they conflict with local codes:

- SIT030/040/050 - 3/4" NPT with a minimum CSA Rating of 105,000 Btu/hr.
- SIT065/080/119 - 3/4" NPT with a minimum CSA Rating of 200,000 Btu/hr.

NOTICE

The Lochinvar SIT series water heaters will absorb/store less than 200,000 Btu/hr when domestic water outlet temperature is 210°F and boiler water supply temperature is 240°F. Listed outputs are based on ASME Section VIII Interpretation VIII-1-86-136. Check with local codes for applicability.

Table 4A Minimum Relief Valve (CSA Rating)	
Model	Btu/hr
SIT030	105,000
SIT040	105,000
SIT050	105,000
SIT065	200,000
SIT080	200,000
SIT119	200,000

Standard installation

- Install the T&P relief valve in the connection marked "Relief Valve".

T&P relief valve discharge piping

T&P relief valve discharge piping **MUST** be:

- made of material serviceable for a temperature of 250°F or greater.
- directed so that hot water flows away from all persons.
- directed to a suitable place for disposal.
- installed so as to allow complete draining of the T&P relief valve and discharge line.
- terminated within 6" of the floor.

T&P relief valve discharge piping **MUST NOT** be:

- excessively long. Using more than two (2) elbows or 15 feet of piping can reduce discharge capacity.
- directly connected to a drain. Refer to local codes.
- subject to freezing.

⚠ WARNING

Do not install any valve between the T&P relief valve and the tank connection or on the T&P relief valve discharge piping. Improper placement and piping of T&P relief valve can cause severe personal injury, death or substantial property damage.

⚠ CAUTION


The T&P relief valve is not intended for constant duty, such as relief of pressure due to repeated normal system expansion. Correct this condition by installing a properly sized expansion tank in a domestic water system. Refer to the expansion tank manufacturer's installation instructions for proper sizing.

⚠ WARNING

Failure to install and maintain a new, listed 3/4" X 3/4" T&P relief valve will release the manufacturer from any claim which might result from excessive temperature and pressures.

4 Domestic side (tank) piping

Figure 4-2 Recommended Domestic Water Piping

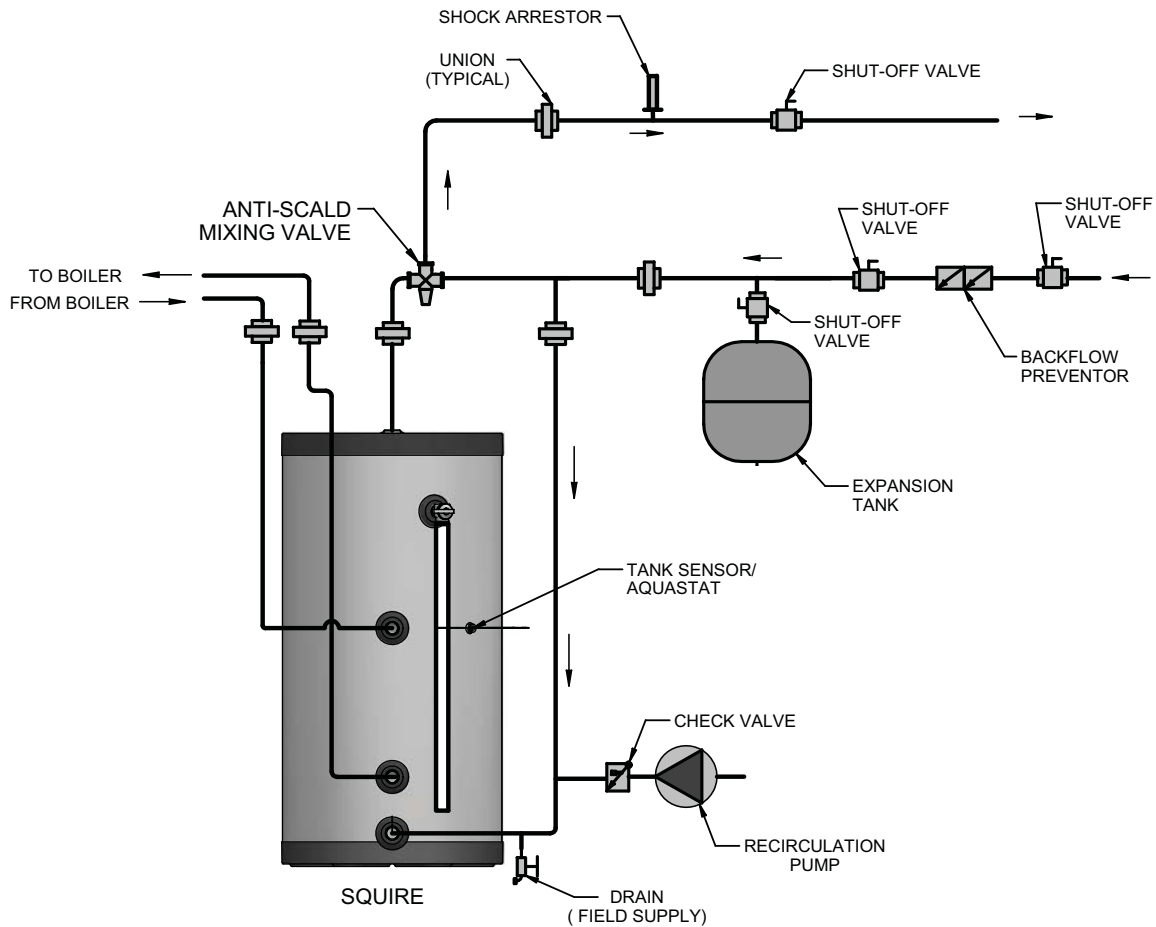**NOTICE**

Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

5 Wiring

Indirect water heater sensor setup (Knight boiler)

CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

NOTICE

The sensor supplied contains an Auto Reset High Limit (194°F).

Install tank sensor


The tank sensor is a dual sensor which controls the temperature of the tank from the boiler (see FIG. 4-1). The tank sensor has a built-in high temperature limit set at 194°F.

1. Install the sensor inside the tank as depicted in FIG. 5-1.
2. Connect the wire leads to the DHW Tank Sensor (AUX) connection point on the Knight boiler connection board (see FIG. 5-1).
3. The Knight boiler will automatically read the sensor and default the tank temperature setting to 125°F.
4. Adjust the tank setpoint program. Reference the Knight Installation and Operation Manual for a detailed explanation of the tank setpoint program.

Connect tank sensor

1. Turn OFF the power to the unit. Use wire strippers to strip one inch of insulation from the ends of each wire that will be spliced.
2. Splice the two ends of bare wire by twisting them together with a pair of electrical pliers. Turn the pliers three or four times to make a sufficient connection.
3. Attach a wire nut at the point where the two wires have been twisted together. Twist the wire nut until it fits snugly, or until it cannot be twisted any more.
4. Wrap the wire nut and the two wires with electrical tape to secure the connection. Cover any exposed wiring with electrical tape.

Figure 5-1 Indirect Water Heater Controlled Using Tank Sensor

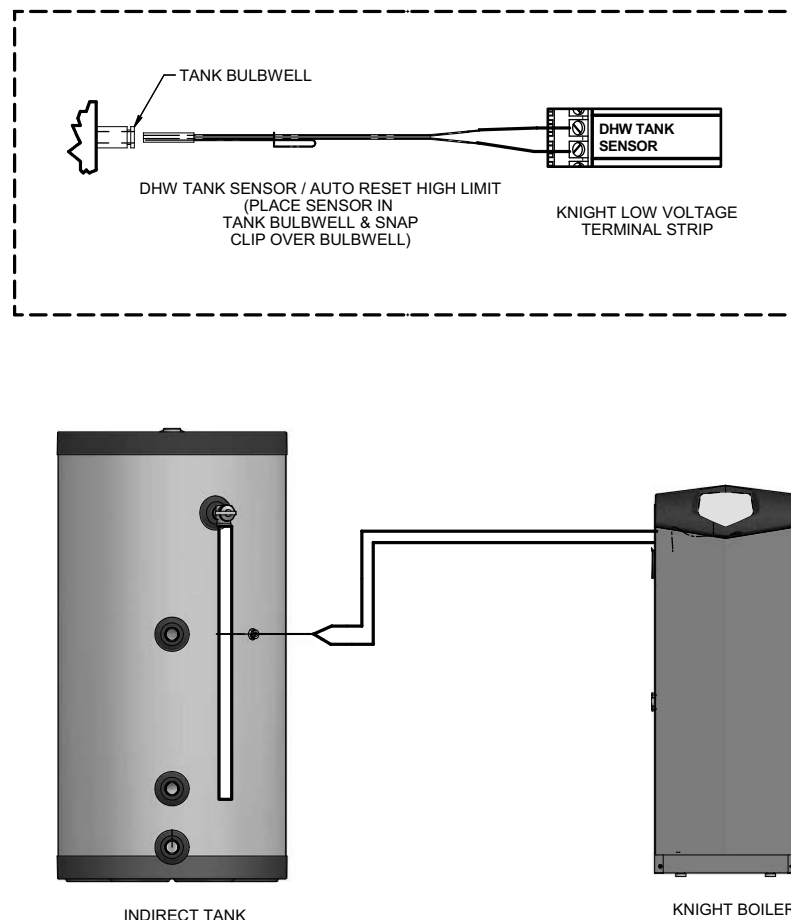


5 Wiring

Indirect water heater controlled using Aquastat and zone circulator / valve

1. Install Aquastat to tank. Aquastat control (TST20016) can be ordered from your local Lochinvar distributor.
2. Connect Aquastat to the zone controller for the Indirect Water Heater Zone.
3. Adjust Aquastat to the desired temperature.

Figure 5-2 Wiring for Zone Control

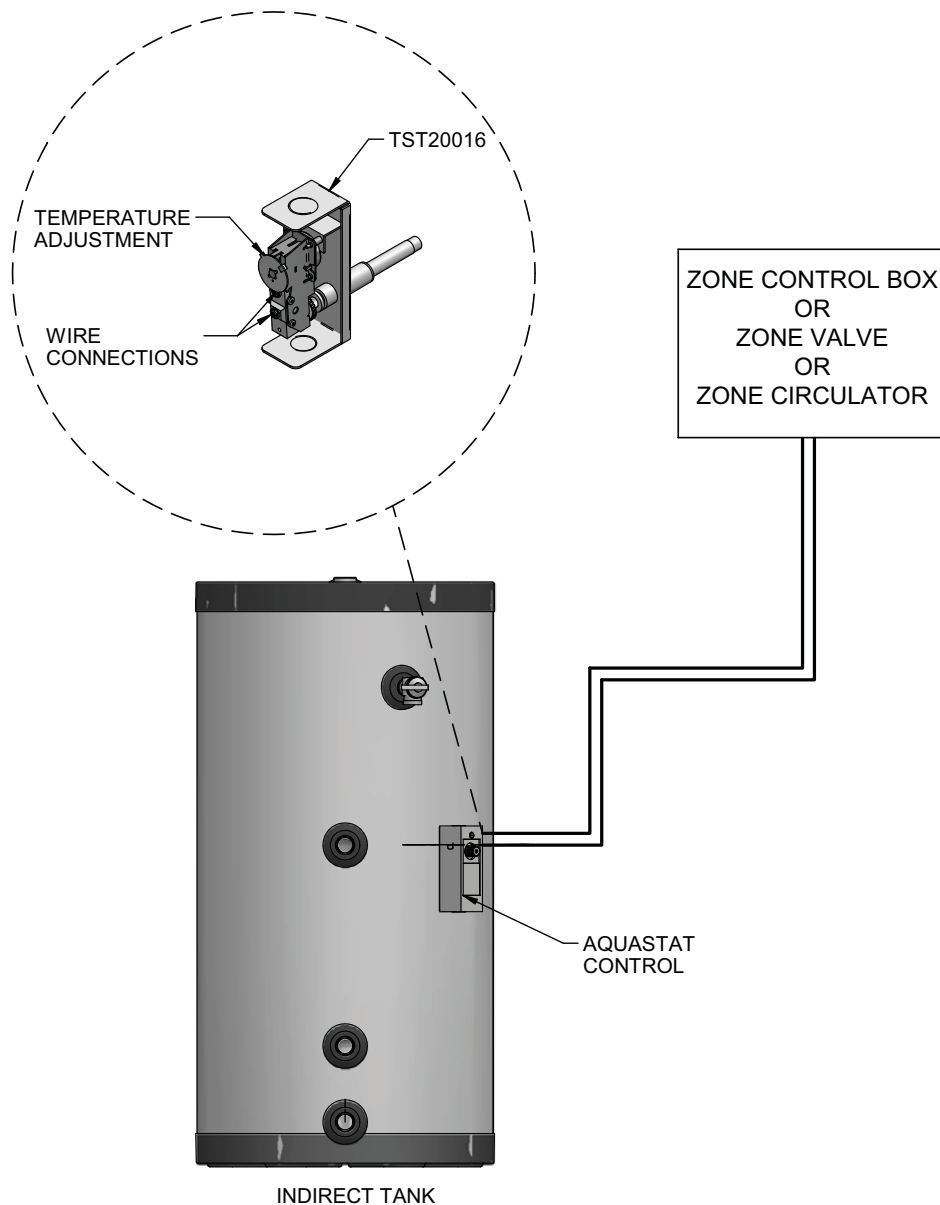

6 Start-up and check-out

1. Make sure the system is free of leaks and that air is purged from the system.

CAUTION

Fix any leaks found before proceeding further. Leakage from the boiler piping can result in severe damage to the boiler.

2. Many soldering fluxes contain Zinc Chloride which can cause severe corrosion damage to stainless steel. After completing all domestic water connections, flush the indirect water heater thoroughly before leaving the installation. This is particularly important if the indirect water heater will be unused for an extended period of time after installation. Flush the indirect water heater by drawing at least three times its volume from the tank.
3. Make sure that all electrical connections are made correctly and that no exposed high voltage wiring is present.
4. Make sure that each zone valve or circulator operates when, and only when, its thermostat calls for heat. Let each zone operate long enough to purge any remaining air from the system.
5. Set the indirect water heater to the desired temperature. Because hot water presents a scald hazard, it is best to set the thermostat at 120°F or lower and raise it only if necessary to provide adequate hot water.
6. Re-enable the burner and allow the boiler to operate. Make sure that the boiler shuts down when the indirect water heater is satisfied.

7 Maintenance

The Lochinvar SIT series indirect water heater is an extremely simple device and as such requires very little maintenance. There are, however, several items which should be checked out on an annual or as needed basis to ensure a reliable supply of hot water:

- * Make sure that the rest of the boiler and domestic water piping is free of leaks.
- * If there is an oil lubricated circulator in the system, make sure it is lubricated as called for by the circulator manufacturer.
- * Make sure that the boiler is maintained in accordance with the boiler manufacturer's instructions.
- * If a water treatment system is required to keep the water chemistry within the parameters shown in Table 2A (see Section 2 - Pre-Installation), make sure that this system is properly maintained.

Maintenance Schedule

Annual service by a qualified service technician should include the following:

- ☐ Any procedure required by local codes.
- ☐ Verify system pressure. Air venting procedure may require adding water to bring boiler system up to pressure, typically 12 psig.
- ☐ Manually operate T&P relief valve at least once a year. This will release some hot water.

⚠ WARNING

Before operating a T&P relief valve, make sure no one is in front of or around the T&P relief valve discharge piping. Hot discharge water can cause severe personal injury or substantial property damage.

- ☐ Move operating lever to open position for a few seconds and then move it back, allowing it to snap closed. After the T&P relief valve is operated, if it continues to release water, close the cold water inlet to the water heater immediately. Follow the draining instructions, and replace the T&P relief valve. If the T&P relief valve weeps periodically, it may be due to thermal expansion. Do not plug the T&P relief valve or discharge piping.

⚠ DANGER

Plugging the T&P relief valve or discharge piping can cause excessive pressure in the water heater, resulting in severe personal injury, death, or substantial property damage.

- ☐ Follow instructions on circulator to oil, if required.
- ☐ Check mixing valve, valves, pipes, and fittings for leaks.
- ☐ Check function of the field-installed controls and valves. See component manufacturer's instructions.
- ☐ Review homeowner's maintenance responsibilities and their frequencies, including any not listed in the following section.

Homeowner monthly maintenance to include:

- ☐ Visually check valves, pipes, and fittings for leaks. Call a qualified service technician to repair leaks.

To Fill the Water Heater

1. Close the water heater drain valve by turning the knob clockwise.
2. Open the cold water supply shutoff valve.
3. Open several hot water faucets to allow air to escape from the system.
4. When a steady stream of water flows from the faucets, the water heater is filled. Close the faucets and check for water leaks at the water heater drain valve, combination temperature and pressure relief valve and the hot and cold water connections.

⚠ WARNING

Water from opened drain valves, unions and other connections may be extremely hot. To avoid severe personal injury, death, or substantial property damage:

- Tighten all drain hose connections.
- Direct hot water away from all persons.

To Drain the Water Heater

Should it become necessary to completely drain the water heater, be sure to follow the steps below:

1. Disconnect the power supply to the heat source. Consult the plumbing professional or electric company in your area for service.
2. Close the cold water supply shutoff valve.
3. Open the drain valve on the water heater.
4. Open a hot water faucet to allow air to enter the system.

Drain the water heater if it will be shut off and exposed to freezing temperatures. Freezing water will expand and damage the water heater.

- If boiler water contains sufficient antifreeze, then only the domestic water needs to be drained.
- If boiler water does not contain sufficient antifreeze, the boiler water and the domestic water must be drained.

If antifreeze is used in the boiler water, check concentration. Boiler water (including additives) must be practically non-toxic, having a toxicity rating or class of 1, as listed in the "Clinical Toxicology of Commercial Products". A maximum 50/50 mixture of inhibited propylene glycol is recommended. Follow the antifreeze manufacturer's instructions.

⚠ WARNING

Do not use automotive, ethylene glycol or petroleum-based antifreeze. Do not use any undiluted antifreeze. This can cause severe personal injury, death, or substantial property damage.

8 Performance data

Table 8A AHRI Chart

 Squire Indirect Water Heater AHRI Rating								
Indirect Water Heater Model Number	Potable Water Volume Gal.	Heat Source Water Volume Gal.	Standby Heat Loss F/hr	Continuous Draw Rating Gal/hr	First Hour Rating Gal/hr	Minimum Heat Output Rate from Heat Source Btu/hr	Minimum Heat Source Flow Rate GPM	Tank Heat Source Friction Loss Feet W.C.
SIT030	27.0	1.1	1.5	160	183	99,000	14.0	3.9
SIT040	40.0	1.6	0.9	181	208	115,000	14.0	4.5
SIT050	51.6	1.7	0.8	209	255	133,000	14.0	5.3
SIT065	67.0	1.9	0.7	263	327	154,000	14.0	5.7
SIT080	81.5	2.1	0.6	266	342	160,000	14.0	5.7
SIT119	113.4	3.2	0.5	308	418	199,999	12.1	6.5

• These ratings were obtained with a heat source output and heat source flow rate as listed in the chart using the parameters of the Domestic Cold Water Inlet at 58°F, Domestic Temperature Rise of 77°F, and a Boiler Temperature Output of 180°F. Other results will be obtained under different conditions.

8 Performance data

How to properly Size Your Indirect Water Heater

Use the First Hour Rating (FHR) to properly size your Indirect Water Heater. The First Hour Rating is the amount of hot water in gallons the heater can supply per hour (starting with a tank full of hot water), depending on tank capacity, source of heat, and the size of the burner.

Estimate your peak hour demand as follows:

- Determine what time of day (morning, noon, evening) you use the most hot water in your home. Keep in mind the number of people living in your home.
- Use the worksheet below to estimate your maximum usage of hot water during this one hour of the day -- this is your peak hour demand. **Note:** The worksheet does not estimate total daily hot water usage.

The worksheet example shows a total peak hour demand of 165 gallons; therefore, this household would need a water heater with a First Hour Rating of no less than 165 gallons.

Fixture Count Guide

To quickly estimate the minimum gallons of hot water required based on a family size number of baths and hot water appliances the First Hour Rating of the Squire must be equal to or exceed the total first hour requirements.

Peak Hour Demand Worksheet				
Description	Fill in the Blank		Example	
40 Gallons for the first 2 people	_____	Gals.	<u>40</u>	Gals.
10 Gallons for each additional person	_____	Gals.	<u>20</u>	Gals.
20 Gallons for each bath after the first (consecutive bath)	_____	Gals.	<u>20</u>	Gals.
10 Gallons if dishwasher is used	_____	Gals.	<u>10</u>	Gals.
20 Gallons if clothes washer is used	_____	Gals.	<u>20</u>	Gals.
TOTAL	_____	Gals.	<u>110</u>	Gals.
Heavy Usage Buffer Use if family members take longer than average showers, etc.	<u>x 1.5</u>		<u>x 1.5</u>	
First Hour Rating	_____	Gals.	165	Gals.

Proceed to pages 21 – 23 of this manual to locate your Indirect Water Heater and Boiler in the sizing charts. Using the First Hour Rating calculated in this worksheet, locate your Indirect Water Heater and Boiler along with your First Hour Rating. This will also determine the flow needed between the Indirect Water Heater and Boiler.

8 Performance data *(continued)*

Table 8B First Hour Rating - 180°F Boiler Loop Water (Knight Boiler)

First Hour Rating - 180°F Boiler Loop Water (Knight Boiler - Models SIT030 - SIT050)																																
Model		SIT030										SIT040										SIT050										
Circulator Flow GPM		5		8		12		16		20		5		8		12		16		20		5		8		12		16		20		
Domestic Outlet		115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	
Boiler Heating Capacity	WB050	108	83	108	83							122	97	122	97							135	110	135	110							
	K/WB080	159	119	159	119							173	133	173	133							188	147	188	147							
	K/WB105	171	128	191	142							217	165	217	165							231	178	231	178							
	K/WB150			191	142	223	165							252	189	267	200							268	204	292	221					
	K/WB210					223	165	240	177							267	200	282	211								292	221	307	232		
	KB285					223	165	240	177	267	196					267	200	282	211	286	213					292	221	307	232	334	251	
	KB399									267	196									286	213									334	251	
	KB500									267	196									286	213									334	251	
MAX BTU INPUT		77008		89165		105532		114761		129676		92998		112972		123331		129574		132764		94115		114116		125111		134044		146207		

First Hour Rating - 180°F Boiler Loop Water (Knight Boiler - SIT065 - SIT119)																																	
Model		SIT065										SIT080										SIT119											
Circulator Flow GPM		5		8		12		16		20		5		8		12		16		20		5		8		12		16		20			
Domestic Outlet		115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140		
Boiler Heating Capacity	WB050	153	128	153	128							163	138	163	138							197	172	197	172								
	K/WB080	207	165	207	165							216	175	216	175							250	209	250	209								
	K/WB105	250	196	250	196							259	206	259	206							292	239	292	239								
	K/WB150			319	245	328	252							338	262	338	262							372	296	372	296						
	K/WB210					356	271	386	293							374	288	409	312							476	371	476	371				
	KB285					356	271	386	293	388	294					374	288	409	312	424	323					501	388	573	438	596	454		
	KB399									388	294									424	323											596	454
	KB500									388	294									424	323											596	454
MAX BTU INPUT		118488		129139		146864		163768		167924		115860		139106		154002		171229		181544		141419		190161		204795		237649		253504			

8 Performance data *(continued)*

Table 8C First Hour Rating - 180°F Boiler Loop Water (Universal Sizing)

First Hour Rating - 180°F Boiler Loop Water (Universal Sizing - 45,000 - 295,000 Btu/hr)																			
Model		SIT030										SIT040							
Circulator Flow GPM		5		8		12		16		20		5		8		12		16	
Domestic Outlet		115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140
Boiler Heating Capacity	45,000	108	83	108	83						122	97	122	97					
	60,000	136	103	136	103						150	118	150	118					
	75,000	165	123	165	123						179	138	179	138					
	95,000	171	128	191	142	202	150				217	165	217	165	217	165			
	115,000	171	128	191	142	223	165	240	177			217	165	252	189	252	189	252	189
	140,000			191	142	223	165	240	177	267	196			252	189	267	200	282	211
	165,000							240	177	267	196					267	200	282	211
	195,000																		
	225,000																		
	260,000																		
	295,000																		
MAX BTU INPUT		77008		89165		105532		114761		129676		92998		112972		123331		129574	

First Hour Rating - 180°F Boiler Loop Water (Universal Sizing - 45,000 - 295,000 Btu/hr)																																			
Model		SIT065										SIT080								SIT119															
Circulator Flow GPM		5		8		12		16		20		5		8		12		16		20		5		8		12		16		20					
Domestic Outlet		115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140				
Boiler Heating Capacity	45,000	153	128	153	128							163	138	163	138							197	172	197	172										
	60,000	183	149	183	149							193	159	193	159							226	193	226	193										
	75,000	213	170	213	170							222	180	222	180							255	213	255	213										
	95,000	252	197	252	197	252	197					261	207	261	207	261	207					294	241	294	241	294	241								
	115,000	291	226	291	226	291	226	291	226			300	235	300	235	300	235	300	235			333	268	333	268	333	268	333	268						
	140,000	305	235	319	245	338	259	338	259	338	259	304	238	347	268	347	268	347	268	347	268	384	302	382	302	382	302	382	302	382	302				
	165,000	305	235	319	245	356	271	386	293	388	294	304	238	349	270	374	288	395	302	395	302	387	306	429	337	429	337	429	337	429	337				
	195,000				319	245	356	271	386	293	388	294			349	270	374	288	409	312	424	323			483	375	485	376	485	376	485	376			
	225,000						356	271	386	293	388	294					374	288	409	312	424	323					501	388	548	421	541	416			
	260,000										388	294								424	323								573	438	596	454			
295,000																																		596	454
MAX BTU INPUT		118488		129139		146864		163768		167924		115860		139106		154002		171229		181544		141419		190161		204795		237649		253504					

8 Performance data (continued)

Table 8D First Hour Rating 200°F Boiler Loop Water (Universal Sizing)

First Hour Rating - 200°F Boiler Loop Water (Universal Sizing - 45,000 - 295,000)																																																	
Model		SIT030										SIT040										SIT050																											
Circulator Flow GPM		5		8		12		16		20		5		8		12		16		20		5		8		12		16		20																			
Domestic Outlet		115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140																		
Boiler Heating Capacity	45,000	105	84	105	84							118	97	118	97							132	109	132	109																								
	60,000	133	104	133	104							145	117	145	117							160	130	160	130																								
	75,000	160	124	160	124							173	137	173	137							188	151	188	151																								
	95,000	197	151	197	151	197	151					209	163	209	163	209	163					226	179	226	179	226	179																						
	115,000	224	171	233	176	233	176	233	176			245	190	245	190	245	190	245	190			263	206	263	206	263	206	263	206																				
	140,000				255	194	277	210	277	210	277	210	271	209	291	224	291	224	291	224	291	224	295	230	311	241	311	241	311	241	311	241																	
	165,000						277	210	308	232	317	240						335	256	335	256	335	256	295	230	329	254	358	276	358	276	358	276																
	195,000								308	232	352	265						335	256	362	276	375	285				329	254	375	288	399	306	404	309															
	225,000																																					375	288	399	306	404	309						
	260,000																																															404	309
	295,000																																																
	325,000																																																
MAX BTU INPUT		107695		126355		140102		153900		184539		129980		151466		164149		178059		186356		131965		159672		172739		187562		189713																			

First Hour Rating - 200°F Boiler Loop Water (Universal Sizing - 45,000 - 295,000)																																											
Model		SIT065										SIT080										SIT119																					
Circulator Flow GPM		5		8		12		16		20		5		8		12		16		20		5		8		12		16		20													
Domestic Outlet		115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140	115	140												
Boiler Heating Capacity	45,000	150	127	150	127							161	138	161	138							194	171	194	171																		
	60,000	179	148	179	148							189	159	189	159							222	192	222	192																		
	75,000	207	169	207	169							218	180	218	180							250	213	250	213																		
	95,000	245	197	245	197	245	197					255	208	255	208	255	208					288	241	288	241	288	241																
	115,000	283	225	283	225	283	225	283	225			293	236	293	236	293	236					325	268	325	268	325	268																
	140,000	331	260	331	260	331	260	331	260	331	260	341	270	341	270	341	270	341	270			373	303	373	303	373	303	373	303														
	165,000	350	274	377	294	377	294	377	294	377	294	374	295	386	304	386	304	386	304	386	304	419	337	419	337	419	337	419	337	419	337												
	195,000	350	274	391	305	432	337	432	338	432	329	374	295	440	343	440	343	440	343	440	343	479	381	479	381	479	381	479	381	479	381												
	225,000				391	305	445	345	487	375	487	375			440	343	475	369	498	386	498	386			533	422	533	422	533	422	533	422											
	260,000							495	381	499	384							475	369	525	406	536	414					601	470	601	470	601	470										
	295,000																					536				414											667				519	667	519
	325,000																					536				414											688				534	695	540
MAX BTU INPUT		146842		171693		200077		225514		235239		154198		192471		211523		237540		247474		194143		245777		282047		305766		319025													

Revision Notes: Revision A (ECO C05265) initial release.

Revision B (ECO C05399) reflects the addition of the Pressure Drop Chart and updates made to the Performance Data Charts.

Revision C (ECO C05587) reflects the update of tables 3A and 3B (Pressure Drop charts) on page 6, table 4A on page 13, the update of the "Domestic water piping" paragraph on page 11, and the update of Performance data table 8A on page 19.

Revision D (ECO C05788) reflects new images for section 3 "Boiler Side Piping" FIG. 3-1 -- 3-4, a new image for section 4 "Domestic Side (Tank) Piping" FIG. 4-2, and the update of the Pressure Drop chart on page 6.

Revision E (ECO C06035) reflects the update of FIG. 1-1 on page 4 to revise listed dimensions.

Revision F (ECO C06300) reflects the update of images and additional CSA cautions on manual cover and "Connect tank sensor" section added to "Wiring" on page 15.

Revision G (ECO C06670) reflects the update of the IBR chart information on page 19.

Revision H (ECO C08396) reflects the addition of the First Hour Ratings of SIT080 at 20GPM for 115°F to Table 8B on page 21.

Revision I (ECO C09691) reflects the update of Table 8A on page 19 to reflect the new AHRI logo and the update of FIG. 3-4 on page 10.

Revision J (ECO C10122) reflects the update of rating information for SIT119 Models within Table 8A on page 19.

Revision K (ECO C10535) reflects the update of SIT080 First Hour Rating within Table 8A on page 19.