



# **UP TO 95% AFUE**

# Multi-Position, Multi-Speed Gas Furnaces

#### **Standard Features**

- Dual-diameter tubular heat exchanger
- Two-stage gas valve with Dual\$aver<sup>™</sup> technology that allows installer to activate the two-stage valve with the flip of a dipswitch
- 110V Silicon Nitride igniter
- Furnace control board with self-diagnostics, color-coded low-voltage terminals, and provisions for electronic air cleaner and 24-volt humidifiers
- Control board stores the last five diagnostic codes in memory; simple push-button activation outputs the fault history to a flashing red LED
- Low constant fan allows homeowner to activate the low heat speed to efficiently circulate air throughout the home
- Self-adjusting feature automatically adjusts to high or low stage based on outside temperature without an outdoor temperature sensor
- Dual-certified for sealed combustion direct vent (2-pipe) or non-direct vent (1-pipe) applications
- Easy-to-install top venting is standard; alternate flue/vent located on the right (GMH95)
- All models comply with California NOx emissions standards

#### **Cabinet Features**

- Fully insulated, heavy-gauge steel cabinet with durable baked-enamel finish
- Foil-faced insulation lines the heat exchanger
- Designed for multi-position installation GMH95: upflow, horizontal left or right; GCH95/GCH9: downflow, horizontal left or right
- Airtight solid bottom for side-return applications and easycut tabs for effortless removal in bottom air inlet applications
- Convenient left/right connection for gas/electric service
- Coil and furnace fit flush for most installations



#### Contents

Nomenclature	2
Product Specifications	3
Dimensions	
Airflow Data	7
Wiring Diagrams	9
Accessories	












<sup>\*</sup> Complete warranty details available from your local dealer or at www.goodmanmfg.com. To receive the Lifetime Heat Exchanger Limited Warranty (good for as long as you own your home), 10-Year Unit Replacement Limited Warranty and 10-Year Parts Limited Warranty, online registration must be completed within 60 days of installation. Online registration is not required in California or Québec.





## Nomenclature

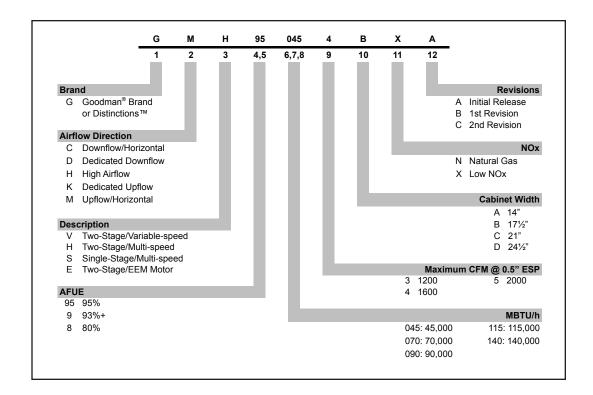





## SPECIFICATIONS FOR GMH95

	GMH95 0453BXA	GMH95 0703BXA	GMH95 0704CXA	GMH95 0904CXA	GMH95 0905CXA	GMH95 1155DXA
HEATING CAPACITY						
Input <sup>1</sup>	46,000	69,000	69,000	92,000	92,000	115,000
Natural Gas Output <sup>1</sup>	44,400	66,400	66,400	89,000	89,000	110,500
LP Gas Output <sup>1</sup>	39,330	58,995	58,995	78,660	78,660	98,325
AFUE²	95	95	95	95	95	95
Available AC @ 0.5" ESP	3	3	4	4	5	5
Temperature Rise Range (°F)	35 - 65	30 - 60	35 - 65	30 - 60	30 - 60	35 - 65
CIRCULATOR BLOWER						
Size (D x W)	10" x 8"	10" x 8"	10" x 10"	10" x 10"	11" x 10"	11" x 10"
Horsepower @ 1075 RPM	1/3	1/3	1/2	1/2	3/4	3/4
Speed	4	4	4	4	4	4
Vent Diameter³	2"	2"	2"	2"	3"	3"
No. of Burners	2	3	3	4	4	5
Disposable Filter Size (in²)	580	580	770	770	960	960
ELECTRICAL DATA						
Min. Circuit Ampacity <sup>4</sup>	9.4	9.4	13.8	13.8	13.2	13.2
Max. Overcurrent Device (amps)⁵	15	15	15	15	15	15
SHIP WEIGHT (LBS)	132	135	136	158	172	175

<sup>&</sup>lt;sup>1</sup> Natural Gas BTU/h. For altitudes above 2,000', reduce input rating 4% for each 1,000' above sea level.

- All furnaces are manufactured for use on 115 VAC, 60 Hz, single-phase electrical supply.
- Gas Service Connection ½" FPT
- Important: Size fuses and wires properly and make electrical connections in accordance with the National Electrical Code and/or all existing local codes.

DOE AFUE based upon Isolated Combustion System (ICS)

Installer must supply one or two PVC pipes: one for combustion air (optional) and one for the flue outlet (required). Vent pipe must be either 2" or 3" in diameter, depending upon furnace input, number of elbows, length of run and installation (1 or 2 pipes). The optional Combustion Air Pipe is dependent on installation/code requirements and must be 2" or 3" diameter PVC.

<sup>&</sup>lt;sup>4</sup> Minimum Circuit Ampacity = (1.25 x Circulator Blower Amps) + ID Blower amps. Wire size should be determined in accordance with National Electrical Codes. Extensive wire runs will require larger wire sizes.

Maximum Overcurrent Protection Device refers to maximum recommended fuse or circuit breaker size. May use fuses or HACR-type circuit breakers of the same size as noted.

## Specifications for GCH95

	GCH95 0453BX	GCH95 0703BX	GCH95 0704CX	GCH95 0904CX	GCH95 0905DX	GCH9 1155DX
HEATING CAPACITY						
Input <sup>1</sup>	46,000	69,000	69,000	92,000	92,000	115,000
Natural Gas Output <sup>1</sup>	44,400	66,400	66,400	89,000	89,000	106,500
LP Gas Output <sup>1</sup>	39,330	58,995	58,995	78,660	78,660	96,255
AFUE <sup>2</sup>	95.0	95.0	95.0	95.0	95.0	93.0
Available AC @ 0.5" ESP	3	3	4	4	5	5
Temperature Rise Range (°F)	25 - 55	35 - 65	25 - 55	40 - 70	35 - 65	40 - 70
CIRCULATOR BLOWER						
Size (D x W)	10" x 8"	10" x 8"	10" x 10"	10" x 10"	11" x 10"	11" x 10"
Horsepower @ 1075 RPM	1/3	1/3	1/2	1/2	3/4	3/4
Speed	4	4	4	4	4	4
Vent Diameter <sup>3</sup>	2"	2"	2"	2"	2"	2"
No. of Burners	2	3	3	4	4	5
Disposable Filter Size (in²)	576	564	564	752	752	940
ELECTRICAL DATA						
Min. Circuit Ampacity⁴	9.8	9.8	12.9	12.9	13.4	13.2
Max. Overcurrent Device (amps)⁵	15	15	15	15	15	15
SHIP WEIGHT (LBS)	132	135	135	156	173	175

<sup>&</sup>lt;sup>1</sup> Natural Gas BTU/h. For altitudes above 2,000′, reduce input rating 4% for each 1,000′ above sea level.

- All furnaces are manufactured for use on 115 VAC, 60 Hz, single-phase electrical supply.
- Gas Service Connection ½" FPT
- Important: Size fuses and wires properly and make electrical connections in accordance with the National Electrical Code and/or all existing local codes.

<sup>&</sup>lt;sup>2</sup> DOE AFUE based upon Isolated Combustion System (ICS)


<sup>&</sup>lt;sup>3</sup> Installer must supply one or two PVC pipes: one for combustion air (optional) and one for the flue outlet (required). Vent pipe must be either 2" or 3" in diameter, depending upon furnace input, number of elbows, length of run and installation (1 or 2 pipes). The optional Combustion Air Pipe is dependent on installation/code requirements and must be 2" or 3" diameter PVC.

<sup>&</sup>lt;sup>4</sup> Minimum Circuit Ampacity = (1.25 x Circulator Blower Amps) + ID Blower amps. Wire size should be determined in accordance with National Electrical Codes. Extensive wire runs will require larger wire sizes.

<sup>&</sup>lt;sup>5</sup> Maximum Overcurrent Protection Device refers to maximum recommended fuse or circuit breaker size. May use fuses or HACR-type circuit breakers of the same size as noted.

5

## **GMH95 DIMENSIONS**

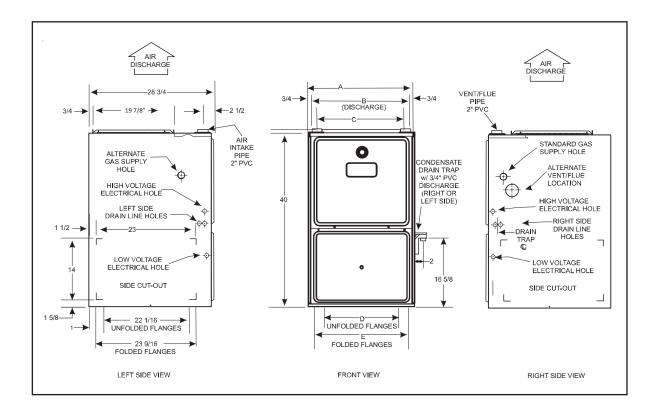

MODEL	Α	В	С	D	E
GMH950453BXA	17½"	16"	13%"	121/8"	13%"
GMH950703BXA	17½"	16"	13%"	121/8"	13%"
GMH950704CXA	21"	19½"	16%"	16"	17½"
GMH950904CXA	21"	19½"	16%"	16"	17½"
GMH950905CXA	21"	19½"	20%"	19%"	20%"
GMH951155DXA	24½"	23"	20%"	19%"	20%"

#### NOTES:


- Installer must supply one or two PVC pipes: one for combustion air (optional) and one for the flue outlet (required). Vent pipe must be either 2" or 3" in diameter, depending upon furnace input, number of elbows, length of run, and installation (1 or 2 pipes). The optional combustion air pipe is dependent on installation/code requirements and must be 2" or 3" diameter PVC.
- Line voltage wiring can enter through the right or left side of furnace. Low-voltage wiring can enter through the right or left side of furnace.
- Conversion kits for high-altitude natural gas operation are available. Contact your Goodman distributor or dealer for details.
- Installer must supply the following gas line fittings, according to which entrance is used:
   Left: One 90° street elbow; one 2½" pipe nipple; one 90° elbow; straight pipe; one ground joint union
   Right: Straight pipe to reach gas valve
- Installations using a bottom return: Failure to unfold duct flanges will reduce airflow area by approximately 18%. This could result in performance and noise issues.

#### MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS

POSITION	SIDES	REAR	FRONT	Воттом	FLUE	ТОР	
Upflow	0"	0"	1"	С	0"	1"	
Horizontal	6"	0"	1"	С	0"	4"	

- C = If placed on combustible floor, the floor MUST be wood ONLY.
- For servicing or cleaning, a 24" front clearance is recommended.
- Unit connections (electrical, flue, and drain) may necessitate greater clearances than the minimum clearances listed above.
- In all cases, accessibility clearance must take precedence over clearances from the enclosure where accessibility clearances are greater.
- Approved for line contact in the horizontal position

## **GCH95 DIMENSIONS**

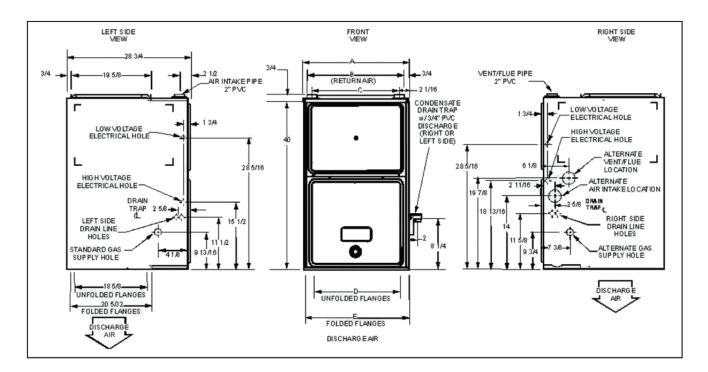

MODEL	Α	В	С	D	E
GCH950453BXA	17½"	16"	12¾"	14½"	16"
GCH950703BXA	17½"	16"	12¾"	14½"	16"
GCH950704CXA	21"	19½"	16%"	18"	19½"
GCH950904CXA	21"	19½"	16%"	18"	19½"
GCH950905DXA	24½"	23"	20%"	21½"	23"
GCH91155DXA	24½"	23"	20%"	21½"	23"

#### NOTES:

- Installer must supply one or two PVC pipes: one for combustion air (optional) and one for the flue outlet (required). Vent pipe must be either 2" or 3" in diameter, depending upon furnace input, number of elbows, length of run, and installation (1 or 2 pipes). The optional combustion air pipe is dependent on installation/code requirements and must be 2" or 3" diameter PVC.
- Line voltage wiring can enter through the right or left side of furnace. Low-voltage wiring can enter through the right or left side of furnace.
- Conversion kits for high-altitude natural gas operation are available. Contact your Goodman distributor or dealer for details.
- Installer must supply the following gas line fittings, according to which entrance is used:
- Left: One 90° street elbow; one 2½" pipe nipple; one 90° elbow; straight pipe; one ground joint union Right: Straight pipe to reach gas valve
- Installations using a bottom return: Failure to unfold duct flanges will reduce airflow area by approximately 18%. This could result in performance and noise issues.

#### MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS

Position	SIDES	REAR	FRONT	FRONT BOTTOM		ТОР	
Downflow	0"	0"	1"	NC	0"	1"	
Horizontal	6"	0"	1"	С	0"	4"	

C = Combustible: If placed on combustible floor, the floor MUST be wood ONLY.

NC = Non-Combustible: A combustible floor sub-base must be used for installation on combustible flooring

- For servicing or cleaning, a 24" front clearance is recommended.
- Unit connections (electrical, flue and drain) may necessitate greater clearances than the minimum clearances listed below.
- In all cases, accessibility clearance must take precedence over clearances from the enclosure where accessibility clearances are greater.

## **GMH95 Airflow Data**

(CFM & TEMPERATURE RISE VS. EXTERNAL STATIC PRESSURE)

						EXTER	RNAL STA	TIC PRES	SURE, (IN	ICHES W	ATER COI	.umn)			
MODEL	MOTOR SPEED	TONS AC <sup>1</sup>	0.	1	0.	.2	0.	.3	0.	.4	0.	.5	0.6	0.7	0.8
	0. 222		CFM	RISE	CFM	RISE	CFM	RISE	CFM	RISE	CFM	RISE	CFM	CFM	CFM
	High	3	1,352	29	1,318	30	1,260	31	1,202	33	1,128	35	1,044	955	853
GMH95	Med	2.5	1,214	32	1,172	34	1,123	35	1,064	37	1,012	39	938	859	741
0453BXA	Med-Lo	2	997	40	994	40	960	41	923	43	884	45	817	741	611
	Low	1.5	757	52	753	52	734	54	704	56	674	59	620	524	438
	High	3	1,449	41	1,409	42	1,326	45	1,273	47	1,201	49	1,194	1,136	1,018
GMH95 0703BXA	Med	2.5	1,192	50	1,172	51	1,141	52	1,094	54	1,046	57	973	904	793
	Med-Lo	2	981	61	962	62	943	63	917	65	888	67	830	764	665
	Low	1.5	750	79	730	81	714	83	692	86	657	90	620	570	502
	High	4	2,069	29	1,965	30	1,871	32	1,756	34	1,661	36	1,549	1,415	1,275
GMH95	Med	3.5	1,752	34	1,724	34	1,667	36	1,603	37	1,488	40	1,402	1,290	1,082
0704CXA	Med-Lo	3	1,437	41	1,437	41	1,417	42	1,369	43	1,320	45	1,256	1,140	984
	Low	2.5	1,184	50	1,177	50	1,161	51	1,132	52	1,095	54	1,047	928	837
	High	4	1,970	40	1,874	42	1,757	45	1,667	48	1,566	51	1,431	1,334	1,182
GMH95	Med	3.5	1,713	46	1,650	48	1,572	50	1,510	52	1,418	56	1,313	1,211	1,079
0904CXA	Med-Lo	3	1,439	55	1,412	56	1,370	58	1,327	60	1,260	63	1,166	1,078	956
	Low	2.5	1,183	67	1,155	69	1,122	71	1,108	72	1,062	75	1,011	931	816
	High	5	2,147	37	2,114	37	2,057	39	2,030	39	1,978	40	1,889	1,784	1,713
GMH95	Med	4	1,675	47	1,686	47	1,640	48	1,623	49	1,557	51	1,501	1,455	1,360
0905CXA	Med-Lo	3.5	1,489	53	1,470	54	1,436	55	1,409	56	1,361	58	1,318	1,243	1,130
	Low	3	1,307	61	1,265	63	1,234	64	1,203	66	1,168	68	1,096	1,053	991
	High	5	2,134	46	2,103	47	2,029	48	1,941	51	1,906	51	1,818	1,733	1,625
GMH95	Med	4	1,678	58	1,643	60	1,643	60	1,577	62	1,527	64	1,489	1,423	1,339
1155DXA	Med-Lo	3.5	1,453	68	1,440	68	1,426	69	1,363	72	1,349	73	1,314	1,253	1,205
	Low	3	1,259	78	1,239	79	1,220	80	1,181	83	1,159	85	1,118	1,082	1,015

<sup>1 @0.5&</sup>quot; ESP

- CFM in chart is without filter(s). Filters do not ship with this furnace, but must be provided by the installer.
- All furnaces ship as high-speed cooling and medium-speed heating. Installer must adjust blower cooling & heating speed as needed.
- For most applications, about 400 CFM per ton when cooling is desirable.
- INSTALLATION IS TO BE ADJUSTED TO OBTAIN TEMPERATURE RISE WITHIN THE RANGE SPECIFIED ON THE RATING PLATE.
- The chart is for information only. For satisfactory operation, external static pressure should not exceed value shown on the rating plate.
- The above chart is for furnaces installed at 0-2000 feet. At higher altitudes, a properly de-rated unit will have approximately the same temperature rise at a particular CFM, while ESP at the CFM will be lower.

## GCH95 Airflow Data


#### (CFM & TEMPERATURE RISE VS. EXTERNAL STATIC PRESSURE)

						Ехте	RNAL STA	TIC PRES	SURE, (IN	CHES WA	TER COLU	лми)			
MODEL	MOTOR SPEED	TONS AC <sup>1</sup>	0.	.1	0.	.2	0.	.3	0.	.4	0.	.5	0.6	0.7	0.8
	SPEED	Α.	CFM	RISE	CFM	RISE	CFM	RISE	CFM	RISE	CFM	RISE	CFM	CFM	CFM
	High	3	1,415	28	1,352	30	1,290	31	1,196	34	1,127	36	1,035	936	825
GCH95	Med	2.5	1,221	33	1,178	34	1,127	36	1,073	38	1,007	40	932	834	733
0453BX	Med-Lo	2	1,034	39	1,000	40	976	41	935	43	881	46	818	733	662
	Low	1.5	860	47	845	48	812	50	783	51	740	54	682	619	534
	High	3	1,431	42	1,368	44	1,296	47	1,228	49	1,150	53	1,055	962	860
GCH95	Med	2.5	1,212	50	1,182	51	1,138	53	1,091	55	1,019	59	944	871	769
0703BX	Med-Lo	2	1,002	60	978	62	956	63	921	66	878	69	825	738	647
	Low	1.5	813	74	805	75	790	76	759	80	726	83	689	644	605
GCH95	High	4	1,755	34	1,674	36	1,632	37	1,510	40	1,423	42	1,325	1,241	1,116
	Med	3.5	1,656	36	1,585	38	1,536	39	1,429	42	1,355	45	1,268	1,145	1,059
0704CX	Med-Lo	3	1,551	39	1,488	41	1,427	42	1,353	45	1,290	47	1,195	1,100	1,017
	Low	2.5	1,286	47	1,258	48	1,241	49	1,185	51	1,112	54	1,067	983	886
	High	4	1,734	46	1,652	49	1,578	51	1,508	53	1,413	57	1,336	1,248	1,154
GCH95	Med	3.5	1,642	49	1,558	52	1,487	54	1,418	57	1,336	60	1,243	1,164	1,039
0904CX	Med-Lo	3	1,522	53	1,458	55	1,396	58	1,321	61	1,253	64	1,182	1,101	986
	Low	2.5	1,287	63	1,244	65	1,184	68	1,148	70	1,098	73	1,034	953	849
	High	5	2,189	37	2,109	38	2,025	40	1,948	41	1,862	43	1,757	1,644	1,537
GCH95	Med	4	1,885	43	1,831	44	1,776	45	1,711	47	1,637	49	1,539	1,453	1,346
0905DX	Med-Lo	3.5	1,665	48	1,627	50	1,584	51	1,524	53	1,462	55	1,400	1,323	1,220
	Low	3	1,474	55	1,440	65	1,401	57	1,356	59	1,310	61	1,255	1,193	1,109
	High	5	2,134	46	2,103	47	2,029	48	1,941	51	1,906	51	1,818	1,733	1,625
GCH9	Med	4	1,678	58	1,643	60	1,643	60	1,577	62	1,527	64	1,489	1,423	1,339
1155DX	Med-Lo	3.5	1,453	68	1,440	68	1,426	69	1,363	72	1,349	73	1,314	1,253	1,205
	Low	3	1,259	78	1,239	79	1,220	80	1,181	83	1,159	85	1,118	1,082	1,015

<sup>&</sup>lt;sup>1</sup> @0.5" ESP

- CFM in chart is without filter(s). Filters do not ship with this furnace, but must be provided by the installer. If the furnace requires two return filters, this chart assumes both filters are installed.
- All furnaces ship as high-speed cooling and medium-speed heating. Installer must adjust blower cooling and heating speed as needed.
- For most jobs, about 400 CFM per ton when cooling is desirable.
- INSTALLATION IS TO BE ADJUSTED TO OBTAIN TEMPERATURE RISE WITHIN THE RANGE SPECIFIED ON THE RATING PLATE.
- This chart is for information only. For satisfactory operation, external static pressure should not exceed value shown on the rating plate.
- The above chart is for U.S. furnaces installed at 0-2000 feet. At higher altitudes, a properly derated unit will have approximately the same temperature rise at a particular CFM, while ESP at the CFM will be lower.

## Wiring Diagram — GMH95

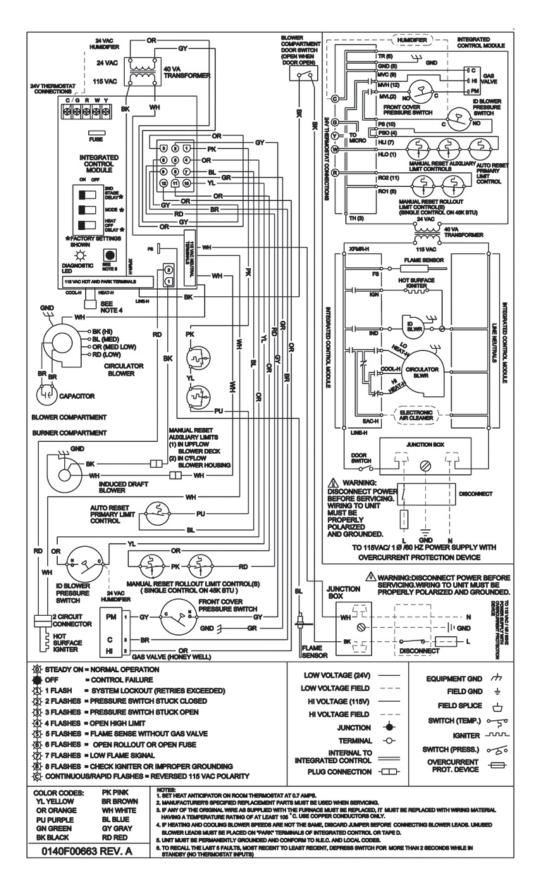


power death. injury, or Multiple all power before servicing or installing this unit. Failure to do so may cause property damage, personal be present. Disconnect High Voltage: D sources may k

WARNING

Wiring is subject to change. Always refer to the wiring diagram or the unit for the most up-to-date wiring.

## WIRING DIAGRAM — GCH95 / GMH950905C\*

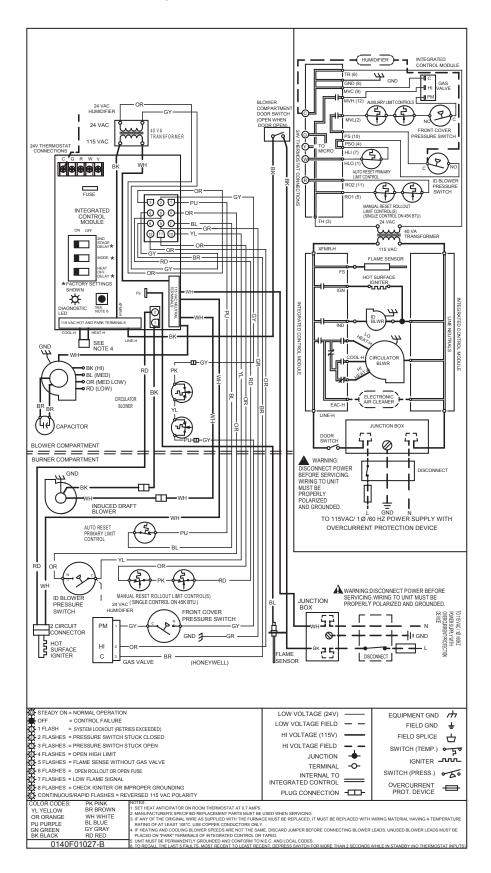

power death. injury, or installing this unit. Multiple all power before servicing or installing this unit. Failure to do so may cause property damage, personal Disconnect a High Voltage: D sources may k

WARNING

## Accessories — GMH95

Accessory	DESCRIPTION	GMH95 0453BXA	GMH95 0703BXA	GMH95 0704CXA	GMH95 0904CXA	GMH95 0905CXA	GMH95 1155DXA
LPM-06	LP Conversion Kit (Springs & Orifice)*	٧	٧	٧	٧	V	٧
LPLP03	LP Gas Low-Pressure Kit	٧	٧	٧	٧	٧	٧
GSAS	Electronic Air Cleaners (-10, -11, -12, -18)	٧	٧	٧	٧	٧	٧
GMU	Media Air Cleaners (1620, 2020, 1625, 2025)	٧	٧	٧	٧	V	٧
HANG11	High Altitude Natural Gas Kit	1	1	1	1	1	1
HANG12	High Altitude Natural Gas Kit	2	2	2	2	2	2
HALP10	High Altitude LP Gas Kit	3	3	3	3	3	3
HAPS27	High Altitude Pressure Switch Kit	3	3	3	3	3	3
FTK04	Twinning Kit	٧	٧	٧	٧	V	٧
EFR01	External Filter Rack	٧	٧	٧	٧	V	٧
DCVK-20	Horizontal/Vertical Concentric Vent Kit (2")	٧	٧				
DCVK-30	Horizontal/Vertical Concentric Vent Kit (3")	٧	٧	٧	٧	V	٧
0170K00000S	Flush-mount Vent Kit	٧	٧	٧	٧	V	٧

<sup>\*</sup> White-Rodgers and Honeywell valves

- All installations above 7,000' require a pressure switch change. For installation in Canada, furnaces are certified only to 4,500'.
- Downflow Floor base: When the GCH9 model is installed directly on a wood floor, a downflow floor base must be used. Those model numbers are: CFB17, CFB21 and CFB24.

<sup>√</sup> Indicates accessories available for this model

<sup>1</sup> Indicates 7,001' to 9,000' altitude

<sup>2</sup> Indicates 9,001' to 11,000' altitude

<sup>3</sup> Indicates 7,001' to 11,000' altitude

## Accessories — GCH95

Accessory	DESCRIPTION	GCH95 0453BXA	GCH95 0703BXA	GCH95 0704CXA	GCH95 0904CXA	GCH95 0905CXA	GCH9 1155DXA
LPM-06	LP Conversion Kit (Springs & Orifice)*	٧	٧	٧	٧	٧	٧
LPLP03	LP Gas Low-Pressure Kit						٧
GSAS	Electronic Air Cleaners (-10, -11, -12, -18)	٧	٧	٧	٧	٧	٧
GMU	Media Air Cleaners (1620, 2020, 1625, 2025)	٧	٧	٧	٧	٧	٧
HANG11	High Altitude Natural Gas Kit	1	1	1	1	1	1
HANG12	High Altitude Natural Gas Kit	2	2	2	2	2	2
HALP10	High Altitude LP Gas Kit	3	3	3	3	3	3
HAPS27	High Altitude Pressure Switch Kit	3	3	3	3	3	3
EFR01	External Filter Rack	٧	٧	٧	٧	٧	٧
DCVK-20	Horizontal/Vertical Concentric Vent Kit (2")	٧	٧				
DCVK-30	Horizontal/Vertical Concentric Vent Kit (3")	٧	٧	٧	٧	٧	٧
0170K00000S	Flush-mount Vent Kit	٧	٧	٧	٧	٧	√

<sup>\*</sup> White-Rodgers and Honeywell valves

#### Notes

- All installations above 7,000' require a pressure switch change. For installation in Canada, furnaces are certified only to 4,500'.
- Downflow Floor base: When the GCH9 model is installed directly on a wood floor, a downflow floor base must be used. Those model numbers are: CFB17, CFB21 and CFB24.

V Indicates accessories available for this model

<sup>1</sup> Indicates 7,001' to 9,000' altitude

<sup>2</sup> Indicates 9,001' to 11,000' altitude

<sup>3</sup> Indicates 7,001' to 11,000' altitude