

# Zio™ LCD Wall Modules

## TR70 AND TR70-H with Sylk™ bus

### SPECIFICATION DATA



## GENERAL

The TR70 and TR70-H are 2-wire, non-polarity sensitive, Sylk bus communicating wall modules for use with Spyder™ (PUL6438S, PVL6436AS, and PVL6438NS models only) and ComfortPoint™ (CP-UL6438S, CP-VL6436AS, and CP-VL6438NS models only) programmable controllers.

All models have a space-temperature sensor, network bus jack, and an LCD panel with three softkeys and two Up/Down adjustment keys. The TR70-H model includes an onboard humidity sensor.

**NOTE:** Refer to the *Zio™ LCD Wall Modules TR70 and TR70-H with Sylk™ bus – Operating Guide* (form 63-2667) for information about customizing the wall module configuration, such as modifying the default Home screens or creating your own application.

## FEATURES

The TR70 and TR70-H wall modules include:

- Ability to control user access to controller parameters.
- Customized parameter access, by using the Tridium Niagara Workbench tool.

- Programmable for: Home screen options, tenant access, contractor access, access to controller parameters, setpoint, override, fan, and other parameters.
- Eight pre-programmed configurations (e.g. VAV with balancing) in the wall module configuration tool.
- Ability to access and adjust most parameters in the programmable controller (except Scheduling).
- Ability to balance the VAV system from the wall module.
- Home screen can display one to three of any of the following parameters: Temperature Setpoint, Room Temperature, Room Humidity, Outdoor Humidity, Outdoor Temperature, and Time, or one of virtually any parameter in the controller.
- Network bus jack.
- Simple 2-wire terminal connection to the programmable controller and an optional 2-wire terminal connection for the network. All connections are polarity insensitive.
- Retention of user configuration, including setpoints after a power outage.

## SPECIFICATIONS

**Construction:** Two-piece construction, cover and internally wired subbase. Field wiring, 18 to 24 AWG (0.82 to 0.20 sq. mm), connects to a terminal block in the subbase.

**Mounting Options:** The LCD wall modules can be mounted on a standard two by four inch junction box or on a 60 mm diameter junction box. The modules may be mounted up to 200 ft. (61 m) from the programmable controller. Twisted pair wiring is recommended for distances longer than 100 ft. (30.5 m).


**Dimensions (H/W/D):** See Fig. 2 on page 2.

**Environmental Ratings:**

Operating Temperature: 30°F to 110°F (-1°C to 43°C)  
Shipping Temperature: -40°F to 150°F (-40°C to 65.5°C)  
Relative Humidity: 5% to 95% non-condensing

**Temperature Setpoint Range:** Default range is 55°F to 85°F (10°C to 35°C); configurable for other ranges.

**Temperature Sensor Accuracy:** ±0.36°F at 77°F (±0.2°C at 25°C)

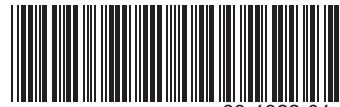

63-1322-01

**Humidity Sensor Accuracy (TR70-H only):**  $\pm 5\%$  RH from 20% to 80% RH


**Power:** 18 Vdc power is supplied to the wall module from the 2-wire S-BUS connection to the programmable controller.

**Accessories:** 50007298-001 (pack of 12) medium, cover plate; 6-7/8 x 5 in. (175 x 127 mm).

**Approvals:** CE; UL94-HB plastic enclosure; FCC Part 15, Class B

## Terminal Wiring Location

Fig. 1 illustrates the location of the terminal block and other features on the TR70 and TR70-H wall modules.

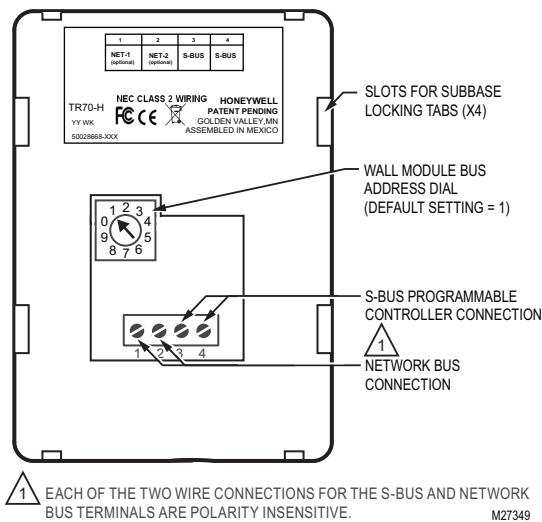


**Fig. 1. LCD wall module components (rear view of TR70).**

### NOTES:

1. 18 Vdc power for the LCD wall modules is supplied from the programmable controller.
2. Each of the 2-wire connections for the network bus and S-BUS are polarity insensitive.

## Module Dimensions

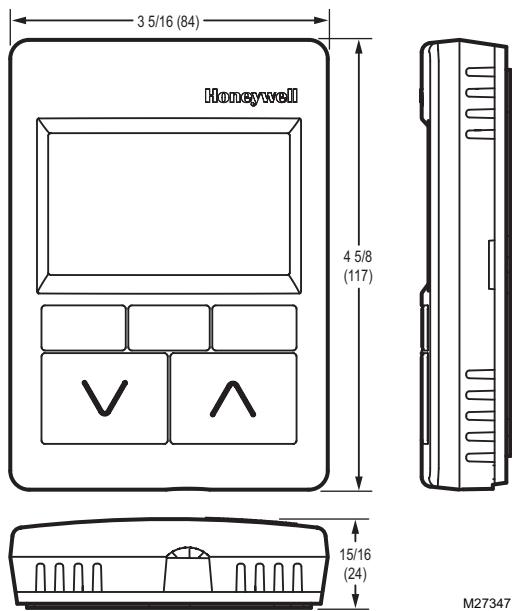

**Fig. 2. Wall module dimensions in inches (mm).**

## Communications

The wall modules use a sensor bus (S-BUS) for communications with the programmable controller.

For network communication, the building's LON network wires connect to the two terminals (NET-1 and NET-2). See Fig. 1. A network bus port is accessible at the bottom of the wall module by removing the jack plug.

The network bus and S-BUS terminals (see Fig. 1) are insensitive to polarity, minimizing installation errors due to mis-wiring. The recommended wire size for the network bus and S-BUS is Level IV, 22 AWG (0.33 sq. mm) plenum or non-plenum rated, unshielded, twisted pair, solid conductor wire.

## LCD Display

The LCD display may be customized for tenant and contractor users. The following are a few samples of the various Home screens that are configurable for the LCD Wall Modules. Not all possible Home screens are illustrated here. There are many other configurable Home screens.


### NOTES:

1. Home screens can display one to three of any of the following parameters: Temperature Setpoint, Room Temperature, Room Humidity, Outdoor Humidity, Outdoor Temperature, and Time, or one of virtually any parameter in the controller.
2. Refer to the *Zio™ LCD Wall Modules TR70 and TR70-H with Sylk™ bus – Operating Guide* (form 63-2667) for information about customizing the wall module configuration, such as modifying the default Home screens or creating your own application.


## Sample Tenant LCD Displays

The Fan and Occupied settings are optional for Home screen setup. If there are no parameters configured for Tenant access, the "View More" softkey does not display on the Tenant Home screen.


The following are a few samples of the various Home screens that are configurable for the LCD Wall Modules. Not all possible Home screens are illustrated here. There are many other configurable Home screens.

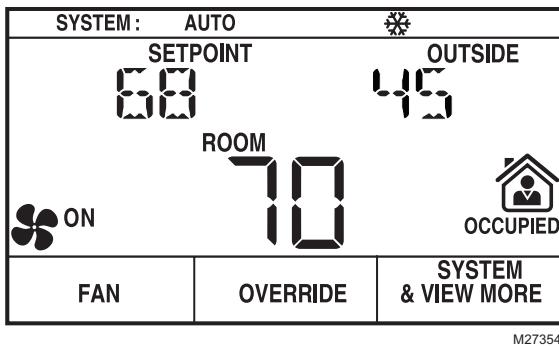


**Fig. 3. Sample Tenant Home screen with System Status, Setpoint, Outside Temperature, and Room Temperature (predominant).**

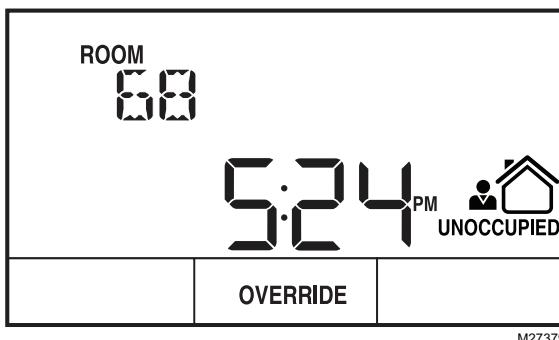

**Fig. 4. Sample Tenant Home screen with Room Temperature and Time (predominant).**

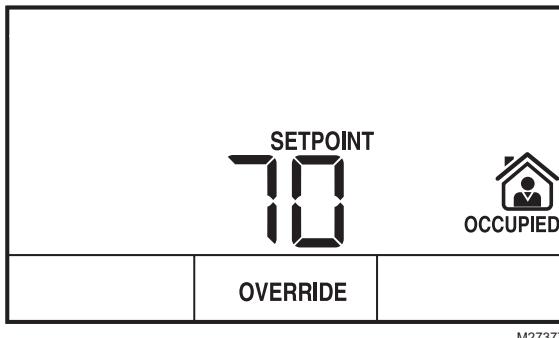

**Fig. 5. Sample Tenant Home screen with Setpoint display only.**

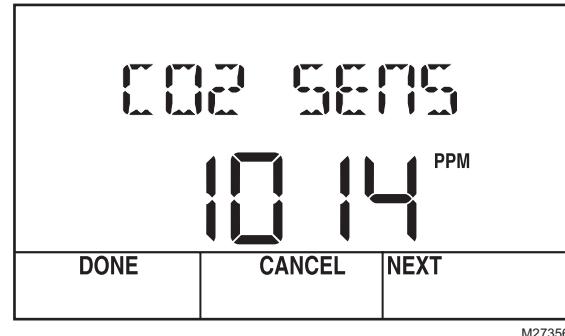


**Fig. 6. Sample Tenant "View More" display showing CO<sub>2</sub> sensor value from controller.**

NOTE: Any configured parameter may be displayed.

## Sample Contractor LCD Displays

The Contactor mode allows advanced options using the softkeys. Contractor mode also allows for customizing the Tenant view, including setting the tenant's Home screen and "View More" access.

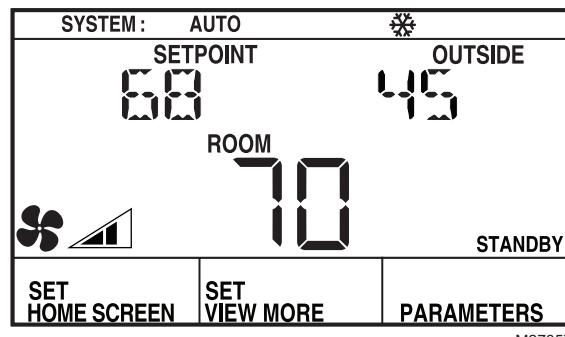

**Fig. 7. Sample Contractor Home screen display with System Status, Setpoint, Outside Temperature, and Room Temperature (predominant).**


### CONTACTOR HOME SCREEN SOFTKEYS

The three softkeys on the Contractor Home screen (Fig. 7) provide the following:


SET HOME SCREEN - allows the contractor to choose among multiple Home screen options for the tenant.

SET VIEW MORE - allows the contractor to give additional parameter access (view only or adjustable) to the tenant.

PARAMETERS - allows the contractor to monitor and/or adjust parameters in the programmable controller.

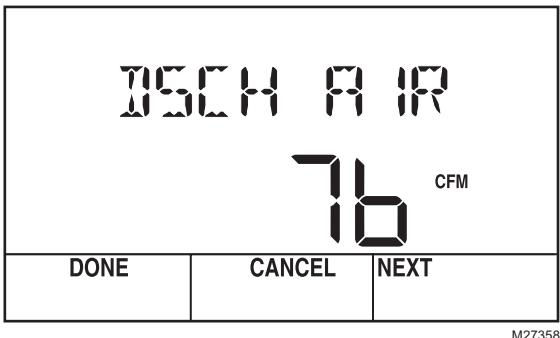

**Fig. 8. Sample Contractor parameter display showing user-created discharge air parameter value.**

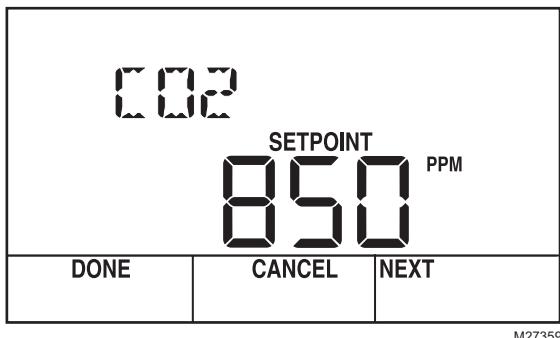

**Fig. 9. Sample Contractor parameter display showing sensor setpoint value (CO<sub>2</sub> sensor from controller).**

NOTE: Any configured parameter may be displayed.

## TYPICAL SPECIFICATION

1. The wall module shall have an LCD display.
2. The wall module shall have a customizable home screen:
  - a. Shall have the option to show up to 3 parameter values on a single display.
  - b. Shall have the option to show occupied status.
  - c. Shall have the option to show system status.
  - d. Shall have the option to show fan status.
  - e. Shall have the option to show up to three of the following parameters:
    - (a) room temperature, setpoint, outside temperature, room humidity, outside humidity, time of day.
  - f. Shall have the option to show on the home screen any single parameter in the controller, with a user defined 8 letter name.
3. The wall module shall offer access to all parameters necessary to balance a VAV system.
4. The wall module shall offer the ability to restrict access to parameter information with keypad enabled lock out.
5. The wall module shall retain user configuration including setpoints after power outage.
6. The wall module shall use a two wire polarity insensitive connection for all communication and power needs.
7. The wall module shall offer the ability to access and adjust user chosen controller parameters.
8. The wall module shall offer the ability for the tenant to adjust override time period within the limits set by the contractor.
9. The wall module shall offer a communication jack for remote access to the network.
10. The wall module shall offer a ± 5% on board humidity sensor (TR70-H only).
11. The wall module shall be configured through the Tridium Niagara workbench tool.
12. The wall module shall communicate with other devices using the Sylk bus protocol.

ComfortPoint™ is a trademark of Honeywell International Inc.

LONMARK® is a trademark of the LonMark Association.

Spyder™ is a trademark of Honeywell International Inc.

Sylk™ is a trademark of Honeywell International Inc.

Zio™ is a trademark of Honeywell International Inc.

### Automation and Control Solutions

Honeywell International Inc.

1985 Douglas Drive North

Golden Valley, MN 55422

[customer.honeywell.com](http://customer.honeywell.com)

Honeywell Limited-Honeywell Limitée

35 Dynamic Drive

Toronto, Ontario M1V 4Z9

**Honeywell**

