

Required tools for Installation Works

- 1 Philips screw driver
2 Level gauge
3 Electric drill, hole core drill (ø2 3/4")
4 Hexagonal wrench (1/16")
5 Spanner
6 Pipe cutter
7 Reamer
8 Knife
9 Gas leak detector
10 Measuring tape
11 Thermometer
12 Megameter
13 Millimeter
14 Torque wrench
15 Vacuum pump
16 Gauge manifold

SAFETY PRECAUTIONS

- Read the following "SAFETY PRECAUTIONS" carefully before installation.
Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model to be installed.
The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below.

WARNING symbols and descriptions: This indication shows the possibility of causing death or serious injury. This indication shows the possibility of causing injury or damage to properties only. Symbol with white background denotes item that is PROHIBITED. Symbol with dark background denotes item that must be carried out.

- Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

WARNING section with multiple icons and text: Do not install outdoor unit near handrail of veranda... Do not use unspecified cord, modified cord... Do not tie up the power supply cord... Do not insert your fingers or other objects into the unit... Do not sit or step on the unit... Keep plastic bag away from children... When installing or relocating air conditioner, do not let any substance other than the specified refrigerant, eg. air etc. mix into refrigeration cycle... Do not add or replace refrigerant other than specified type... For R410A model, use piping, flare nut and tools which is specified for R410A refrigerant... Engage authorized dealer or specialist for installation... Install according to this installation instructions strictly... Use the attached accessories parts and specified parts for installation... Install at a strong and firm location which is able to withstand the set's weight... For installation work, follow all electrical, building, plumbing, local codes, regulations and these installation instructions... Do not use electrical wires for indoor/outdoor connection cable... Wire routing must be properly arranged so that control board cover is fixed properly... This equipment must be properly earthed with an Earth Leakage Circuit Breaker (ELCB) or Ground Fault Current Interrupter (GFCI) or Appliance Leakage Current Interrupter (ALCI) that has been certified by an NRTL... During installation, install the refrigerant piping properly before running the compressor... During pump down operation, stop the compressor before removing the refrigeration piping... Tighten the flare nut with torque wrench according to specified method... After completion of installation, confirm there is no leakage of refrigerant gas... Ventilate if there is refrigerant gas leakage during operation... This equipment must be properly earthed... Do not install the unit at place where leakage of flammable gas may occur... Do not release refrigerant during piping work... Do not install this appliance in a laundry room or other location where water may drip from the ceiling... Do not touch the sharp aluminium fin, sharp parts may cause injury... Carry out drainage piping as mentioned in installation instructions... Select an installation location which is easy for maintenance... Power supply connection to the room air conditioner... Fix power supply connection to a circuit breaker for the permanent connection... Installation work... It may take two people to carry out the installation work.

CAUTION section with icons and text: Do not install the unit at place where leakage of flammable gas may occur... Do not release refrigerant during piping work... Do not install this appliance in a laundry room or other location where water may drip from the ceiling... Do not touch the sharp aluminium fin, sharp parts may cause injury... Carry out drainage piping as mentioned in installation instructions... Select an installation location which is easy for maintenance... Power supply connection to the room air conditioner... Fix power supply connection to a circuit breaker for the permanent connection... Installation work... It may take two people to carry out the installation work.

Attached accessories table with columns: No., Accessories part, Qty., No., Accessories part, Qty.

Indoor/Outdoor Unit Installation Diagram showing unit placement, piping directions, and terminal board connection details.

Indoor Unit section with sub-sections: Select the best location (avoiding heat sources, windows, etc.), Installation of piping connections (using vinyl tape), Attaching the remote control holder to the wall, and Outdoor Unit section (avoiding sunlight, rain, etc.).


Table with columns: Model, Capacity (Btu/h), Piping size, Std. Length (ft), Min. Piping Length (ft), Max. Piping Length (ft), Max. Additional Refrigerant (oz/ft), Piping for add. gas (ft). Models include S18NKU-1 and S22NKU-1.

Example: For S18NKU-1 If the unit is installed at 41 ft distance, the quantity of additional refrigerant should be 1.64 oz... (41 - 32.8) ft x 0.2 oz/ft = 1.64 oz.

INDOOR UNIT

1 SELECT THE BEST LOCATION (Refer to "Select the best location" section)

2 HOW TO FIX INSTALLATION PLATE

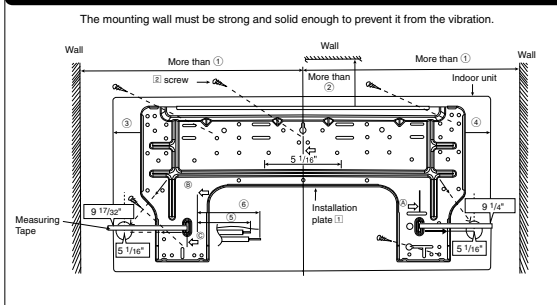


Dimension table for installation plate with columns: Model (S18NKU-1, S22NKU-1) and dimensions 1-6 in inches.


The center of installation plate should be at more than ① at right and left of the wall. The distance from installation plate edge to ceiling should be more than ②.

- 1. Mount the installation plate on the wall with 5 screws or more (at least 5 screws). (If mounting the unit on the concrete wall, consider using anchor bolts.)
2. Drill the piping plate hole with ø2 3/4" hole-core drill.
Line according to the left and right side of the installation plate. The meeting point of the extended line is the center of the hole. Another method is by putting measuring tape at position as shown in the diagram above. The hole center is obtained by measuring the distance namely 5 1/16" for left and right hole respectively.
Drill the piping hole at either the right or the left and the hole should be slightly slanting to the outdoor side.

3 TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

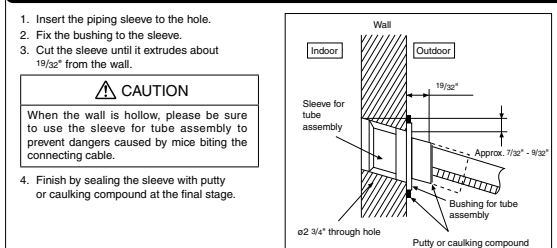

5 CONNECT THE CABLE TO THE INDOOR UNIT

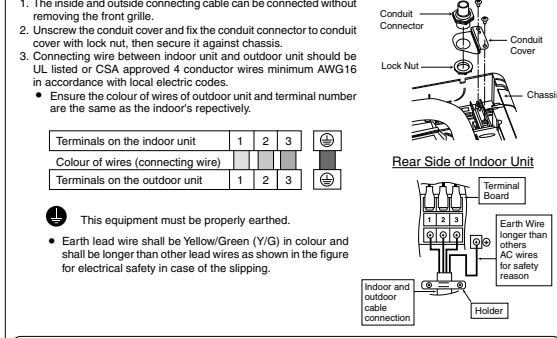


WIRE STRIPPING AND CONNECTING REQUIREMENT section with diagrams showing correct and incorrect wire stripping methods for indoor/outdoor connecting terminal board.

CUTTING AND FLARING THE PIPING

- 1. Please cut using pipe cutter and then remove the burrs.
2. Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused. Turn the piping end down to avoid the metal powder entering the pipe.
3. Please make flare after inserting the flare nut onto the copper pipes.

4 INDOOR UNIT INSTALLATION

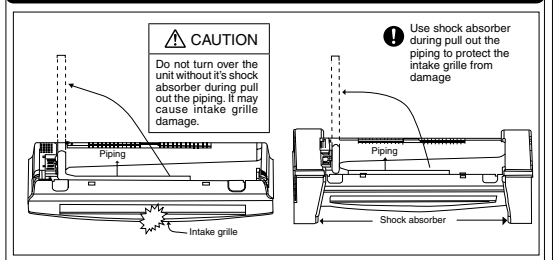

- 1. FOR THE RIGHT REAR PIPING
Step-1 Pull out the Indoor piping
Step-2 Install the Indoor Unit
Step-3 Secure the Indoor Unit
Step-4 Insert the connecting cable

- 2. FOR THE RIGHT BOTTOM PIPING
Step-1 Pull out the Indoor piping
Step-2 Install the Indoor Unit
Step-3 Insert the connecting cable
Step-4 Secure the Indoor Unit

- 3. FOR THE EMBEDDED PIPING
Step-1 Replace the drain hose
Step-2 Bend the embedded piping
Step-3 Pull the connecting cable into Indoor Unit
Step-4 Cut and flare the embedded piping
Step-5 Install the Indoor Unit
Step-6 Connecting the piping
Step-7 Insulate and finish the piping
Step-8 Secure the Indoor Unit

- 4. HOW TO TAKE OUT FRONT GRILLE
Please follow the steps below to take out front grille if necessary such as when servicing.
1. Set the vertical airflow direction louvers to the horizontal position.
2. Slide down the 2 caps on the front grille as shown in the illustration at right, and then remove the 2 mounting screws.
3. Pull the lower section of the front grille towards you to remove the front grille.

When reinstalling the front grille, first set the vertical airflow direction louvers to the horizontal position and then carry out above steps 2 - 3 in the reverse order.

INSTALLATION OF AIR PURIFYING FILTER section with diagrams showing filter placement and how to take out the front grille.

AUTO SWITCH OPERATION section with text: The below operations will be performed by pressing the "AUTO" switch. 1. AUTO OPERATION MODE. The Auto operation will be activated immediately once the Auto Switch is pressed and release below 5 sec... 2. TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE) The Test Run operation will be activated if the Auto Switch is pressed continuously for more than 5 sec... 3. REMOTE CONTROLLER RECEIVING SOUND ON/OFF The ON/OFF of Remote controller receiving sound can be change over by the following steps: a) Press AUTO switch continuously until "pep pep pep" sound is heard (about 16 sec)... b) Release the Auto switch button... c) Press the remote controller "AC RESET" button once, "pep" sound will occur... d) Press Auto switch again. Every time Auto switch is pressed (within 60 sec. interval), the remote controller receiving sound status will be reversed between ON and OFF. Long "pep" sound indicates that remote controller receiving sound is ON. Short "pep" sound indicates that remote controller receiving sound is OFF.

When reinstalling the front grille, first set the vertical airflow direction louvers to the horizontal position and then carry out above steps 2 - 3 in the reverse order.

OUTDOOR UNIT

1 SELECT THE BEST LOCATION (Refer to "Select the best location" section)

2 INSTALL THE OUTDOOR UNIT

- After selecting the best location, start installation to Indoor/Outdoor Unit Installation Diagram.
1. Fix the unit on concrete or rigid frame firmly and horizontally by bolt nut (ø13/32").
2. When installing at roof, please consider strong wind and earthquake. Please fasten the installation stand firmly with bolt or nails.


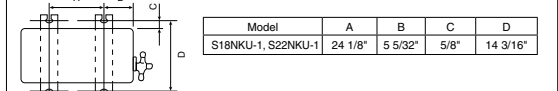



Table with columns: Model (S18NKU-1, S22NKU-1) and dimensions A, B, C, D in inches.

5 CONNECT THE CABLE TO THE OUTDOOR UNIT

- 1. Remove control board cover (Resin and Metal).
2. Remove particular plate.
3. Remove plugs.
4. Fix the conduit connectors to the knockout holes with lock-nuts, then secure them against the side panel.
5. All wires pass through conduits & particular plate's opening hole.
6. Connecting wire between indoor unit and outdoor unit should be UL listed or CSA approved 4 conductor wires minimum AWG16 in accordance with local electric codes.
7. Wire connection to the power supply (208/230V 60Hz) through circuit breaker.
Connect the UL listed or CSA approved wires minimum AWG12 to the terminal board, and connect the other end of the wires to ELCB / GFCI.
Connect the power supply cord and connecting wire between indoor unit and outdoor unit according to the diagram below.
9. Secure the wire onto the control board with the holder (clammer).
10. After completing wiring connections, reattach the particular plate and control board cover (metal and resin) to the original position with the screws.
11. For wire stripping and connection reference, refer to instruction ⑤ of indoor unit.

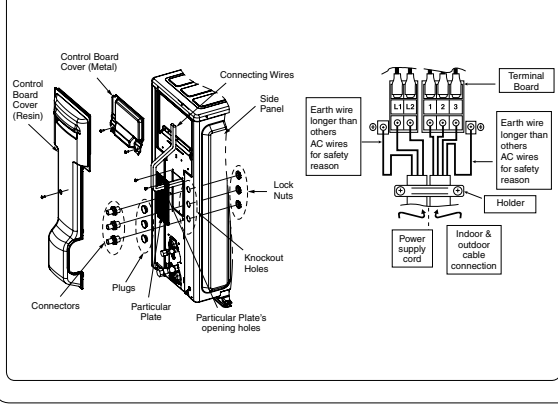

INSTALLATION OF AIR PURIFYING FILTER

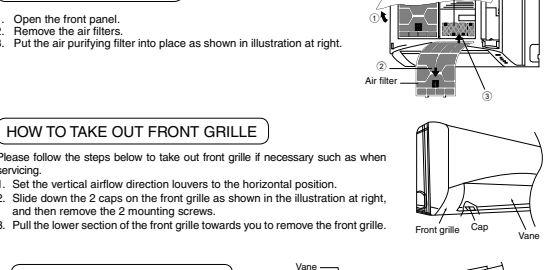

When reinstalling the front grille, first set the vertical airflow direction louvers to the horizontal position and then carry out above steps 2 - 3 in the reverse order.

AUTO SWITCH OPERATION


CHECK ITEMS section with checkboxes for gas leakage, insulation, abnormal sounds, cooling operation, thermostat operation, remote control LCD operation, and air purifying filter installation.

3 CONNECT THE PIPING

Connecting The Piping to Indoor and Outdoor sections. Includes instructions on flare nut placement and torque values for different piping sizes (1/4", 3/8", 1/2", 5/8", 3/4").

Gas Leak Checking section with text: Pressure test to system to 400 PSIG with dry nitrogen, in stages. Thoroughly leak check the system. If the pressure holds, release the nitrogen and proceed to section 4.

4 EVACUATION OF THE EQUIPMENT

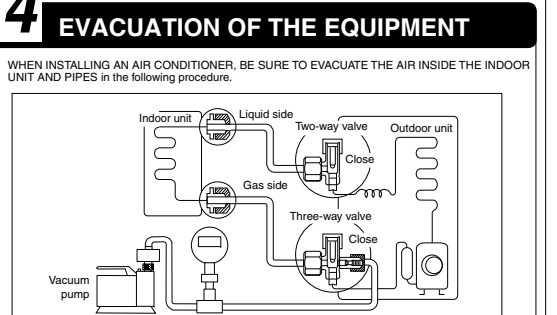

- 1. Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve.
2. Connect the micron gauge between vacuum pump and service port of outdoor units.
3. Turn on the power switch of the vacuum pump and make sure that connect digital micron gauge and to pull down to a value of 500 microns.
4. To make sure micron gauge a value 500 microns and close the low side valve of the charging set and turn off the vacuum pump.
5. Disconnect the vacuum pump hose from the service port of the 3-way valve.
6. Tighten the service port caps of the 3-way valve at a torque of 13.3 lbf.ft with a torque wrench.
7. Remove the valve caps on both the 2-way valve and 3-way valve. Position both of the valves to "Open" using a hexagonal wrench (5/32").
8. Mount valve caps onto the 2-way valve and the 3-way valve.
Be sure to check for gas leakage.

CAUTION section with text: If micron gauge value does not descend 500 microns, take the following measures: - If the leak stops when the piping connections are tightened further, continue working from step ③. - If the leak does not stop when the connections are retightened, repair location of leak. - Do not release refrigerant during piping work for installation and reinstallation. - Be careful with the liquid refrigerant, it may cause frostbite.

6 PIPING INSULATION

- 1. Please carry out insulation at pipe connection portion as mentioned in Indoor/Outdoor Unit Installation Diagram. Please wrap the insulated piping end to prevent water from going inside the piping.
2. If drain hose or connecting piping is in the room (where dew may form), please increase the insulation by using POLY-E FOAM with thickness 1/4" or above.

CHECK THE DRAINAGE

- Open front panel and remove air filters. (Drainage checking can be carried out without removing the front grille.)
Pour a glass of water into the drain tray-styrofoam.
Ensure that water flows out from drain hose of the indoor unit.

EVALUATION OF THE PERFORMANCE

- Operate the unit at cooling operation mode for fifteen minutes or more.
Measure the temperature of the intake and discharge air.
Ensure the difference between the intake temperature and the discharge is more than 46.4°F.