

## Required tools for Installation Works

1 Phillips screw driver	7 Reamer	13 Multimeter	47.9 lbf.ft
2 Level gauge	8 Knife	14 Torque wrench	73.8 lbf.ft
3 Electric drill, hole core drill (ø2 3/4")	9 Gas leak detector	15 Vacuum pump	
4 Hexagonal wrench (5/16")	10 Measuring tape	16 Digital Micron Gauge	
5 Spanner	11 Thermometer		
6 Pipe cutter	12 Megameter		

## SAFETY PRECAUTIONS

- Read the following "SAFETY PRECAUTIONS" carefully before installation.
- Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model to be installed.
- The caution items stated here must be followed because they are related to safety. The meaning of each indication used is as below. Incorrect installation due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.

<b>WARNING</b>	This indication shows the possibility of causing death or serious injury.
<b>CAUTION</b>	This indication shows the possibility of causing injury or damage to properties only.

The items to be followed are classified by the symbols:

	Symbol with white background denotes item that is PROHIBITED.
	Symbol with dark background denotes item that must be carried out.

- Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to use the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

## WARNING

- Do not install outdoor unit near handrail of veranda. When installing air-conditioner unit on veranda of a high rise building, child may climb up to outdoor unit and cross over the handrail causing an accident.
- Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.
- Do not tie up the power supply cord into a bundle by band. Abnormal temperature rise on power supply cord may happen.
- Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.
- Do not sit or step on the unit, you may fall down accidentally.
- Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.
- When installing or relocating air conditioner, do not let any substance other than the specified refrigerant, eg. air etc. mix into refrigeration cycle (piping). Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.

- For R410A model, use piping, flare nut and tools which is specified for R410A refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury.
- Thickness or copper pipes used with R410A must be more than 1/32". Never use copper pipes thinner than 1/32".
- It is desirable that the amount of residual oil is less than 0.0008 oz./ft.

- Engage authorized dealer or specialist for installation. If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.
- Install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.

- Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.
- Install at a strong and firm location which is able to withstand the set's weight. If the strength is not enough or installation is not properly done, the set will drop and cause injury.
- For installation work, follow all electrical, building, plumbing, local codes, regulations and these installation instructions. If electrical circuit capacity is not enough or a defect is found in electrical work, it will cause electrical shock or fire.

- Do not use spliced wires for indoor / outdoor connection cable. Use the specified indoor / outdoor connection cable, refer to instruction ⑤ **INDOOR/OUTDOOR UNIT ELECTRICAL WIRING** and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection or fixing is not perfect, it will cause heat-up or fire at the connection.

- Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.
- This equipment must be installed with an Earth Leakage Circuit Breaker (ELCB) or Ground Fault Circuit Interrupter (GFCI) or Appliance Leakage Current Interrupter (ALCI) that has been certified by an NRTL Certified Testing Agency and that is suitable for the voltages and amperages involved. Otherwise, it may cause electrical shock and fire in case of equipment breakdown.

- During installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves at opened condition will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.

- Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.
- After completion of installation, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant comes into contact with fire.

- Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant comes into contact with fire.
- This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.

## CAUTION

- Do not install the unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.
- Do not release refrigerant during piping work for installation, re-installation and during repairing a refrigeration parts. Take care of the liquid refrigerant, it may cause frostbite.
- Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.
- Do not touch the sharp aluminium fin, sharp parts may cause injury.
- Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.
- Select an installation location which is easy for maintenance.

- Power supply connection to the room air conditioner. Power supply cord shall be UL listed or CSA approved 3 conductor with minimum AWG12 wires. Power supply point should be in an easily accessible place for power disconnection in case of emergency. In some countries, permanent connection of this air conditioner to the power supply is prohibited. Fix power supply connection to a circuit breaker for the permanent connection. Use NRTL approved fuse or circuit breaker (rating refers to name plate) for the permanent connection.

Installation work. It may take two people to carry out the installation work.

## Attached accessories

No.	Accessories part	Qty.	No.	Accessories part	Qty.
1	Installation plate	1	5	Remote control holder	1
2	Installation plate fixing screw	5	6	Remote control holder fixing screw	2
3	Remote Control	1	7	Air purifying filter	1
4	Battery	2			

Applicable piping kit	Piping size
C2-3F5, 7BP	3/8" (6.35 mm)
C2-4F5, 7, 10BP	1/2" (12.7 mm)
C2-5F5, 10BP	5/8" (15.88 mm)

## SELECT THE BEST LOCATION

## INDOOR UNIT

- Do not install the unit in excessive oil fume areas such as kitchens, workshops etc.
- There should not be any heat source or steam near the unit.
- There should not be any obstacles blocking the air circulation.
- A place where air circulation in the room is good.
- A place where drainage can be easily done.
- A place where noise prevention is taken into consideration.
- Do not install the unit near a doorway.
- Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles.
- Recommended installation height for indoor unit should be above the seasonal snow level.


## OUTDOOR UNIT

- If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed.
- There should not be any animal or plant which could be affected by hot air discharged.
- Keep the spaces indicated by arrows from wall, ceiling, fence or other obstacles.
- Do not place any obstacles which may cause a short circuit of the discharged air.
- If piping length is over the [piping length for additional gas], additional refrigerant should be added as shown in the table.
- Recommended installation height for outdoor unit should be above the seasonal snow level.

Model	Power (HP)	Piping size	Std. Length (ft)	Max. G. Length (ft)	Max. Liquid Length (ft)	Max. Piping Length (ft)	Additional Refrigerant for add (oz/ft)	Piping Length (ft)
S18NKU	2.9HP	1/2"	16.4	49.2	9.8	65.6	0.2	39.8
S22NKU	2.9HP	5/8"	16.4	49.2	9.8	65.6	0.2	32.8

Example: For S18NKU

If the unit is installed at 41 ft distance, the quantity of additional refrigerant should be 1.64 oz. ... (41 - 32.8) ft x 0.2 oz/ft = 1.64 oz.

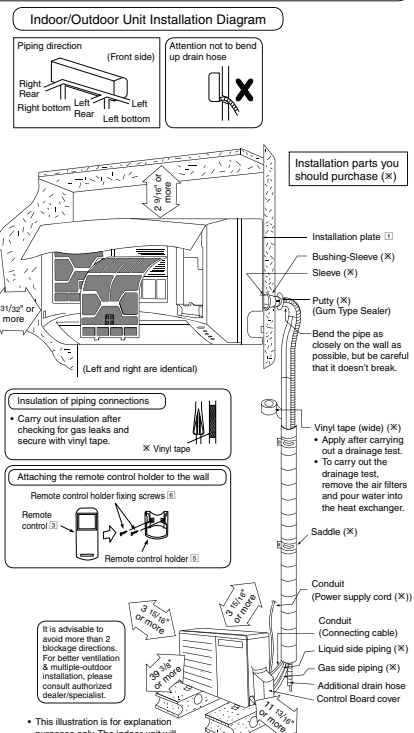


This illustration is for explanation purposes only. The indoor unit will actually face a different way.

## INDOOR UNIT

1 SELECT THE BEST LOCATION  
(Refer to "Select the best location" section)

## 2 HOW TO FIX INSTALLATION PLATE

The mounting wall must be strong and solid enough to prevent it from the vibration.

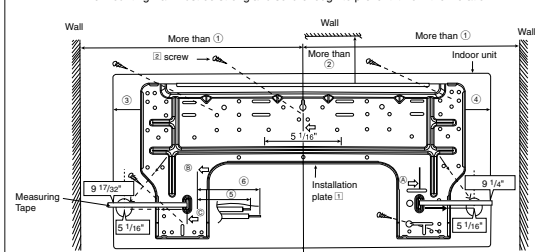

Model	①	②	③	④	⑤	⑥
S18NKU, S22NKU	23 1/32"	3 7/32"	6 1/2"	6 7/32"	6 21/32"	8 5/8"


The center of installation plate should be at more than ① at right and left of the wall. The distance from installation plate edge to ceiling should be more than ②. From installation plate left edge to unit's left side is ③. From installation plate right edge to unit's right side is ④. ⑤ : For left side piping, piping connection for liquid should be about ⑤ from this line. ⑥ : For left side piping, piping connection for gas should be about ⑥ from this line.

- Mount the installation plate on the wall with 5 screws or more (at least 5 screws). (If mounting the unit on the concrete wall, consider using anchor bolts.)
- Drill the piping plate hole with ø2 3/4" hole-core drill.
- Line according to the left and right side of the installation plate. The meeting point of the extended line is the center of the hole. Another method is by putting measuring tape at position as shown in the diagram above. The hole center is obtained by measuring the distance namely 5 1/16" for left and right hole respectively.
- Drill the piping hole at either the right or the left and the hole should be slightly slanting to the outdoor side.

## 3 TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

- Insert the piping sleeve to the hole.
- Fix the bushing to the sleeve.
- Cut the sleeve until it extrudes about 19/32" from the wall.
- Finish by sealing the sleeve with putty or caulking compound at the final stage.

When the wall is hollow, please be sure to use the sleeve for tube assembly to prevent dangers caused by mice biting the connecting cable.

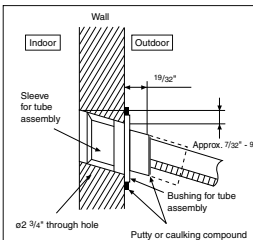

## 5 CONNECT THE CABLE TO THE INDOOR UNIT


- The inside and outside connecting cable can be connected without removing the front grille.
- Remove the conduit cover and fix the conduit connector to conduit cover with lock nut, then secure it against chassis.
- Connecting wire between indoor unit and outdoor unit should be UL listed or CSA approved 4 conductor wires minimum AWG16 in accordance with local electric codes.
- Ensure the colour of wires of outdoor unit and terminal number are the same as the indoor's respectively.

Terminals on the indoor unit	1	2	3	4
Colour of wires (connecting wire)	White	Black	Red	Blue
Terminals on the outdoor unit	1	2	3	4
Colour of wires (connecting wire)	White	Black	Red	Blue

- This equipment must be properly earthed.
- Earth lead wire shall be Yellow/Green (Y/G) in colour and shall be longer than other lead wires as shown in the figure for electrical safety in case of the slipping.




## WIRE STRIPPING AND CONNECTING REQUIREMENT

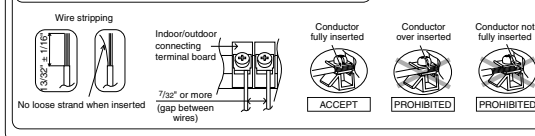


## CUTTING AND FLARING THE PIPING

- Please cut using pipe cutter and then remove the burrs.
- Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused.
- Turn the piping end down to avoid the metal powder entering the pipe.
- Please make flare after inserting the flare nut onto the copper pipes.



## 4 INDOOR UNIT INSTALLATION

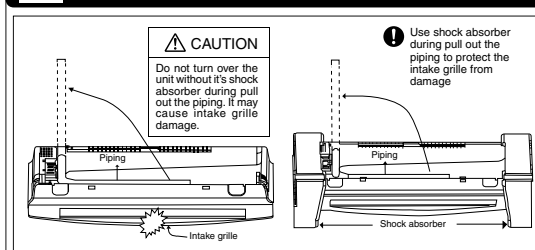

## 1. FOR THE RIGHT REAR PIPING

Step-1 Pull out the Indoor piping

Step-2 Install the Indoor Unit

Step-3 Secure the Indoor Unit

Step-4 Insert the connecting cable

Step-5 Secure the Indoor Unit

Step-6 Secure the Indoor Unit

Step-7 Secure the Indoor Unit

Step-8 Secure the Indoor Unit

Step-9 Secure the Indoor Unit

Step-10 Secure the Indoor Unit

Step-11 Secure the Indoor Unit

Step-12 Secure the Indoor Unit

Step-13 Secure the Indoor Unit

Step-14 Secure the Indoor Unit

Step-15 Secure the Indoor Unit

Step-16 Secure the Indoor Unit

Step-17 Secure the Indoor Unit

Step-18 Secure the Indoor Unit

Step-19 Secure the Indoor Unit

Step-20 Secure the Indoor Unit

Step-21 Secure the Indoor Unit

Step-22 Secure the Indoor Unit

Step-23 Secure the Indoor Unit

Step-24 Secure the Indoor Unit

Step-25 Secure the Indoor Unit

Step-26 Secure the Indoor Unit

Step-27 Secure the Indoor Unit

Step-28 Secure the Indoor Unit

Step-29 Secure the Indoor Unit

Step-30 Secure the Indoor Unit

Step-31 Secure the Indoor Unit

Step-32 Secure the Indoor Unit

Step-33 Secure the Indoor Unit

Step-34 Secure the Indoor Unit

Step-35 Secure the Indoor Unit

Step-36 Secure the Indoor Unit

Step-37 Secure the Indoor Unit

Step-38 Secure the Indoor Unit

Step-39 Secure the Indoor Unit

Step-40 Secure the Indoor Unit

Step-41 Secure the Indoor Unit

Step-42 Secure the Indoor Unit

Step-43 Secure the Indoor Unit

Step-44 Secure the Indoor Unit

Step-45 Secure the Indoor Unit

Step-46 Secure the Indoor Unit

Step-47 Secure the Indoor Unit

Step-48 Secure the Indoor Unit

Step-49 Secure the Indoor Unit

Step-50 Secure the Indoor Unit

Step-51 Secure the Indoor Unit

Step-52 Secure the Indoor Unit

Step-53 Secure the Indoor Unit

Step-54 Secure the Indoor Unit

Step-55 Secure the Indoor Unit

Step-56 Secure the Indoor Unit

Step-57 Secure the Indoor Unit

Step-58 Secure the Indoor Unit

Step-59 Secure the Indoor Unit

Step-60 Secure the Indoor Unit

Step-61 Secure the Indoor Unit

Step-62 Secure the Indoor Unit

Step-63 Secure the Indoor Unit

Step-64 Secure the Indoor Unit

Step-65 Secure the Indoor Unit

Step-66 Secure the Indoor Unit

Step-67 Secure the Indoor Unit

Step-68 Secure the Indoor Unit

Step-69 Secure the Indoor Unit

Step-70 Secure the Indoor Unit

Step-71 Secure the Indoor Unit

Step-72 Secure the Indoor Unit

Step-73 Secure the Indoor Unit

Step-74 Secure the Indoor Unit

Step-75 Secure the Indoor Unit

Step-76 Secure the Indoor Unit

Step-77 Secure the Indoor Unit

Step-78 Secure the Indoor Unit

Step-79 Secure the Indoor Unit

Step-80 Secure the Indoor Unit

## OUTDOOR UNIT

1 SELECT THE BEST LOCATION  
(Refer to "Select the best location" section)

## 2 INSTALL THE OUTDOOR UNIT

- After selecting the best location, start installation to Indoor/Outdoor Unit Installation Diagram.
- Fix the unit on concrete or rigid frame firmly and horizontally by bolt nut (ø13/32").
- When installing at roof, please consider strong wind and earthquake.
- Please fasten the installation stand firmly with bolt or nails.

Model	A	B	C	D
S18NKU, S22NKU	24 1/8"	5 9/32"	5/8"	14 3/16"

## 5 CONNECT THE CABLE TO THE OUTDOOR UNIT

- Remove control board cover (Resin and Metal).
- Remove particular plate.
- Remove plugs.
- Fix the conduit connectors to the knockout holes with lock-nuts, then secure them against the side panel.
- All wires pass through conduits & particular plate's opening hole.
- Connecting wire between indoor unit and outdoor unit should be UL listed or CSA approved 4 conductor wires minimum AWG16 in accordance with local electric codes.
- Wire connection to the power supply (208/230V 60Hz) through circuit breaker.
- Connect the UL listed or CSA approved wires minimum AWG12 to the terminal board, and connect the other end of the wires to ELCB / GFCI.
- Connect the power supply cord and connecting wire between indoor unit and outdoor unit according to the diagram below.

Terminal on the indoor unit	1	2	3	4
Colour of wires (connecting wire)	White	Black	Red	Blue
Terminal on the outdoor unit	1	2	3	4
Colour of wires (connecting wire)	White	Black	Red	Blue

(Power supply cord)

POWER SUPPLY

Secure the wire onto the control board with the holder (clammer).

After completing wiring connections, reattach the particular plate and control board cover (metal and resin) to the original position with the screws.

For wire stripping and connection requirement, refer to instruction ⑤ of indoor unit.

This equipment must be properly earthed.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.

Earth lead wire shall be Yellow/Green (Y/G) in colour and longer than other lead wires for electrical safety in case of the slipping.